GARMIN

G1000®

Integrated Flight Deck

Cockpit Reference Guide

Piper PA32

Copyright © 2004-2007 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of System Software version 0648.02 or later for the Piper PA32. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A.
Tel: 913/397.8200 Fax: 913/397.8282

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A.
Tel: 503/391.3411 Fax 503/364.2138

Garmin (Europe) Ltd., Unit 5, The Quadrangle, Abbey Park Industrial Estate, Romsey, Hampshire S051 9DL, U.K.
Tel: 44/0870.851241 Fax: 44/0870.8501251

Garmin Corporation, No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan
Tel: 886/02.2642.9199 Fax: 886/02.2642.9099

Web Site Address: www.garmin.com

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin® and G1000® are registered trademarks of Garmin Ltd. or its subsidiaries. FliteCharts™, and SafeTaxi™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

NavData® is a registered trademark of Jeppesen, Inc.; Stormscope® and SkyWatch® are registered trademarks of L-3 Communications; and XM® is a registered trademark of XM Satellite Radio, Inc.

January 2007 190-00416-01 Rev. C Printed in the U.S.A.

WARNING: *Navigation and terrain separation must NOT be predicated upon the use of the terrain function. The G1000 Terrain Proximity feature is NOT intended to be used as a primary reference for terrain avoidance and does not relieve the pilot from the responsibility of being aware of surroundings during flight. The Terrain Proximity feature is only to be used as an aid for terrain avoidance and is not certified for use in applications requiring a certified terrain awareness system. Terrain data is obtained from third party sources. Garmin is not able to independently verify the accuracy of the terrain data.*

WARNING: *The displayed minimum safe altitudes (MSAs) are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information. Always refer to current aeronautical charts for appropriate minimum clearance altitudes.*

WARNING: *The altitude calculated by G1000 GPS receivers is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters, such as the GDC 74A Air Data Computer, or other altimeters in aircraft. GPS altitude should never be used for vertical navigation. Always use pressure altitude displayed by the G1000 PFD or other pressure altimeters in aircraft.*

WARNING: *Do not use outdated database information. Databases used in the G1000 system must be updated regularly in order to ensure that the information remains current. Pilots using any outdated database do so entirely at their own risk.*

WARNING: *Do not use basemap (land and water data) information for primary navigation. Basemap data is intended only to supplement other approved navigation data sources and should be considered as an aid to enhance situational awareness.*

WARNING: *Traffic information shown on the G1000 Multi Function Display is provided as an aid in visually acquiring traffic. Pilots must maneuver the aircraft based only upon ATC guidance or positive visual acquisition of conflicting traffic.*

WARNING: *Use of the Stormscope is not intended for hazardous weather penetration (thunderstorm penetration). Stormscope information, as displayed on the G1000 MFD, is to be used only for weather avoidance, not penetration.*

WARNING: *GDL 69 Weather should not be used for hazardous weather penetration. Weather information provided by the GDL 69 is approved only for weather avoidance, not penetration.*

WARNING: *NEXRAD weather data is to be used for long-range planning purposes only. Due to inherent delays in data transmission and the relative age of the data, NEXRAD weather data should not be used for short-range weather avoidance.*

WARNING: *The Garmin G1000, as installed in the Piper PA32 aircraft, has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable system failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by the G1000. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.*

WARNING: *For safety reasons, G1000 operational procedures must be learned on the ground.*

WARNING: *The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the Garmin G1000 utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDs, information presented by the G1000 can be misused or misinterpreted and, therefore, become unsafe.*

WARNING: *To reduce the risk of unsafe operation, carefully review and understand all aspects of the G1000 Pilot's Guide documentation and the Piper PA32 Pilot's Operating Handbook (POH). Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from the G1000 to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.*

WARNING: *The illustrations in this guide are only examples. Never use the G1000 to attempt to penetrate a thunderstorm. Both the FAA Advisory Circular, Subject: Thunderstorms, and the Airman's Information Manual (AIM) recommend avoiding "by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo."*

CAUTION: *The GDU 1040A PFDs and GDU 1500 MFD displays use a lens coated with a special anti-reflective coating that is very sensitive to skin oils, waxes, and abrasive cleaners. CLEANERS CONTAINING AMMONIA WILL HARM THE ANTI-REFLECTIVE COATING. It is very important to clean the lens using a clean, lint-free cloth and an eyeglass lens cleaner that is specified as safe for anti-reflective coatings.*

CAUTION: *The Garmin G1000 does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and the pilot's authority to operate this device under FAA/FCC regulations.*

NOTE: *When using Stormscope, there are several atmospheric phenomena in addition to nearby thunderstorms that can cause isolated discharge points in the strike display mode. However, clusters of two or more discharge points in the strike display mode do indicate thunderstorm activity if these points reappear after the screen has been cleared.*

NOTE: *All visual depictions contained within this document, including screen images of the G1000 panel and displays, are subject to change and may not reflect the most current G1000 system. Depictions of equipment may differ slightly from the actual equipment.*

NOTE: *This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

NOTE: *This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our web site at www.garmin.com/prop65.*

Part Number	Change Summary
190-00416-00 Rev A	Initial release.
Rev B	Revised for system software version 0426.01
190-00416-01 Rev A	Added GDU 7.0 software parameters, WAAS, VNAV, electronic charts, TAWS, and full EIS display.
190-00416-01 Rev B	Added GDU 8.00 parameters, Airways, new MFD splash screen Changed VNAV to VNV

Revision	Date of Revision	Affected Pages	Description
C	January, 2007	10-7, 10-13, 10-14	Corrected range display in Figure 10-11. Updated Figure 10-19. Added Negative Climb Rate Figure 10-21

Blank Page

SECTION 1: SYSTEM OVERVIEW 1-1
- **1.1 PFD/MFD Controls** 1-2
- **1.2 PFD Softkeys** 1-4
- **1.3 MFD Softkeys** 1-7
- **1.4 MFD Page Groups** 1-8
- **1.5 Vertical Navigation** 1-8
- **1.6 Backlighting** 1-10
- **1.7 Database Updates** 1-10
  - Jeppesen Aviation Database 1-11
  - Garmin Databases 1-11
- **1.8 Pilot Profiles** 1-12
  - Creating a Profile 1-12
  - Selecting a Profile 1-12
  - Renaming a Profile 1-12
  - Deleting a Profile 1-13

SECTION 2: FLIGHT INSTRUMENTS 2-1
- **2.1 Airspeed Indicator** 2-3
  - Speed Indication 2-3
  - Airspeed Trend Vector 2-3
  - Vspeed References 2-3
  - True Airspeed Box 2-3
- **2.2 Attitude Indicator** 2-3
- **2.3 Altimeter** 2-4
  - Altitude Reference Bug 2-4
  - Altitude Trend Vector 2-4
  - Barometric Setting Box 2-4
  - Altitude Alerting 2-4
  - Metric Display 2-4
- **2.4 Vertical Deviation/Glidepath/Glideslope Indicator** 2-5
- **2.5 Marker Beacon Annunciations** 2-6
- **2.6 Vertical Speed Indicator** 2-6
- **2.7 Barometric Altitude Minimums** 2-6
- **2.8 Wind Data** 2-7
- **2.9 Horizontal Situation Indicator (HSI)** 2-8
  - Turn Rate Indicator and Heading Trend Vector 2-8
  - Course Pointer 2-8
  - Course Deviation Indicator (CDI) 2-9
  - Bearing Pointers and Information Windows 2-10
  - DME (optional) 2-10
  - Navigation Source 2-10
- **2.10 Generic Timer** 2-11

SECTION 3: ENGINE INDICATION SYSTEM (EIS) 3-1
- **3.1 Default Engine Display** 3-1
- **3.2 Full EIS Display** 3-2
  - Leaning Assist (Normally Aspirated Engine Only) 3-3

SECTION 4: NAV/COM AND TRANSPONDER 4-1
- **4.1 Radio Status Indications** 4-3
- **4.2 Volume** 4-3
- **4.3 Automatic Squelch** 4-3
- **4.4 Quickly Activating 121.500 MHz** 4-3
- **4.5 Optional NAV Radios** 4-3
  - DME Radio (optional) 4-3
  - ADF Radio (optional) 4-3
- **4.6 Frequency Auto-tuning** 4-4
  - Auto-tuning on the PFD 4-4
  - Auto-tuning on the MFD 4-4
- **4.7 Transponder** 4-4
  - Mode Selection 4-4
  - Reply Status 4-5
  - Code Selection 4-5
  - Flight ID Reporting 4-6

SECTION 5: AUDIO PANEL 5-1
- **5.1 COM Radio Selection** 5-2
- **5.2 Split COM Function** 5-2
- **5.3 Marker Beacon Receiver** 5-2
  - Marker Beacon Signal Sensitivity 5-3
- **5.4 Nav Radio Audio Selection** 5-3
- **5.5 Intercom System (ICS) Isolation** 5-3
- **5.6 Intercom Squelch Control** 5-4
- **5.7 Digital Clearance Recorder and Player** 5-4

SECTION 6: AUTOMATIC FLIGHT CONTROL 6-1

SECTION 7: NAVIGATION 7-1
- **7.1 Navigation Map Page** 7-1
  - Select the MAP Page Group 7-1
- **7.2 Direct-to Navigation** 7-1
  - Direct-to Navigation from the MFD 7-1
  - Direct-to Navigation from the PFD 7-3
- **7.3 Navigating an Example Flight Plan** 7-5
- **7.4 Airport Information** 7-22
- **7.5 Intersection Information** 7-24
- **7.6 NDB Information** 7-25

7.7 VOR Information 7-25
7.8 User Waypoint Information Page 7-26
7.9 Nearest Airports 7-26
Nearest Airport Information on the MFD 7-26
Nearest Airports Information on the PFD 7-27
7.10 Nearest Intersections 7-27
7.11 Nearest NDB 7-28
7.12 Nearest VOR 7-28
7.13 Nearest User Waypoint 7-29
7.14 Nearest Frequencies 7-29
7.15 Nearest Airspaces 7-30

SECTION 8: FLIGHT PLANNING 8-1
8.1 User Defined Waypoints 8-1
Select the User WPT Information Page 8-1
Create User Waypoints from the Navigation Map Page. 8-2
8.2 Viewing the Active Flight Plan 8-2
8.3 Activate a Stored Flight Plan 8-2
8.4 Activate a Flight Plan Leg 8-3
8.5 Stop Navigating a Flight Plan 8-3
8.6 Invert Active Flight Plan 8-3
8.7 Create a New Flight Plan 8-4
Create a New Flight Plan Using the MFD 8-4
Create a New Flight Plan Using the PFD 8-4
8.8 Enter an Airway in a Flight Plan 8-5
8.9 Load a Departure 8-6
8.10 Load an Arrival 8-6
8.11 Load an Approach 8-6
8.12 Remove a Departure, Arrival, Approach, or Airway from a Flight Plan 8-6
8.13 Store a Flight Plan 8-7
8.14 Edit a Stored Flight Plan 8-7
8.15 Delete a Waypoint from the Flight Plan 8-7
8.16 Invert and Activate a Stored Flight Plan 8-7
8.17 Copy a Flight Plan 8-8
8.18 Delete a Flight Plan 8-8
8.19 Graphical Flight Plan Creation 8-8
8.20 Trip Planning 8-8

SECTION 9: PROCEDURES 9-1
9.1 Arrivals and Departures 9-1
Load and Activate a Departure Procedure 9-1
Load and Activate An Arrival Procedure 9-1
9.2 Approaches 9-2
Load and/or Activate an Approach Procedure 9-3
Activate An Approach in the Active Flight Plan 9-3

SECTION 10: HAZARD AVOIDANCE 10-1
10.1 Customizing the Hazard Displays on the Navigation Map 10-1
10.2 STORMSCOPE® (Optional) 10-1
Displaying Stormscope Lightning Data on the Navigation Map Page 10-1
Stormscope Page 10-2
10.3 XM Weather (Optional) 10-3
Displaying METAR and TAF information on the Airport Information Page 10-3
Displaying Weather on the Weather Data Link Page ... 10-4
Map Panning Information – Weather Data Link Page . 10-5
Weather Products and Symbols 10-5
Weather Product Age 10-6
10.4 Traffic Information Service (TIS) 10-7
Displaying Traffic on the Traffic Map Page 10-7
Displaying Traffic on the Navigation Map 10-7
TIS Voice Alert 10-7
10.5 Skywatch® Traffic Advisory System (TAS) (Optional) 10-8
Displaying Traffic on the Traffic Map Page 10-8
Displaying Traffic on the Navigation Map 10-8
10.6 Terrain And Obstacle Proximity 10-9
Displaying Terrain and Obstacles on the Terrain Proximity Page 10-9
Displaying Terrain and Obstacles on the Navigation Map 10-10
10.7 Terrain Awareness & Warning System (TAWS)Display (Optional) 10-10
Displaying Terrain on the TAWS Page 10-10
Enable/Disable Aviation Data 10-12
TAWS Inhibit 10-12
Manual System Test 10-12
Forward Looking Terrain Avoidance (FLTA) 10-12
Premature Descent Alert (PDA) 10-13
Excessive Descent Rate Alert (EDR) 10-13
Negative Climb Rate After TakeoffAlert (NCR) 10-13
"Five-Hundred" Aural Alert 10-14
Displaying Terrain and Obstacles on the Navigation Map 10-14

Pop-up Alerts 10-14
TAWS Alerts Summary 10-15
Alert Annunciations 10-16

SECTION 11: ABNORMAL OPERATION 11-1
11.1 Reversionary Mode 11-1
11.2 Abnormal COM Operation 11-1
11.3 Unusual Attitudes 11-2
11.4 Stormscope Operation with Loss of Heading Input 11-2
11.5 Hazard Displays with Loss of GPS Position 11-2
11.6 Dead Reckoning 11-2

SECTION 12: ANNUNCIATIONS & ALERTS 12-1
12.1 Alert Level Definitions 12-2
12.2 Aircraft Alerts 12-3
WARNING Alerts 12-3
CAUTION Alerts 12-3
Annunciation Advisory 12-3
12.3 TAWS Alerts 12-4
TAWS System Status Annunciations 12-5
12.4 Other G1000 Aural Alerts 12-5
12.5 G1000 System Message Advisories 12-5
Message Advisory Alerts 12-8
MFD & PFD Message Advisories 12-8
Database Message Advisories 12-9
GMA 1347 Message Advisories 12-11
GIA 63W Message Advisories 12-11
GEA 71 Message Advisories 12-14
GTX 33 Message Advisories 12-14
GRS 77 Message Advisories 12-14
GMU 44 Message Advisories 12-15
GDL 69A Message Advisories 12-15
GDC 74A Message Advisories 12-15
Miscellaneous Message Advisories 12-16

INDEX Index-1

Blank Page

SECTION 1: SYSTEM OVERVIEW

The purpose of this Cockpit Reference Guide is to provide the pilot a resource with which to find operating instructions on the major features of the G1000 system more easily. **It is not intended to be a comprehensive operating guide.** Complete operating procedures for the complete system are found in the G1000 Pilot's Guide for the Piper PA32 (190-00692-00):

This guide gives the pilot abbreviated operating instructions for the Primary Flight Display (PFD), Multi Function Display (MFD), and the GMA 1347 Audio Panel System.

NOTE: *The pilot should read and thoroughly understand the Piper PA32 Pilot's Operating Handbook (POH) for limitations, procedures and operational information not contained in this Cockpit Reference Guide. The POH always takes precedence over the information found in this guide.*

1.1 PFD/MFD CONTROLS

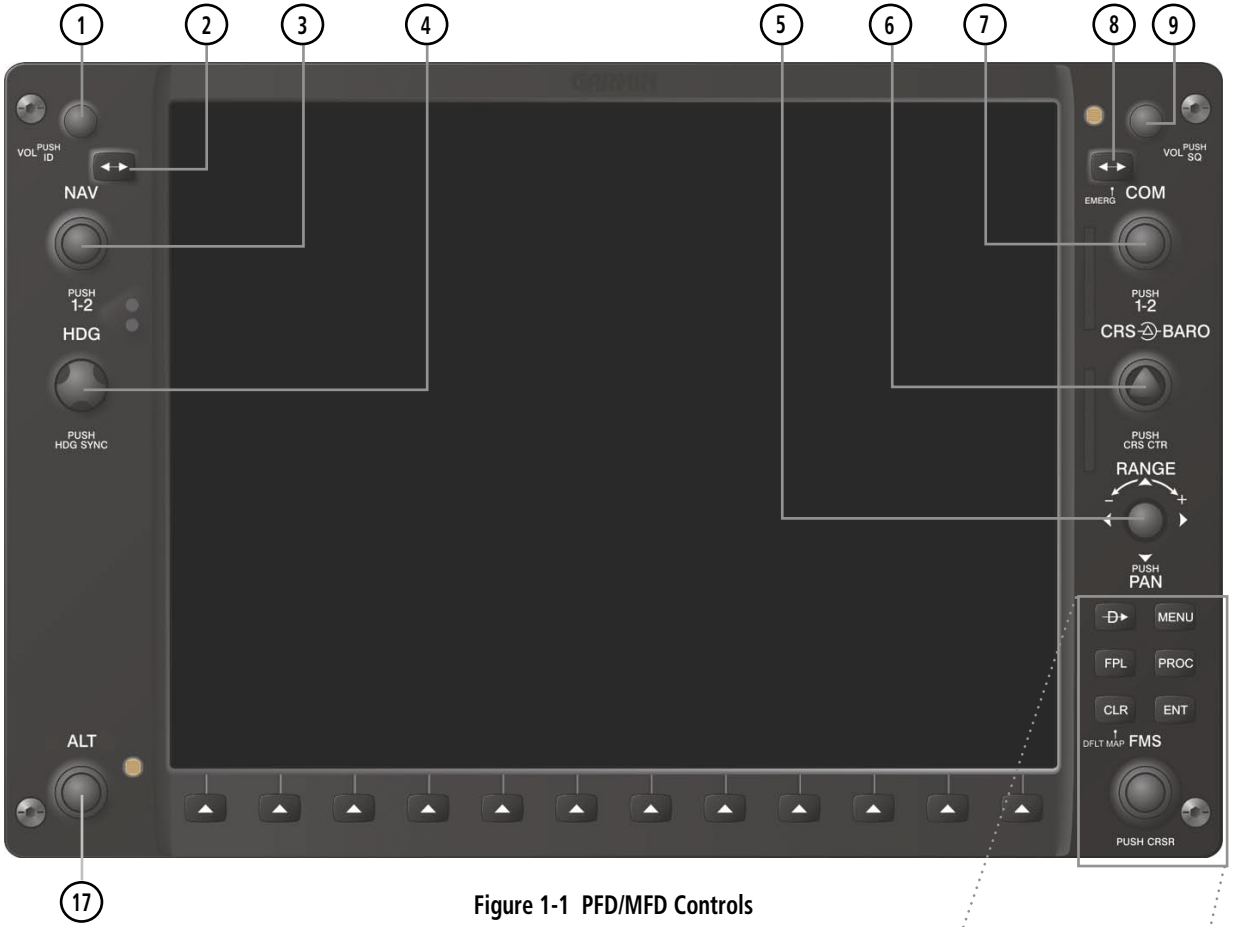

Figure 1-1 PFD/MFD Controls

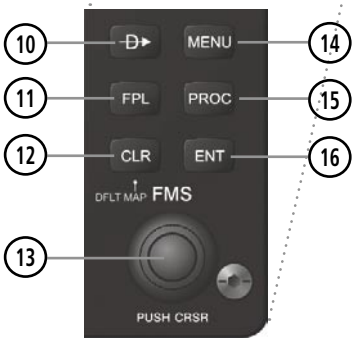

1. NAV VOL/ID Knob
2. NAV Frequency Transfer Key
3. NAV Knob
4. Heading Knob
5. Range/Joystick
6. Course/Baro Knob
7. COM Knob
8. COM Frequency Transfer Key
9. COM VOL/SQ Knob
10. Direct-to Key
11. Flight Plan Key
12. Clear Key
13. Flight Management System Knob
14. Menu Key
15. Procedure Key
16. Enter Key
17. Altitude Knob

(1) NAV VOL/ID Knob – Controls the NAV audio level. Press to turn the Morse code identifier ON and OFF. Volume level is shown in the field as a percentage.

(2) NAV Frequency Transfer Key – Switches the standby and active NAV frequencies.

(3) Dual NAV Knob – Tunes the MHz (large knob) and kHz (small knob) standby frequencies for the NAV receiver. Press to switch the tuning cursor (light blue box) between the NAV1 and NAV2 fields.

(4) Heading Knob – Turn to manually select a heading on the HSI. When pressed, it synchronizes the heading bug with the compass lubber line.

(5) Joystick – Changes the map range (distance top to bottom of map display) when rotated. Activates the map pointer when pressed.

(6) CRS/BARO Knob – The large knob sets the altimeter barometric pressure and the small knob adjusts the course. The course is only adjustable when the HSI is in VOR1, VOR2, or OBS/SUSP Mode. Pressing this knob centers the CDI on the currently selected VOR.

(7) Dual COM Knob – Tunes the MHz (large knob) and kHz (small knob) standby frequencies for the COM transceiver. Pressing this knob switches the tuning cursor (light blue box) between the COM1 and COM2 fields.

(8) COM Frequency Transfer Key – Swtiches the standby and active COM frequencies. Pressing and holding this key for two seconds automatically tunes the emergency frequency (121.5 MHz) in the active frequency field.

(9) COM VOL/SQ Knob – Controls COM audio level. Pressing this knob turns the COM automatic squelch ON and OFF. Audio volume level is shown in the field as a percentage.

(10) Direct-to Key – Allows the user to enter a destination waypoint and establish a direct course to the selected destination (specified by the identifier, chosen from the active route, or taken from the map pointer position).

(11) FPL Key – Displays the active Flight Plan Page for creating and editing the active flight plan, or for accessing stored flight plans.

(12) CLR Key (DFLT MAP) – Erases information, cancels an entry, or removes page menus. To display the Navigation Map Page immediately, press and hold **CLR** (MFD only).

(13) Dual FMS Knob – Used to select the page to be viewed (only on the MFD). The large knob selects a page group (MAP, WPT, AUX, NRST), while the small knob selects a specific page within the page group. Pressing the small knob turns the selection cursor ON and OFF. When the cursor is ON, data may be entered in the different windows using the small and large knobs. The large knob is used to move the cursor on the page, while the small knob is used to select individual characters for the highlighted cursor location. When a list that is too long for the display screen, a scroll bar appears along the right side of the display, indicating the availability of additional items within the selected category. Press the **FMS** Knob to activate the cursor and turn the large **FMS** Knob to scroll through the list.

(14) MENU Key – Displays a context-sensitive list of options. This list allows the user to access additional features, or to make setting changes that relate to certain pages.

(15) PROC Key – Selects approaches, departures and arrivals from the flight plan. If a flight plan is used, available procedures for the departure and/or arrival airport are automatically suggested. If a flight plan is not used, the desired airport and the desired procedure may be selected. This key selects IFR departure procedures (DPs), arrival procedures (STARs) and approaches (IAPs) from the database and loads them into the active flight plan.

(16) ENT Key – Accepts a menu selection or data entry. This key is used to approve an operation or complete data entry. It is also used to confirm selections and information entries.

(17) Dual ALT Knob – Sets the reference altitude above the Altimeter. The large knob selects the thousands, the small knob selects the hundreds. Selected altitude provides an altitude setting to the altitude alerter function.

1.2 PFD SOFTKEYS

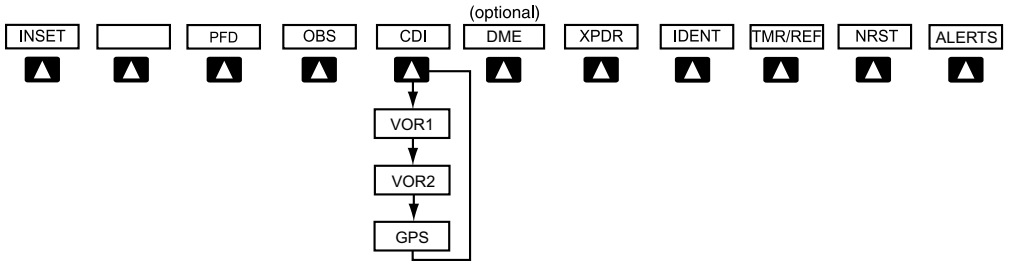

Figure 1-2 Top Level PFD Softkeys

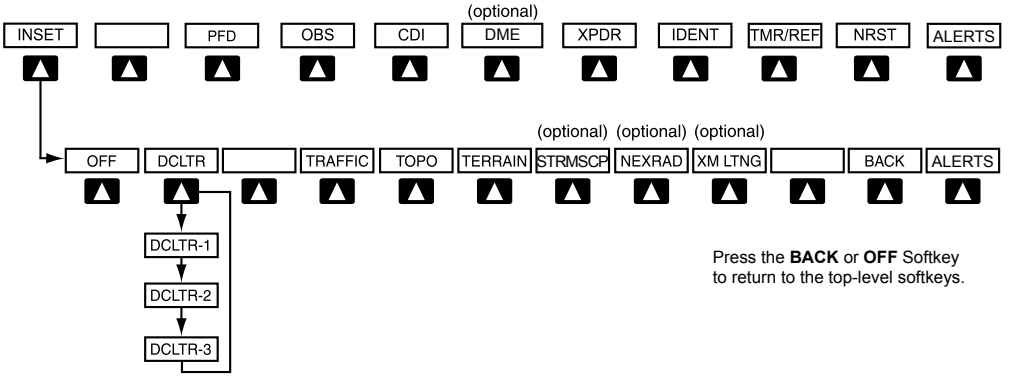

Figure 1-3 INSET Softkeys

INSET – Press to display the Inset Map in the lower left corner of the PFD.

OFF – Press to remove the Inset Map.

DCLTR (3) – Press momentarily to select the desired amount of map detail. The declutter level appears adjacent to the **DCLTR** Softkey.

- No declutter: All map features are visible.
- Declutter – 1: Declutters land data.
- Declutter – 2: Declutters land and SUA data.
- Declutter – 3: Declutters large NAV data remaining (removes everything except the active flight plan).

TRAFFIC – Press to display traffic on the map.

TOPO – Press to display topographical data (i.e., coastlines, terrain, rivers, lakes, etc.) and elevation scale on the inset map.

TERRAIN – Press to display terrain information on the inset map.

STRMSCP (optional) – Press to display the Stormscope lightning data on the Inset Map (within a 200 nm radius of the aircraft).

NEXRAD (optional) – Press to display NEXRAD weather and coverage information.

XM LTNG (optional) – Press to display XM lightning information.

BACK – Press to return to the previous level softkey configuration.

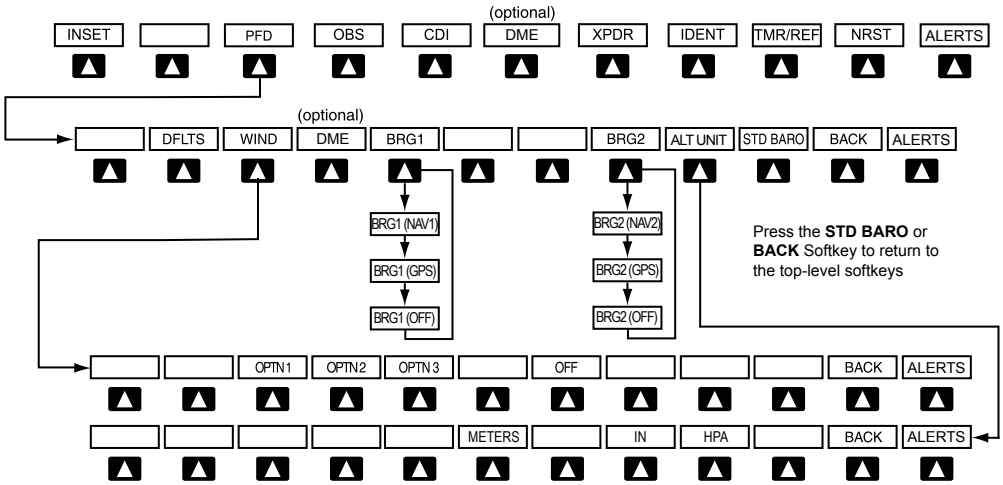

Figure 1-4 PFD Configuration Softkeys

PFD – Press to display the additional softkeys for additional configurations to the PFD.

DFLTS – Press to reset default settings on the PFD.

WIND – Displays softkeys to select wind data parameters.

OPTN 1 – Longitudinal and lateral components.

OPTN 2 – Total direction and speed.

OPTN 3 – Total direction with headwind and crosswind speed components.

OFF – Information not displayed.

DME (optional) – Press to display the DME Information Window.

BRG1 (bearing) – Press to cycle through the following information:

NAV1 – Displays NAV1 waypoint frequency or identifier and GPS-derived distance information in the BRG1 Information Window.

GPS – Displays GPS waypoint identifier and GPS-derived distance information in the BRG1 Information Window.

ADF – Displays ADF in the BRG1 Information Window.

OFF – Removes the BRG1 Information Window.

BRG2 (bearing) – Press to cycle through the following information:

NAV2 – Displays NAV2 waypoint frequency or identifier and GPS-derived distance information in the BRG2 Information Window.

GPS – Displays GPS waypoint identifier and GPS-derived distance information in the BRG2 Information Window.

ADF – Displays ADF in the BRG2 Information Window.

OFF – Removes the BRG2 Information Window.

ALT UNIT – Displays softkeys for setting the altimeter and BARO settings to metric units:

METERS – When enabled, displays altimeter in meters.

IN – Press to display the BARO setting as inches of mercury.

HPA – Press to display the BARO setting as hectopacals.

STD BARO – Press to set the barometric pressure to 29.92 inches of mercury (1013 hPa if metric units is selected).

BACK – Press to return to the previous level softkeys.

OBS – Press to select OBS Mode on the CDI when navigating by GPS.

CDI – Press to change navigation mode on the CDI between GPS, VOR1, and VOR2.

DME (optional) – Press to display the DME Tuning Window.

XPDR – Press to display the transponder and mode selection softkeys.

STBY – Press to select standby mode.

ON – Press to select Mode A.

ALT – Press to select altitude mode (Mode C).

GND – Manually selects Ground Mode. The transponder does not allow Mode A and Mode C replies, but it does permit acquisition squitter and replies to discretely addressed Mode S interrogations.

VFR – Press to automatically enter the VFR code (1200 in the U.S.A. only).

CODE – Press to display transponder code selection softkeys 0-7.

0 through 7 – Press numbers to enter code.

BKSP – Press to remove numbers entered one at a time.

BACK – Press to return to the previous level softkeys.

IDENT – Press to provide special aircraft position identification to Air Traffic Control (ATC) when the transponder is set to ON or ALT.

IDENT – Press to provide special aircraft position identification to Air Traffic Control (ATC) when the transponder is set to ON or ALT.

BACK – Press to return to the previous level softkeys.

IDENT – Press to provide special aircraft position identification to Air Traffic Control (ATC) when the transponder is set to ON or ALT.

TMR/REF – Press to display the Timer/References Window.

NRST – Press to display the Nearest Airports Window.

ALERTS – Press to display the Alerts Window.

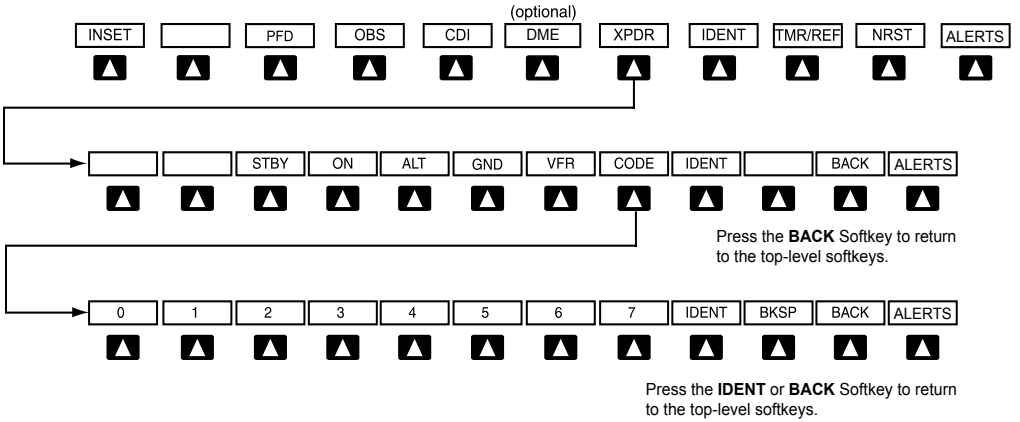

Figure 1-5 Transponder Softkeys

1.3 MFD SOFTKEYS

ENGINE – Pressing this softkey makes available the full size Engine Display and functions. Refer to the Engine Indication System section. Note in Figure 1-6, when in Reversionary Mode, EIS display selections change.

MAP – Pressing this softkey enables the following softkeys:

TRAFFIC – Pressing this softkey displays/removes Traffic on the Navigation Map.

TOPO – Pressing this softkey displays or removes topographic information on the Navigation Map.

TERRAIN – Pressing this softkey displays/removes terrain and obstacle data on the Navigation Map.

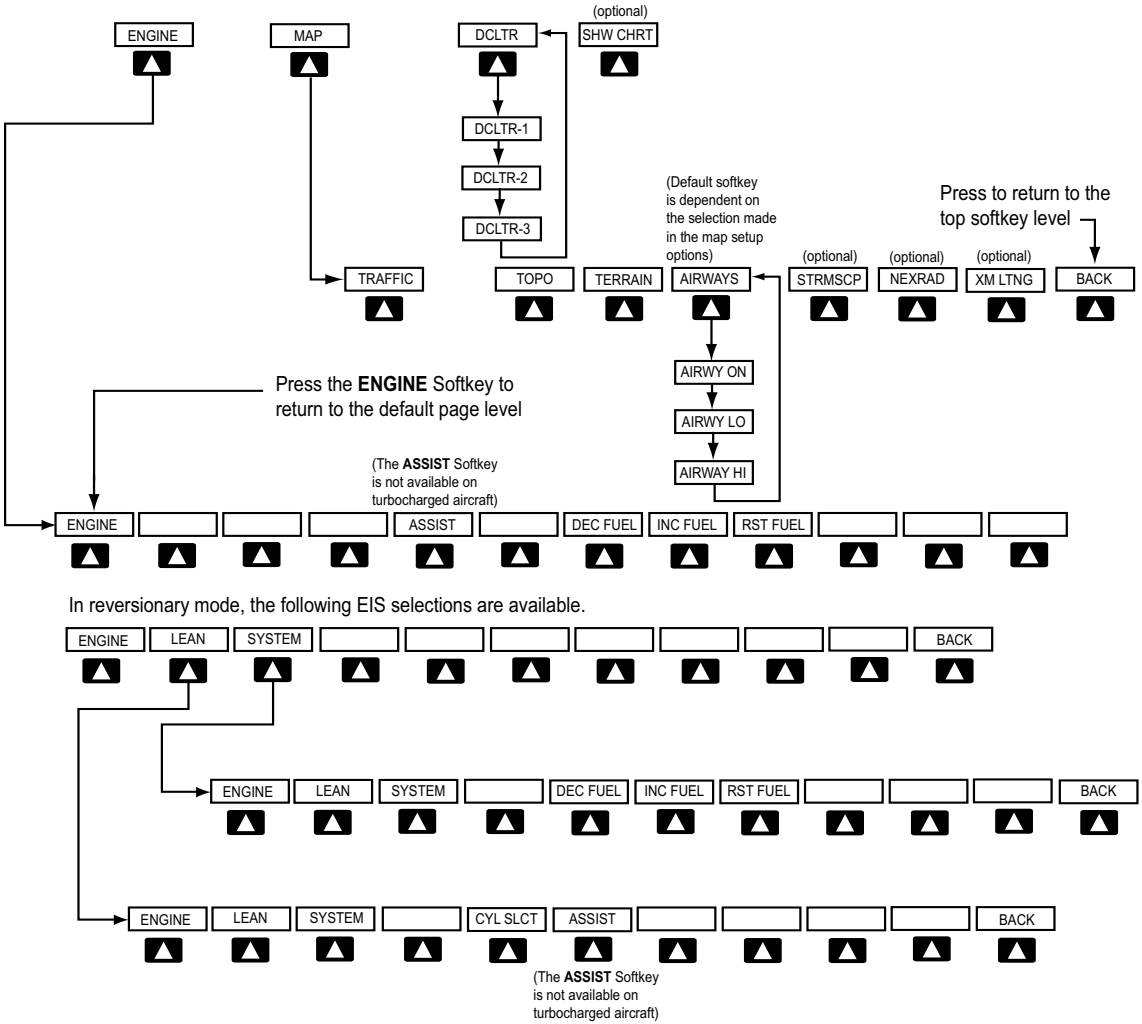

Figure 1-6 MFD Softkeys

AIRWAYS – Pressing this softkey displays/removes airways information. The default is dependant on map setup option seledcted. Pressing cycles through all airways displayed (**AIRWY ON**), low altitude airways only (**AIRWY LO**), and high altitude airways only (**AIRWY HI**).

STRMSCP (optional) – Pressing this softkey displays/removes Stormscope lightning data on the Navigation Map.

NEXRAD (optional) – Pressing this softkey displays/removes precipitation data on the Navigation Map.

XM LTNG (optional) – Pressing this softkey displays/removes XM Radio lightning data on the Navigation Map.

BACK – Pressing this softkey displays the ENGINE and MAP top level softkeys.

DCLTR (declutter) – Pressing this softkey removes map information in three levels.

SHW CHRT – When available, displays optional airport and terminal procedures charts.

1.4 MFD PAGE GROUPS

1) Turn the large **FMS** Knob until the desired page group is selected.
2) Turn the small **FMS** Knob to select pages within the group. See Figure 1-7.

1.5 VERTICAL NAVIGATION

One of two altitude sources is used by the G1000 when giving vertical navigation guidance. WAAS GPS altitude is used when giving guidance for a WAAS approach. Baro corrected altitude is used when vertical guidance is given in all other situations.

The G1000 system can use altitude constraints associated with lateral waypoints to give guidance for vertical navigation. These altitudes are, depending on the specific instance, entered by the pilot or retrieved from the published altitudes in the navigation database.

The navigation database only contains altitudes for procedures that call for "Cross at" altitudes. If the procedure states "Expect to cross at," then the altitude will not be in the database. In this case the altitude may be entered manually.

NOTE: *All arrival procedure altitudes contained in the navigation database are for turbojet aircraft only. Alter or enter altitudes as desired to comply with the ATC clearance.*

When activating or loading an arrival or approach procedure into an active flight plan, the VNV 'ALT' fields will be populated with any altitudes that can be retrieved from the navigation database.

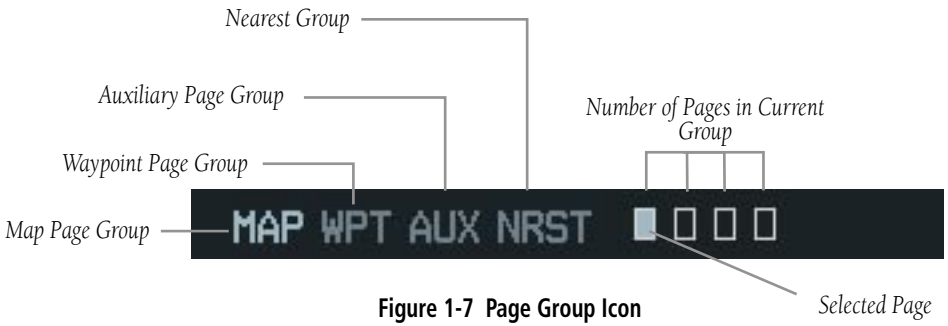

Figure 1-7 Page Group Icon

Since altitudes loaded with an arrival procedure are published only for turbojet aircraft, the altitudes are displayed as white text indicating that the altitudes are displayed for reference only. An arrival waypoint altitude may be used (or "designated") as is, or changed to a different altitude. An altitude is designated by pressing the **FMS** Knob and turning the large **FMS** Knob to place the cursor on the desired altitude and pressing the **ENT** Key or entering a different value and pressing the **ENT** Key. The altitude will now be displayed as blue text, indicating that the altitude is now designated to give vertical speed and deviation guidance.

Approach waypoint altitude constraints are designated in the same way as previously described for arrivals. These altitudes will also be displayed as blue text after being designated for use. Waypoint altitude constraints may be designated up to, but not including the FAF. The FAF will always be a "reference only" altitude and cannot be designated, unless the selected approach does not provide vertical guidance. In this case, the FAF altitude can be designated.

Altitudes that have been designated for use in vertical guidance may also be made "non-designated" by placing the cursor over the desired altitude and pressing the **CLR** Key. Other displayed altitudes may change due to re-calculations or rendered invalid as a result of manually changing an altitude to a non-designated altitude.

To help interpret the meanings of how the altitudes are presented, keep the following points in mind:

- When the altitude is displayed in light blue, the system is using that altitude (designated) to determine vertical speed and deviation guidance.
- When the altitude is displayed in white, it is not being used by the system (non-designated) to determine the vertical speed and deviation guidance.
- An altitude displayed as small text is an altitude that is published in the navigation database.
- Altitudes displayed as a light blue subdued text cannot be used in the current vertical navigation calculations.

	White Text	Light Blue Text	Light Blue Subdued Text
Large Text	Altitude calculated by the system estimating the altitude of the aircraft as it passes over the navigation point. This altitude is provided as a reference and is not designated to be used in determining vertical speed and deviation guidance.	Altitude has been entered by the pilot. Altitude is designated for use in giving vertical speed and deviation guidance. Altitude does not match the published altitude in navigation database or no published altitude exists.	The system cannot use this altitude in determining vertical speed and deviation guidance.
Small Text	Altitude is not designated to be used in determining vertical speed and deviation guidance. Altitude has been retrieved from the navigation database and is provided as a reference.	Altitude is designated for use in giving vertical speed and deviation guidance. Altitude has been retrieved from the navigation database or has been entered by the pilot and matches a published altitude in the navigation database.	The system cannot use this altitude in determining vertical speed and deviation guidance.

Table 1-1 VNV Altitude Text Size and Color

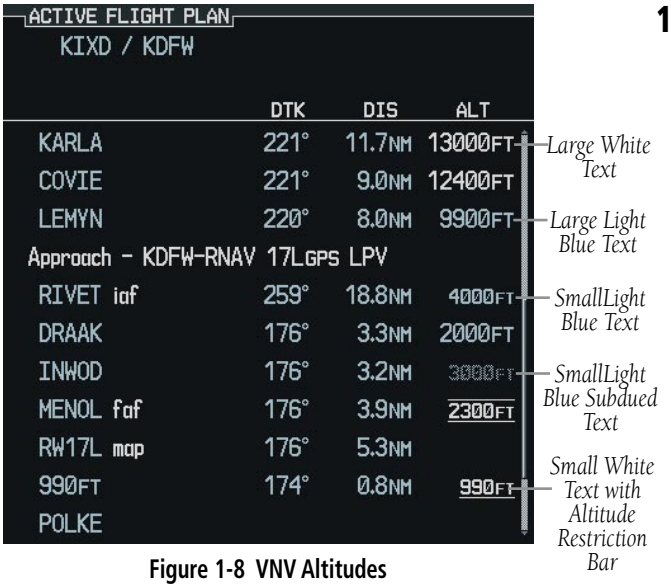

Figure 1-8 VNV Altitudes

Some altitudes retrieved from the database have associated restrictions indicating to stay 'At', 'At or Above', or 'At or Below' a specific altitude. These restrictions are indicated using a 'bar' above and/or below the appropriate altitude as shown in Figure 1-9.

Figure 1-9 Altitude Restrictions

See Section 7 - Navigation, for a sample flight plan which further illustrates vertical navigation in more detail.

1.6 BACKLIGHTING

Manually adjust the backlight for the PFD and MFD:

1) Press the **MENU** Key on the PFD to display the PFD Setup Menu window.
2) Press the small **FMS** Knob to activate the cursor. 'PFD DSPL > AUTO' is now highlighted.
3) Turn the small **FMS** Knob to display the selection window.
4) Turn the **FMS** Knob to select 'MANUAL', then press the **ENT** Key.
5) With the intensity value now highlighted, turn the small **FMS** Knob to select the desired backlighting.
6) Turn the large **FMS** Knob to highlight 'MFD DSPL > AUTO' and repeat steps 3 through 5.

Figure 1-10 PFD Setup Menu Window

1.7 DATABASE UPDATES

The G1000 system uses Secure Digital (SD) cards to load and store various types of data. For basic flight operations, SD cards are required for database storage as well as Jeppesen aviation and ChartView database updates.

Jeppesen Aviation Database

NOTE: *After the aviation database is installed, the card may be removed after loading the update to each LRU.*

Updating the Jeppesen aviation database:

1) With the G1000 System OFF, insert the SD card containing the aviation database update into the top card slot of the PFD to be updated (Label of SD card facing left).
2) Turn the G1000 System ON. A prompt similar to the following is displayed in the upper left corner of the PFD:

```
DO YOU WANT TO UPDATE THE AVIATION DATABASE?
            FROM            TO
REGION:     WORLDWIDE       WORLDWIDE
CYCLE:      0604            0605
EFFECTIVE:  13-APR-2006     11-MAY-2006
EXPIRES:    11-MAY-2006     08-JUN-2006

NO WILL BE ASSUMED IN 8 SECONDS.
```

Figure 1-11 Database Update Prompt

3) Press the **ENT** Key to start the database update. A prompt similar to the following is displayed:

```
DO YOU WANT TO UPDATE THE AVIATION DATABASE?
            FROM            TO
REGION:     WORLDWIDE       WORLDWIDE
CYCLE:      0604            0605
EFFECTIVE:  13-APR-2006     11-MAY-2006
EXPIRES:    11-MAY-2006     08-JUN-2006

NO WILL BE ASSUMED IN 8 SECONDS.
UPDATING AVIATION DATABASE, PLEASE WAIT.
.
UPDATED 1 FILES SUCCESSFULLY!
PRESS ANY KEY TO CONTINUE.
CONTINUING IN 8 SECONDS.
```

Figure 1-12 Database Update Confirmation

4) After the update completes, the PFD starts in normal mode.
5) Turn the G1000 System OFF and remove the SD card.
6) Repeat steps 1 through 4 for the MFD. The MFD and PFD databases are now updated. Remove the SD card when finished.
7) Verify that the correct update cycle is loaded during startup of the MFD.

Garmin Databases

Since these databases are not stored internally in the MFD or PFD, a Supplemental Data Card containing identical database versions must be kept in each display unit.

NOTE: *The data contained in the terrain and obstacle databases comes from government agencies. Garmin accurately processes and cross-validates the data, but cannot guarantee the accuracy and completeness of the data.*

1) Insert one SD card in the bottom card slot of the MFD and one in the bottom card slot of the PFD. The SD card containing the ChartView or FliteCharts database must be inserted into the bottom slot on the MFD.
2) Apply power to the G1000 System. View the MFD power-up splash screen. Check that the databases are initialized and displayed in the window of the splash screen. When updating the terrain and FliteCharts databases, an 'in progress' message may be seen. If this message is present, wait for the system to finish loading before verifying the correct databases are initialized, then proceed to step 3.

DATABASE
Checklist File: N/A
Basemap Land 1.01
SafeTaxi Expires 28-SEP-2006
Terrain 2.04
Airport Terrain 2.04
Obstacle Expires 28-SEP-2006
Aviation Expires 28-SEP-2006
FliteCharts Expires 28-SEP-2006
All map and terrain data provided is only to be used as a general reference to your surrounding and as an aid to situational awareness.
PILOT PROFILE
SAM
Press FMS knob to change profile
Press "ENT" or rightmost softkey to continue

Figure 1-13 Power-Up Splash Screen Window

3) Acknowledge the Power-up Page agreement by pressing the **ENT** Key or the right most softkey.
4) At the MAP – NAVIGATION MAP Page, select the **MAP** Softkey and check to make sure that the **TOPO** and **TERRAIN** Softkeys are available (not dimmed) and other database features are functioning.
5) Power down the G1000.

1.8 PILOT PROFILES

Creating a Profile

1) Select the AUX - System Setup Page.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight 'CREATE' in the Pilot Profile Box.
4) Press the **ENT** Key. A 'Create Profile' window is displayed.
5) Use the **FMS** Knob to enter a profile name
6) Press the **ENT** Key.
7) In the next field, use the small **FMS** Knob to select the desired settings upon which to base the new profile.
8) Press the **ENT** Key.
9) With 'CREATE' highlighted, press the **ENT** Key to create the profile.

Selecting a Profile

1) Select the AUX - System Setup Page.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the active profile field in the Pilot Profile Box.
4) Turn the small **FMS** Knob to display the pilot profile list and highlight the desired profile.
5) Press the **ENT** Key. The G1000 loads and displays the system settings for the selected profile.

Renaming a Profile

1) Select the AUX - System Setup Page.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight 'RENAME' in the Pilot Profile Box.
4) Press the **ENT** Key.
5) In the 'Rename Profile' window, turn the **FMS** Knob to select the profile to rename.
6) Press the **ENT** Key.
7) Use the **FMS** Knob to enter a new profile name up to 16 characters.
8) Press the **ENT** Key.
9) With 'RENAME' highlighted, press the **ENT** Key.

Deleting a Profile

1) Select the AUX - System Setup Page.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight 'DELETE' in the Pilot Profile Box.
4) Press the **ENT** Key.
5) In the 'Delete Profile' window, turn the **FMS** Knob to select the profile to be deleted.
6) Press the **ENT** Key.
7) With 'DELETE' highlighted, press the **ENT** Key.

Blank Page

SECTION 2: FLIGHT INSTRUMENTS

The following discussions pertain to the Primary Flight Display, unless otherwise indicated.

1. NAV Frequency Box
2. Airspeed Indicator
3. True Airspeed/Mach Box
4. Heading Box
5. Horizontal Situation Indicator
6. Outside Air Temperature Box
7. Softkeys
8. System Time Box
9. Transponder Status Box
10. Turn Rate Indicator
11. Barometric Setting Box
12. Vertical Speed Indicator
13. Altimeter
14. Altitude Reference Box
15. COM Frequency Box
16. Navigation Status Box
17. Slip/Skid Indicator
18. Attitude Indicator

Figure 2-1 Default PFD Information

1. Traffic Annunciation
2. Vspeed References
3. Selected Heading Box
4. Wind Data Window
5. Inset Map
6. BRG1 Information Window
7. DME Information Window
8. BRG2 Information Window
9. Alerts Window
10. Barometric Minimums Box
11. Selected Course Box
12. Altitude Reference Bug
13. Barometric Minimums Bug
14. Vertical Deviation/Glidepath (WAAS enabled systems only)/Glidesope Indicator
15. Marker Beacon Annunciation

Figure 2-2 Additional PFD Information

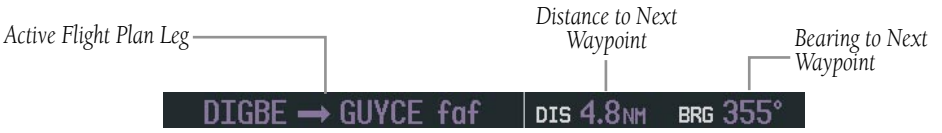

Figure 2-3 PFD Navigation Status Box

2.1 AIRSPEED INDICATOR

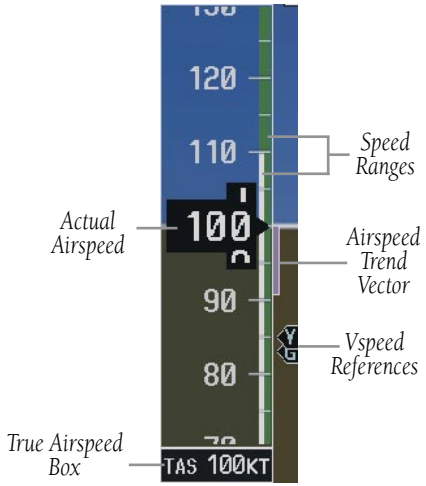

Figure 2-4 Airspeed Indicator

Speed Indication

The numeric labels and major tick marks on the moving tape are marked at intervals of 10 knots. Minor tick marks are at intervals of 5 knots. Speed indication starts at 20 knots. High speed awareness is represented by a red and white 'barber pole'. If the airspeed pointer reaches the yellow band, or the trend vector reaches the barber pole, the digits in the pointer turn yellow. If the airspeed pointer reaches the 'barber pole', the pointer turns red (refer to Figure 2-5).

Figure 2-5 Red Pointer

Low speed awareness is represented by a red range. Refer to the Pilot's Operating Handbook (POH) for speed criteria.

Airspeed Trend Vector

The end of the trend vector displays approximately what the airspeed will be in 6 seconds if the current rate of acceleration/deceleration is maintained.

Vspeed References

Vspeeds are set using the **TMR/REF** Softkey. When active (ON), the Vspeeds are displayed at their respective locations to the right of the airspeed scale.

True Airspeed Box

The True Airspeed box is located below the Airspeed indicator and displays the true airspeed in knots.

2.2 ATTITUDE INDICATOR

The Slip/Skid Indicator is located under the roll pointer and moves laterally away from the pointer to indicate lateral acceleration. One Slip/Skid indicator displacement is equal to one ball displacement when compared to a traditional slip/skid indicator.

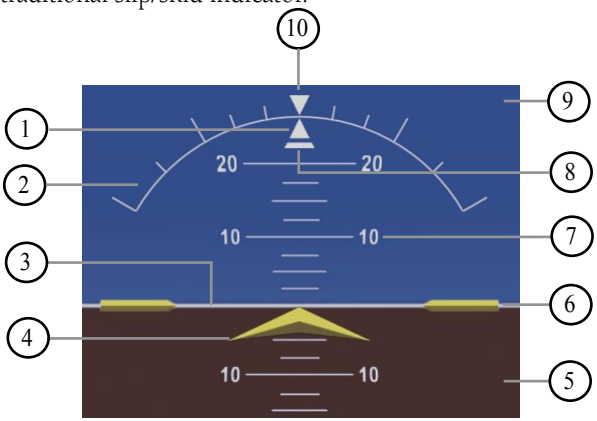

1. Roll Pointer
2. Roll Scale
3. Horizon Line
4. Aircraft Symbol
5. Land Representation
6. Aircraft Wing Tips
7. Pitch Scale
8. Slip/Skid Indicator
9. Sky Representation
10. Roll Scale Zero

Figure 2-6 Attitude Indicator

2.3 ALTIMETER

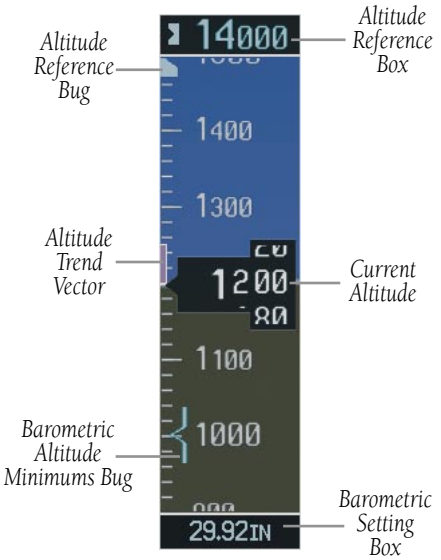

Figure 2-7 Altimeter

Altitude Reference Bug

The Altitude Reference Bug is displayed at the Selected Altitude or the edge of the tape (whichever is closer to the current altitude) to provide increased altitude awareness and to set the desired hold altitude for the autopilot.

Set the Altitude Reference Bug:

Turn the **ALT** Knobs to set the Altitude Reference Bug. The small **ALT** Knob sets the hundreds and the large **ALT** Knob sets the thousands. This altitude also appears in the Altitude Reference Box above the Altimeter.

Altitude Trend Vector

The end of the trend vector displays approximately what the altitude will be in 6 seconds if the current rate of vertical speed is maintained.

Barometric Setting Box

Turn the **BARO** Knob to select the desired setting.

Altitude Alerting

Figure 2-8 Altitude Alerting Visual Annunciations

Visual annunciations appear in the Altitude Reference Box. Whenever the setting is changed, the Altitude Alerter is reset. The Altitude Alerter is independent of the Automatic Flight Control System.

Metric Display

Display altitude in meters and barometric pressure in hectopascals:

1) Press the **PFD** Softkey to display the second level softkeys.
2) Press the **ALT UNIT** Softkey.
3) Press the **METRIC** Softkey to display altitude in meters.
4) Press the **HPA** Softkey to display the barometric setting in hectopascals. Press the **IN** Softkey to display the barometric setting in inches of mercury.
5) Press the **BACK** Softkey to return to the previous level softkeys.

Figure 2-9 Altimeter (Metric)

2.4 VERTICAL DEVIATION/GLIDEPATH/ GLIDESLOPE INDICATOR

NOTE: *VNV altitudes displayed on the Active Flightplan Page must be designated for use in vertical guidance.*

The Vertical Deviation and Required Vertical Speed Indicators appear when vertical guidance is being given prior to executing an approach (see Figure 2-10). In systems that are WAAS enabled, the Glidepath Indicator appears at a point prior to the FAF when executing an LPV or LNAV+V approach (see Figure 2-11).

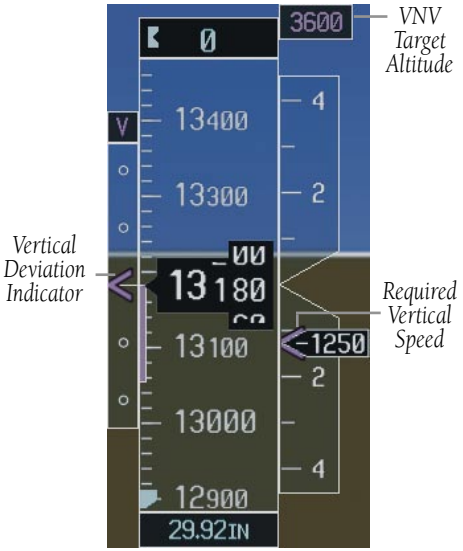

Figure 2-10 Vertical Deviation Indications

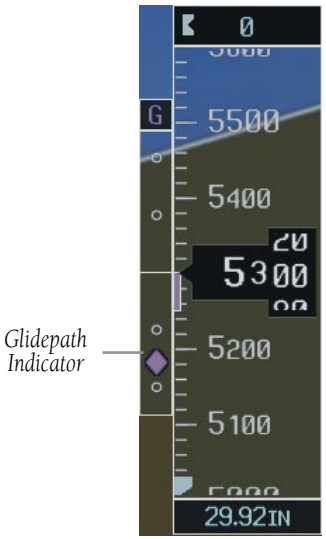

Figure 2-11 Glidepath Indicator

The Glideslope Indicator appears when an ILS approach has been activated and an ILS is tuned in the active NAV receiver field (see Figure 2-12).

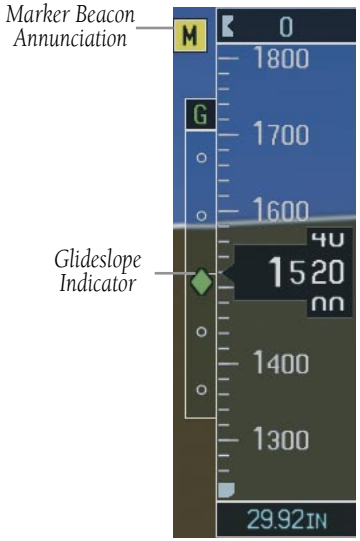

Figure 2-12 Glideslope Indicator

2.5 MARKER BEACON ANNUNCIATIONS

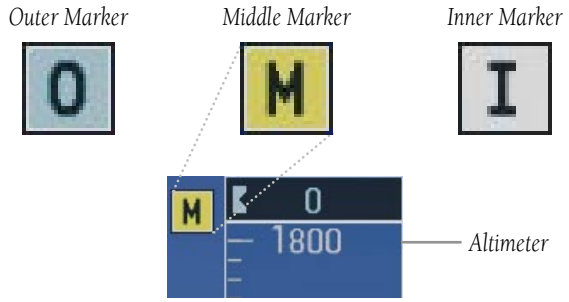

Figure 2-13 Marker Beacon Annunciations

2.6 VERTICAL SPEED INDICATOR

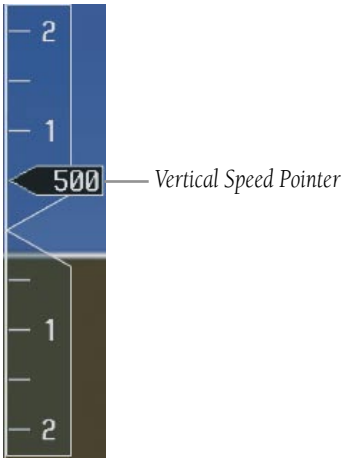

Figure 2-14 Vertical Speed Indicator

The actual vertical speed is displayed inside the pointer.

2.7 BAROMETRIC ALTITUDE MINIMUMS

The desired barometric altitude minimums can be set in the Timer/References Window. The altitude ranges from 0 to 16,000 feet in 10-foot increments. The minimums are reset anytime the power is cycled.

Figure 2-15 Barometric Minimum Descent Altitude Settings

The desired barometric minimum descent altitude (MDA, or Decision Height, DH) can be set in the Timer/References Window.

Visual annunciations alert the pilot when approaching the MDA:

- When the aircraft altitude descends to within 2500 feet of the MDA setting, the Barometric Minimum Box appears with the altitude in light blue text.

The bug appears on the tape in light blue once in range.

- When the aircraft passes through 100 feet of the MDA, the bug and text turn white.
- Once the aircraft descends past the MDA, the bug and text turn yellow and the aural alert, "Minimums Minimums", is generated.

Alerting is inhibited while the aircraft is on the ground. If the aircraft climbs after having reached the MDA, once it reaches 50 feet above the MDA, alerting is disabled.

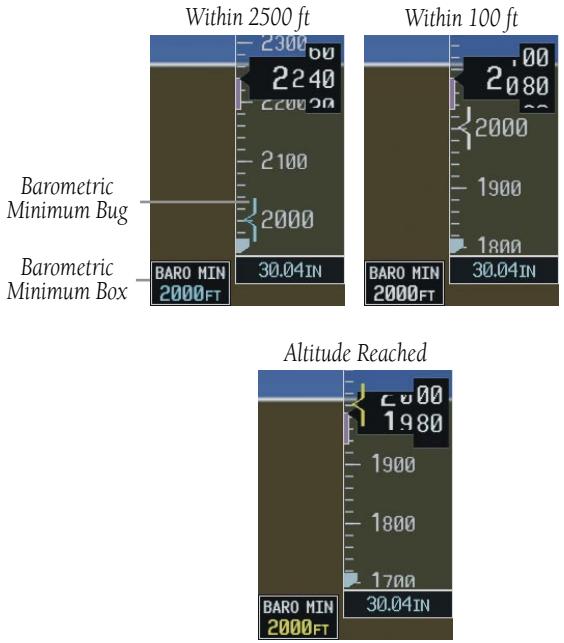

Figure 2-16 Barometric Minimum Descent Altitude Alerting Visual Annunciations

Set the barometric altitude minimums:

1) From the Timer References Window, turn the large **FMS** Knob to highlight the BARO MIN field.
2) Turn the small **FMS** Knob to select the desired barometric altitude minimums and press the **ENT** Key. The ON/OFF field is now highlighted.
3) Turn the small **FMS** Knob in the direction of the green arrowhead.

2.8 WIND DATA

When the window is selected for display, but wind information is invalid or unavailable, the window shows "NO WIND DATA". Wind data can be displayed in three different ways:

- Longitudinal and lateral components (Option 1)
- Total wind direction and speed (Option 2)
- Total direction with head and crosswind speed components (Option 3)

Figure 2-17 Wind Data Window

Displaying wind data:

1) Press the **PFD** Softkey.
2) Press the **WIND** Softkey to display wind data below the Selected Heading.
3) Press one of the **OPTN** softkeys to change how wind data is displayed.
4) To remove the Wind Data Window, press the **OFF** Softkey.

2.9 HORIZONTAL SITUATION INDICATOR (HSI)

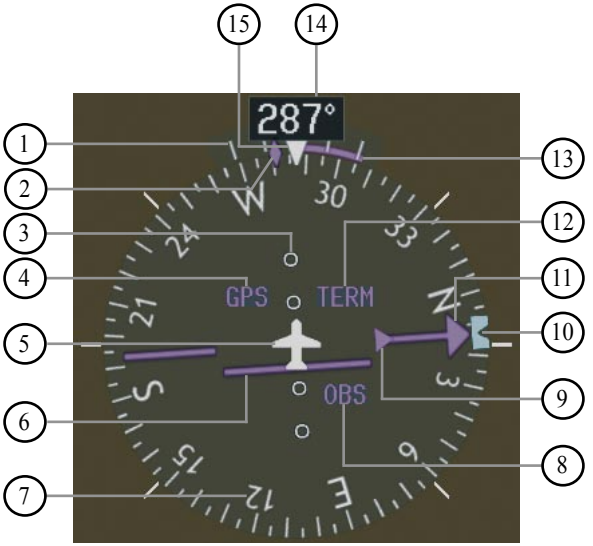

1. Turn Rate Indicator
2. Ground Track Bug
3. Lateral Deviation Scale
4. Navigation Source
5. Aircraft Symbol
6. Course Deviation Indicator
7. Rotating Compass Rose
8. OBS Mode
9. TO/FROM Indicator
10. Heading Bug
11. Course Pointer
12. Flight Phase
13. Turn Rate and Heading Trend Vector
14. Heading
15. Lubber Line

Figure 2-18 Horizontal Situation Indicator

Turn Rate Indicator and Heading Trend Vector

Tick marks to the left and right of the lubber line denote half-standard and standard turn rates. A magenta turn rate trend vector shows the current turn rate. The end of the trend vector gives the heading predicted in six seconds, based on the present turn rate. At rates greater than 4 deg/sec, an arrowhead appears at the end of the magenta trend vector and the prediction is no longer valid.

Figure 2-19 Turn Rate Indicator and Trend Vector

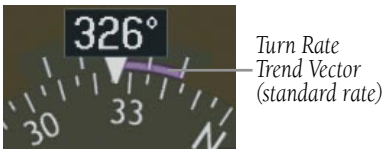

Figure 2-20 Standard-Rate Turn Indication

Course Pointer

The Course Pointer is a single line arrow (GPS, VOR1 and LOC1) or double line arrow (VOR2 and LOC2) which points in the direction of the set course.

Figure 2-21 Course Pointer

Course Deviation Indicator (CDI)

The CDI scale automatically adjusts to the current phase of flight as seen in Figure 2-22. Scaling may be selected manually from the MFD System Setup Page.

Flight Phase	Automatic CDI Full-scale Deflection
Departure (DRPT)	0.3 nm
Terminal (TERM)	1.0 nm
Enroute (ENR)	2.0 nm
Oceanic (OCN)	2.0 nm
Approach (LNAV)	1.0 nm decreasing to 350 feet depending on variables (see Figure 2-23)
Approach (LNAV+V)	
Approach (LNAV/VNAV)	1.0 nm decreasing to a specified course width, then 0.3 nm, depending on variables (see Figure 2-24)
Approach (LPV)	
Missed Approach	0.3 nm

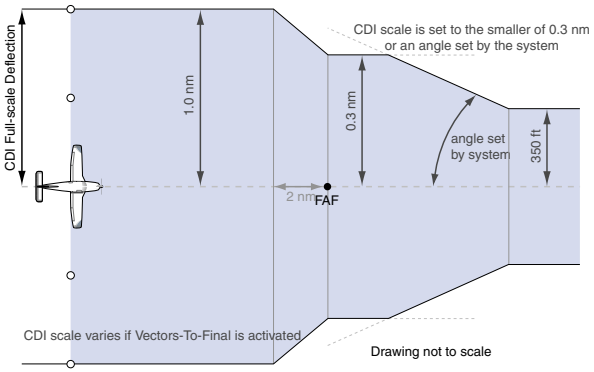
CDI Full-scale Deflection
1.0 nm
0.3 nm
CDI scale is set to the smaller of 0.3 nm or an angle set by the system
angle set by system
350 ft
2 nm
FAF
CDI scale varies if Vectors-To-Final is activated
Drawing not to scale

Figure 2-23 Typical LNAV and LNAV+V Approach CDI Scaling

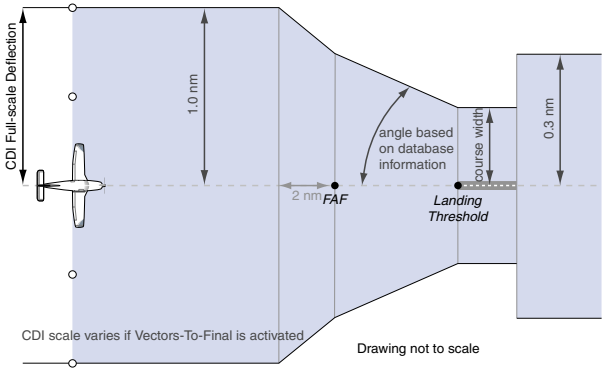

Figure 2-24 Typical LNAV/VNAV and LPV Approach CDI Scaling

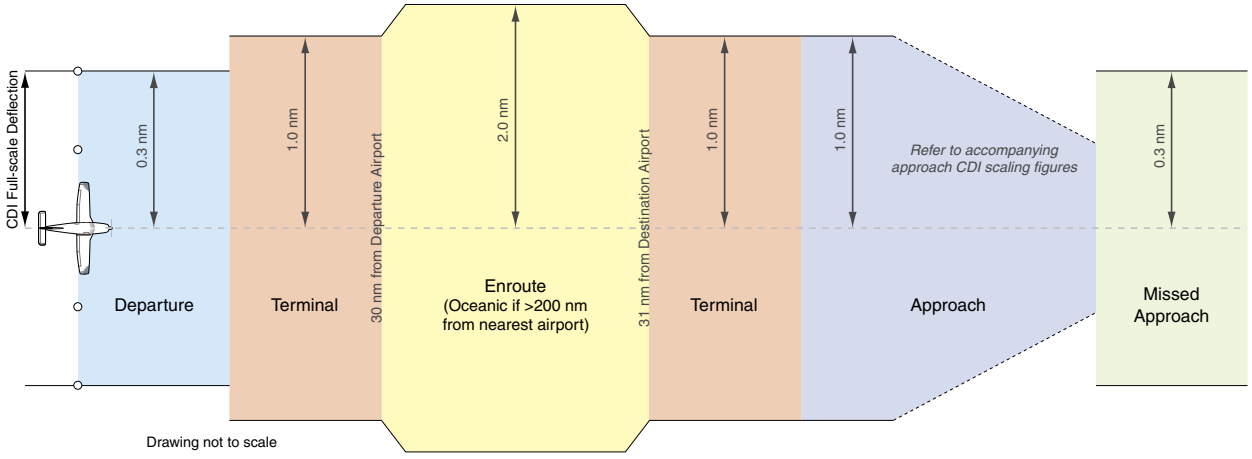

Figure 2-22 Phases of Flight/CDI Scaling

Bearing Pointers and Information Windows

Pressing the **PFD** Softkey provides access to the **BRG1** and **BRG2** Softkeys. The BRG1 Pointer is a single line pointer. The BRG2 Pointer is a double line pointer.

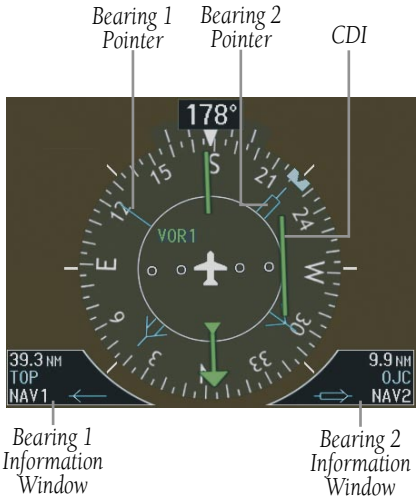

Figure 2-25 HSI with Bearing Information

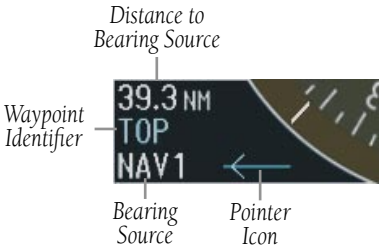

Figure 2-26 BRG1 Information Window

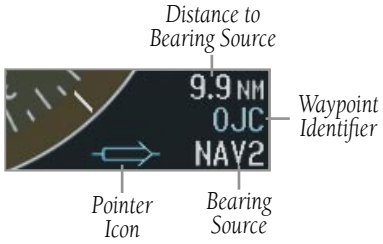

Figure 2-27 BRG2 Information Window

DME (optional)

To display the DME Information Window, press the **PFD** Softkey followed by the **DME** Softkey.

Figure 2-28 DME Information Window

Navigation Source

Change navigation sources:

1) Press the **CDI** Softkey to change from GPS to VOR1/LOC1.
2) Press the **CDI** Softkey again to change from VOR1/LOC1 to VOR2/LOC2.
3) Press the **CDI** Softkey a third time to return to GPS.

When using GPS as the navigation source, the following may appear:

- LOI - GPS position integrity is inadequate for the current procedure being flown. If GPS is being used as primary navigation, and LOI is annunciated, other means of primary navigation will be required, such as VHF. LOI is also displayed during GPS position initialization.
- WARN – GPS detects a position error.
- SUSP – Displayed when in OBS Mode indicating GPS waypoint sequencing is suspended.
- DR – Navigating using Dead Reckoning due to an error in the GPS solution.

Figure 2-29 GPS LOI, GPS SUSP, LOC1 and VOR2

Enable/disable OBS Mode while navigating with GPS:

1) Press the **OBS** Softkey to select OBS Mode.
2) Turn the **CRS** Knob to select the desired course to/from the waypoint.
3) Press the **OBS** Softkey again to disable OBS Mode.

NOTE: *The **OBS** Softkey is only displayed when navigating an active leg using GPS.*

2.10 GENERIC TIMER

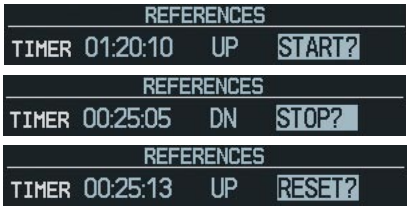

Figure 2-30 Timer Status Prompts

Change the Generic Timer:

1) Press the **TMR/REF** Softkey, then turn the large **FMS** Knob to select the time field (hh/mm/ss). Turn the **FMS** Knobs to set the desired time, then press the **ENT** Key. The UP/DOWN field is now highlighted.
2) Turn the small **FMS** Knob to display the UP/DOWN window. Turn the **FMS** Knob to select 'UP' or 'DOWN', then press the **ENT** Key. 'START?' is now highlighted.
3) Press the **ENT** Key to START, STOP, or RESET the timer (if the timer is counting DOWN, it must be reset manually). Press the **CLR** Key or the **TMR/REF** Softkey to remove the window.

Blank Page

SECTION 3: ENGINE INDICATION SYSTEM (EIS)

3.1 DEFAULT ENGINE DISPLAY

In all cases white or green indicates normal operation, yellow indicates caution, and red indicates warning.

Pressing the **ENGINE** Softkey makes available the full EIS Page, providing access to the **ASSIST** and fuel softkeys.

Figure 3-1 Default Engine Display (Normally Aspirated)

Figure 3-2 Default Engine Display (Turbocharged)

3.2 FULL EIS DISPLAY

NOTE: *Fuel calculations do not use the aircraft fuel quantity indicators, and are calculated from the last entered fuel remaining (GAL REM).*

Press the ENGINE Softkey to display the full size engine display.

The following softkeys allow for adjustment of the remaining fuel quantity.

- **DEC FUEL –** Allows the pilot to decrease the fuel remaining (GAL REM) in 1-pound increments
- **INC FUEL –** Allows the pilot to increase the fuel remaining in 1-pound increments
- **RST FUEL –** Resets the fuel remaining to 102 gallons.

In the FUEL CALC box, fuel used (GAL USED), endurance (ENDUR), and range (RANGE NM) are all calculated based on the last adjustment of the fuel remaining (GAL REM). Remaining fuel quantity does not reset when power is cycled.

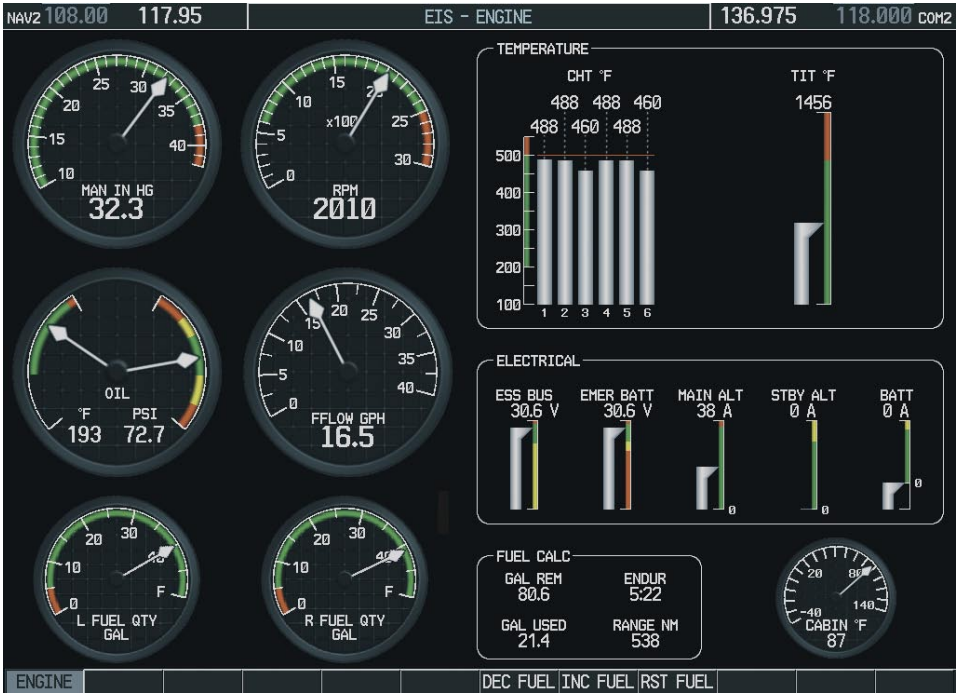

Figure 3-3 Full Engine Display (Turbocharged)

Figure 3-4 Full Engine Display (Normally Aspirated)

Leaning Assist (Normally Aspirated Engine Only)

1) Press the **ENGINE** Softkey.
2) Press the **ASSIST** Softkey.
3) Lean the mixture until one of the cylinder's exhaust temperature peaks. This is indicated by '1st' being displayed below the first cylinder to peak.
4) Continue leaning the mixture until the last of the cylinders peaks. This is indicated by 'Last' being displayed below the last peaking cylinder.
5) Adjust the Δpeak according to the Airplane Flight Manual.

Press the **ASSIST** Softkey when finished leaning to remove the leaning function. Press the **ENGINE** Softkey to exit the Engine Page and return the MFD to default operation.

Blank Page

SECTION 4: NAV/COM AND TRANSPONDER

The NAV/COM controls and frequency boxes share the same locations on the on the Primary Flight Display and the Multi-Function Display.

Figure 4-1 G1000 VHF NAV/COM Controls (PFD shown)

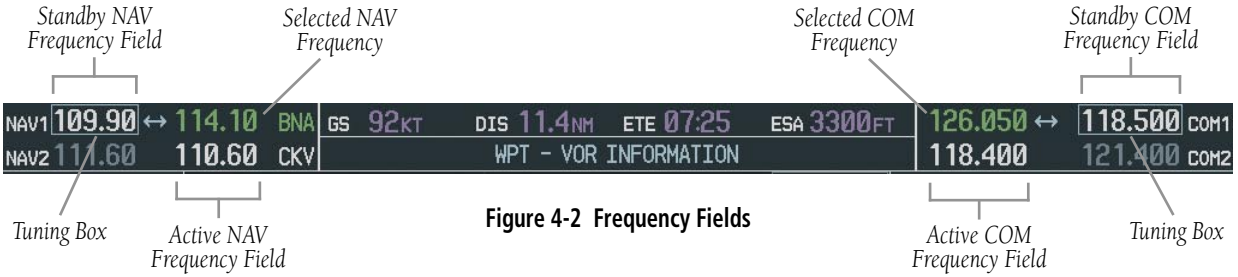

Figure 4-2 Frequency Fields

Figure 4-3 Frequency Transfer Arrow and Tuning Box

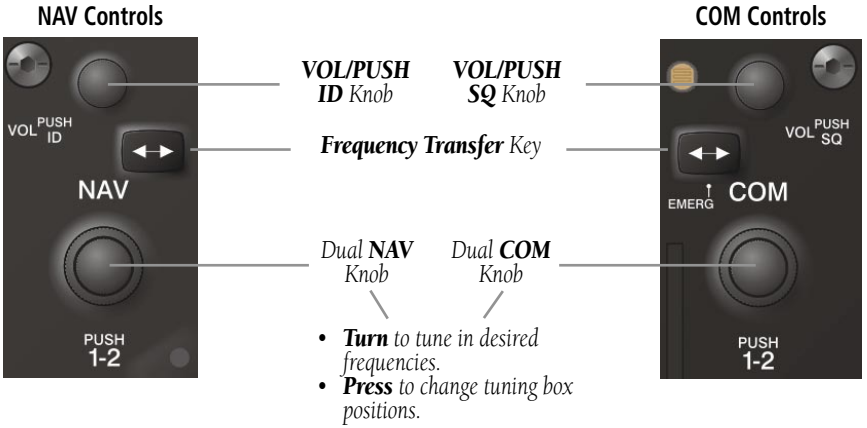

Figure 4-4 NAV/COM Controls

4.1 RADIO STATUS INDICATIONS

- RX – When a COM signal is received, a white 'RX' appears by the active COM frequency during signal reception.
- TX – When a COM radio is transmitting, a white 'TX' indication appears to the right of the corresponding COM frequency.
- ID – When the Morse code identifier is ON for a NAV radio, a white 'ID' indication appears to the left of the corresponding active NAV frequency. The Morse code identifier can be heard if the corresponding NAV radio is selected on the audio panel.



Figure 4-5 Radio Status Indications

4.2 VOLUME

'VOLUME' is displayed in place of the associated radio name (i.e., 'COM1' or 'NAV2') for two seconds after the volume level is last changed. The percentage of maximum volume is displayed in place of the standby frequency selected by the tuning box.

Figure 4-6 COM Volume Level

4.3 AUTOMATIC SQUELCH

Automatic squelch can be disabled for a COM radio by pressing the **COM** Knob to place the tuning box on the desired COM's standby frequency, then by pressing the **VOL/PUSH SQ** Knob.

4.4 QUICKLY ACTIVATING 121.500 MHZ

Pressing and holding the **COM Frequency Transfer** Key for approximately two (2) seconds automatically tunes the selected COM radio to the emergency frequency.

4.5 OPTIONAL NAV RADIOS

DME Radio (optional)

The DME Tuning Window is displayed by pressing the **DME** Softkey.

Figure 4-7 Radio Tuning Window

Change the DME tuning source:

1) From the tuning window, turn the large **FMS** Knob to highlight the DME source field.
2) Turn the small **FMS** Knob to display the selection window. Turn the **FMS** Knob to select the desired mode and press the **ENT** Key.

Figure 4-8 DME Selection Window

ADF Radio (optional)

The G1000 does not support tuning of the ADF in PA32. ADF tuning is accomplished through the Bendix/King KR 87 ADF Radio. ADF volume must also be adjusted through the KR 87.

4.6 FREQUENCY AUTO-TUNING

Auto-tuning on the PFD

Figure 4-9 Nearest Airports Window (PFD)

1) Press the **NRST** Softkey to display the Nearest Airports Window.
2) Turn either **FMS** Knob to highlight the desired frequency.
3) Press the **ENT** Key to place the frequency in the standby field of the active COM.
4) Press the **Frequency Transfer** Key to place the frequency in the active field.

NAV frequencies are entered automatically in the active NAV frequency field upon approach loading or approach activation.

Auto-tuning on the MFD

Auto-tuning on the MFD is done in much the same way as on the PFD. Use the **FMS** Knobs to select the desired frequency on any of the information pages. Pressing the **ENT** Key then loads the selected frequency in the tuning box as a standby frequency.

4.7 TRANSPONDER

Mode Selection

The **STBY**, **ON**, **ALT, GND, VFR, CODE, and IDENT** Softkeys can be accessed by pressing the **XPDR** Softkey.

Ground Mode (Automatic or Manual)

GND is displayed when the aircraft is on the ground or when the **GND** Softkey is pressed. The transponder does not allow Mode A and Mode C replies, but it does permit acquisition squitter and replies to discretely address Mode S interrogations.



Figure 4-10 Ground Mode

Standby Mode (Manual)

Press the **STBY** Softkey. In Standby Mode, the transponder does not reply to interrogations, but new codes can be entered.

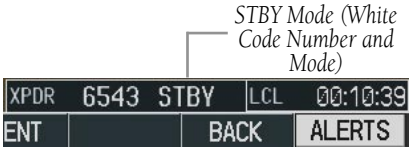

Figure 4-11 Standby Mode

Manual ON Mode

Press the **ON** Softkey. ON Mode generates Mode A and Mode S replies, but Mode C altitude reporting is inhibited.

Figure 4-12 ON Mode

Altitude Mode (Automatic or Manual)

Altitude Mode is automatically selected when the aircraft becomes airborne. Altitude Mode may also be selected manually by pressing the **ALT** Softkey.

All transponder replies requesting altitude information are provided with pressure altitude information.

Figure 4-13 Altitude Mode

Reply Status

When the transponder sends replies to interrogations, an "R" indication appears momentarily in the reply status field.

Figure 4-14 Reply Indication

Code Selection

VFR Code Selection

1) Press the **XPDR** Softkey to display the transponder Mode Selection softkeys.
2) Press the **VFR** Softkey to enter the VFR code. Pressing the **VFR** Softkey again restores the previous identification code.

NOTE: *The pre-programmed VFR Code is set at the factory to 1200.*

Enter Code Using Softkeys

1) Press the **XPDR** Softkey to display the transponder Mode Selection softkeys.
2) Press the **CODE** Softkey to display the transponder Code Selection softkeys, which includes the digit softkeys.
3) Press the appropriate digit softkeys to enter the code in the four-digit code field of the Transponder Status Box. When the last digit is entered, the transponder code becomes active.

   When entering a code, press the **BKSP** Softkey as needed to back up and change code digits.

Enter Code Using the FMS Knob

1) Press the **XPDR** Softkey to display the transponder Mode Selection softkeys.
2) Press the **CODE** Softkey to display the transponder Code Selection softkeys, which includes the digit softkeys.
3) Turn the small **FMS** Knob to enter the first two digits.
4) Turn the large **FMS** Knob to place the cursor in position to change the second two digits.
5) Turn the small **FMS** Knob to enter the second two digits.
6) Press the **ENT** Key to activate the code immediately, or wait 10 seconds and the code will become active.

Flight ID Reporting

If so configured, the Flight ID may be entered in the Timer/Reference Window.

Figure 4-15 Timer/References Window

1) Press the **TMR/REF** Softkey to display the Timer/References Window.
2) Turn the large **FMS** Knob to place the cursor in the Flight ID field.
3) Turn the small **FMS** Knob to enter the desired first character.
4) Turn the large **FMS** knob to place the cursor in the next desired field.
5) Turn the small **FMS** Knob to enter the next desired character.
6) Repeat steps 4 and 5 until the desired Flight ID is entered.
7) Press the **ENT** Key. 'updating' will be displayed as the Flight ID is loaded into the system.

SECTION 5: AUDIO PANEL

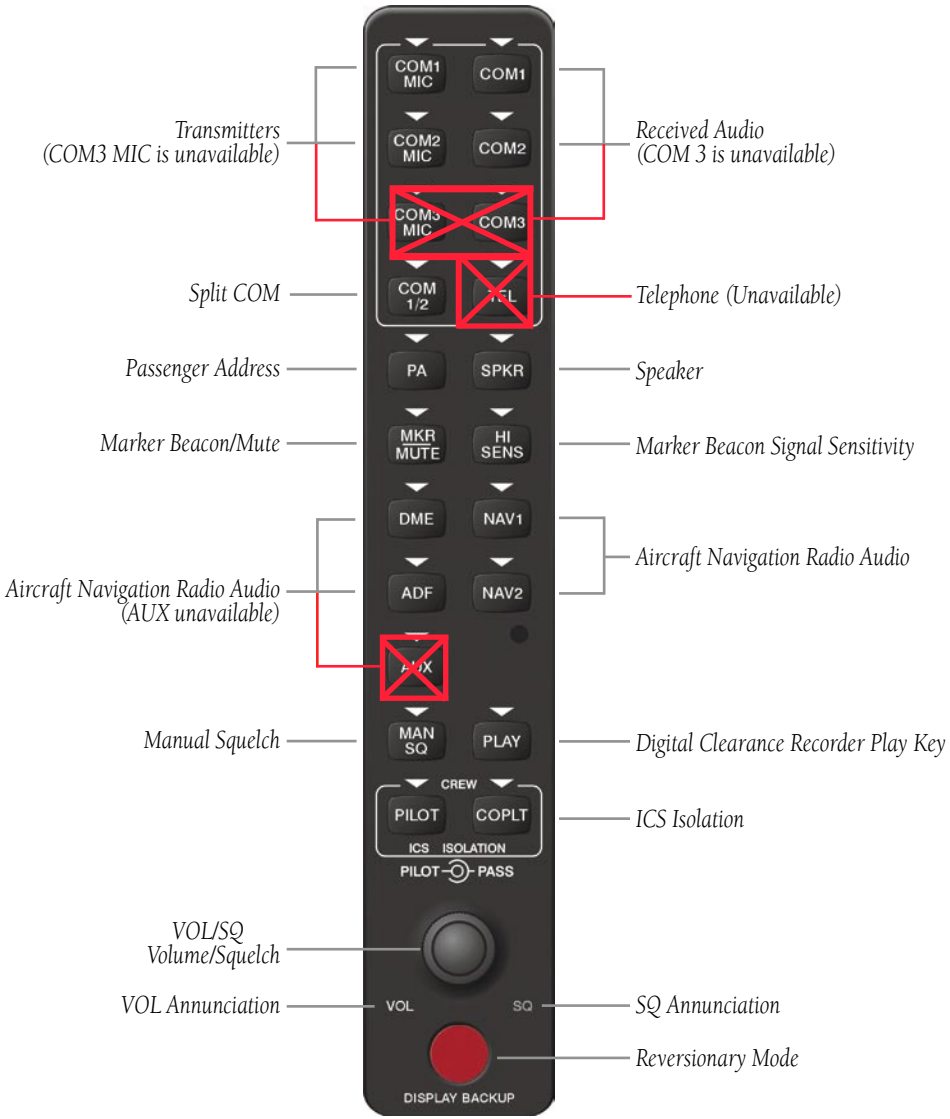

Figure 5-1 Audio Panel Controls

5.1 COM RADIO SELECTION

Pressing the **COM1 MIC** or **COM2 MIC** Key selects the active transmitter (i.e., microphone). The associated receiver audio (**COM1** or **COM2**) also becomes selected when the COM MIC Key is pressed.

Figure 5-2 Transceivers

5.2 SPLIT COM FUNCTION

NOTE: Split COM performance is affected by the distance between the antennas and the separation of the tuned frequencies.

Figure 5-3 Split COM Function

Pressing the **COM 1/2** Key selects and deselects the split COM function. During split COM operation, the **COM1**, **COM1 MIC**, **COM2,** and **COM2 MIC** Keys are active.

When the **COM 1/2** Key is selected, COM1 is used by the pilot for transmission and COM2 is used by the copilot. The **COM1 MIC** annunciator blinks when the pilot's Push-to-talk is pressed and the **COM2 MIC** annunciator blinks when the copilot's Push-to-talk is presssed.

In this mode, both the pilot and the copilot can transmit simultaneously over separate radios. The pilot can still monitor NAV1, NAV2, and MKR audio as selected, but the copilot is only able to monitor COM2.

5.3 MARKER BEACON RECEIVER

The marker beacon receiver is always on. Only the marker beacon audio can be turned off. Figure 5-4 shows the marker beacon annunciators on the PFD.

When the **MKR/MUTE** Key is pressed, the key annunciator is lit and the audio tone can be heard over the speaker or headsets during marker beacon reception.

When the tone is active, pressing the **MKR/MUTE** Key once mutes the audio but does not affect the marker annunciator. The audio returns when the next marker signal is received.

To turn off the marker beacon audio, press the **MKR/MUTE** Key once when there is no marker indication present, or press twice when an indication is present. The key annunciator will be extinguished when the marker beacon audio is turned off.

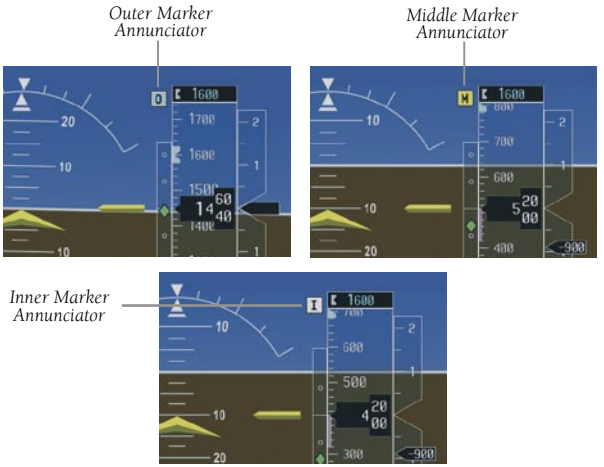

Figure 5-4 Marker Beacon Annunciators on the PFD

Marker Beacon Signal Sensitivity

The **HI SENS** Key can be pressed for increased marker beacon signal sensitivity.

Figure 5-5 Marker Beacon

5.4 NAV RADIO AUDIO SELECTION

Pressing **NAV1** or **NAV2** selects and deselects the radio source and activates the annunciator. Selected audio can be heard over the headset and the speakers. Pushing the **PUSH/VOL/ID** Knob at this time allows the navigation facility identifer to be heard. These two keys can be selected individually or together.

Figure 5-6 Navigation Radios

5.5 INTERCOM SYSTEM (ICS) ISOLATION

Press the **PILOT** and/or **COPLT** Key to select who is isolated from hearing the NAV/COM radios and music. Selection scenarios are addressed in Table 5-1.

Figure 5-7 ICS Isolation

Mode	PILOT KEY ANNUNCIATOR	COPLT KEY ANNUNCIATOR	Pilot Hears	Copilot Hears	Passenger Hears
ALL	OFF	OFF	Selected radios; pilot; copilot; passengers; MUSIC 1	Selected radios; pilot; copilot; passengers; MUSIC 1	Selected radios; pilot; copilot; passengers; MUSIC 2
PILOT	ON	OFF	Selected radios; pilot	Copilot; passengers; MUSIC 1	Copilot; passengers; MUSIC 2
COPILOT	OFF	ON	Selected radios; pilot; passengers; MUSIC 1	Copilot	Selected radios; pilot; passengers; MUSIC 2
CREW	ON	ON	Selected radios; pilot; copilot	Selected radios; pilot; copilot	Passengers; MUSIC 2

Table 5-1 ICS Isolation Modes

5.6 INTERCOM SQUELCH CONTROL

Select manual squelch for intercom audio by pressing the **MAN SQ** Key to light the annunciator.

Pressing the small **VOL/SQ** Knob now switches between volume and squelch adjustment by lighting **VOL** or **SQ** respectively.

Figure 5-8 Volume/Squelch Control

5.7 DIGITAL CLEARANCE RECORDER AND PLAYER

Each reception of primary active COM audio is automatically recorded in a memory block. When the next transmission is received, it is recorded in the next memory block, and so on. Once the 2.5 minutes of recording time has been reached, the recorder begins recording over the stored memory blocks, starting from the oldest block. Powering off the unit automatically clears all recorded blocks.

Figure 5-9 Recorder/Player

- Pressing **PLAY** once plays the latest recorded memory block, then returns to normal operation.
- Pressing **MKR/MUTE** while playing a memory block stops play.
- Pressing the **PLAY** Key during play begins playing the previously recorded memory block. Each subsequent press of the **PLAY** Key will begin playing the next previously recorded block.

If a COM input signal is detected while playing, play is halted and the new COM input signal is recorded as the latest block.

SECTION 6: AUTOMATIC FLIGHT CONTROL

Refer to the pilot's guide for the installed autopilot system.

Blank Page

SECTION 7: NAVIGATION

The majority of the following discussions pertain to the Multi Function Display. In discussions pertaining to the PFD, the controls are located on the PFD.

7.1 NAVIGATION MAP PAGE

***WARNING:** The map display should only be used for situational awareness. Any map display indication should be compared with approved navigation sources.*

Select the MAP Page Group

1) Turn the large **FMS** Knob until 'MAP' is highlighted in the page group box in the lower right of the MFD display.
2) Turn the small **FMS** Knob to select the first MAP page (indicated by a solid rectangular icon).

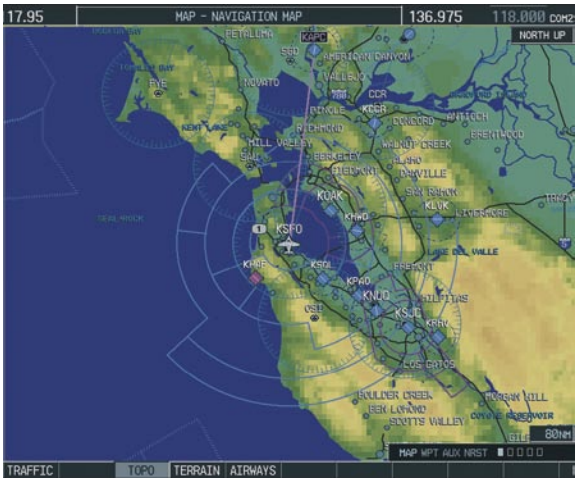

Figure 7-1 Navigation Map Page (Enroute)

7.2 DIRECT-TO NAVIGATION

Direct-to Navigation from the MFD

Figure 7-2 MFD Direct-to Window

Enter a Direct-to Destination

1) Press the **Direct-to** (D►) Key.
2) Enter the destination waypoint identifier.
3) Press the **ENT** Key to confirm the identifier. The 'Activate?' field is highlighted.
4) If no altitude constraint or course is desired, press the **ENT** Key to activate. To enter an altitude contraint, proceed to step 5.
5) Turn the large **FMS** Knob to place the cursor over the 'VNV' altitude field.
6) Enter the desired altitude.
7) Press the **ENT** Key. The option to select 'MSL' or 'AGL 'is now displayed.
8) Turn the small **FMS** Knob to select 'MSL' or 'AGL'.

9) Press the **ENT** Key. The cursor is placed in the 'VNV' offset distance field.

10) Enter the desired target altitude offset from the selected Direct-to.

11) Press the **ENT** Key to highlight 'Activate?' or turn the large **FMS** Knob to highlight the 'COURSE' field.

12) Enter the desired course to the waypoint.

13) Press the **ENT** Key to highlight 'ACTIVATE?'.

14) Press the **ENT** again to activate the Direct-to.

Select a Direct-to Destination to a Flight Plan Waypoint

1) While navigating an active flight plan, press the **Direct-to** (D▸) Key.

2) Turn the small **FMS** Knob to the left to display a list of flight plan waypoints as shown in Figure 7-3.

Figure 7-3 Flight Plan Waypoint List (MFD)

3) Turn the large **FMS** Knob to select the desired waypoint.

4) Press the **ENT** Key. The cursor is now displayed on 'ACTIVATE?'.

5) Press **ENT** again to activate a Direct-to.

Select a Direct-to Destination to a Nearest Airport

1) Press the **Direct-to** (D▸) Key.

2) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed as in Figure 7-3. The list is populated only when navigating a flight plan.

Figure 7-4 Nearest Airport List (MFD)

3) Turn the small **FMS** Knob to the right to display the 'NRST' airports to the aircraft's current position as shown in Figure 7-4.

4) Turn the large **FMS** Knob to select the desired airport.

5) Press the **ENT** Key. The cursor is now displayed on 'ACTIVATE?'.

6) Press **ENT** again to activate a Direct-to.

Select a Direct-to Destination to a Recently Entered Identifier

1) Press the **Direct-to** (D▸) Key.

2) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed as in Figure 7-3. The list is populated only when navigating a flight plan.

Figure 7-5 Recently Entered Waypoints List (MFD)

3) Turn the small **FMS** Knob to the right to display the 'RECENT' waypoints as shown in Figure 7-5.
4) Turn the large **FMS** Knob to select the desired airport.
5) Press the **ENT** Key. The cursor is now displayed on 'ACTIVATE?'.
6) Press **ENT** again to activate a Direct-to.

Re-center the CDI to the Destination Waypoint

Press the **Direct-to** (D▸) Key, followed by pressing the **ENT** Key twice. If a missed approach point (MAP) is the current destination, the approach will be canceled.

Manually Define the Active Direct-to

1) Press the **Direct-to** (D▸) Key.
2) Turn the large **FMS** Knob to highlight the 'VNV' altitude field.
3) Enter the desired altitude.
4) Press the **ENT** Key. The option to select 'MSL' or 'AGL' is now displayed.
5) Turn the small **FMS** Knob to select 'MSL' or 'AGL'.
6) Press the **ENT** Key. The cursor now highlights the VNV offset field.
7) Enter the desired the offset distance.
8) Press the **ENT** Key.
9) Turn the large **FMS** Knob to place the cursor in the 'COURSE' field.
10) Enter the desired course.
11) Press the **ENT** Key. The cursor now highlights 'ACTIVATE?'.
12) Press the **ENT** Key again to begin navigation using the selected destination, altitude constraint, and course.

Canceling Direct-to Navigation

1) Press the **Direct-to** (D▸) Key.
2) Press the **MENU** Key to display the Direct-to options menu.
3) With 'Cancel Direct-To NAV' highlighted, press the **ENT** Key. If a flight plan is still active, the G1000 resumes navigating the flight plan along the closest leg.

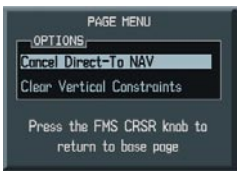

Figure 7-6 Canceling Direct-to Navigation

Direct-to Navigation from the PFD

Figure 7-7 PFD Direct-to Window

Enter a Direct-to Destination

1) Press the Direct-to Key ( ).
2) Turn the large **FMS** Knob to place the cursor in the desired selection field.
3) Turn the small **FMS** Knob to begin selecting the desired identifier, location, etc.
4) Press the **ENT** Key.
5) The cursor is now flashing on 'ACTIVATE?'. If no altitude constraint or course is desired, press the **ENT** Key to activate. To enter an altitude contraint, proceed to step 6.
6) Turn the large **FMS** Knob to place the cursor over the 'VNV' altitude field.
7) Turn the small **FMS** Knob to enter the desired VNV altitude.
8) Press the **ENT** Key. The option to select 'MSL' or 'AGL' is now displayed.
9) Turn the small **FMS** Knob to select 'MSL' or 'AGL'.
10) Press the **ENT** Key. The cursor is placed in the 'VNV' offset distance field.
11) Turn the small **FMS** Knob to enter the desired target altitude offset from the selected Direct-to.
12) Press the **ENT** Key to highlight 'Activate?' or turn the large **FMS** Knob to highlight the 'COURSE' field.
13) Turn the small **FMS** Knob to enter the desired course to the waypoint.
14) Press the **ENT** Key to highlight 'ACTIVATE?'.
15) Press the **ENT** again to activate the Direct-to.

Select a Direct-to Destination to a Flight Plan Waypoint

1) While navigating an active flight plan, press the **Direct-to** ( ) Key.
2) Turn the small **FMS** Knob to the left to display a list of flight plan waypoints as shown in Figure 7-8.

Figure 7-8 Flight Plan Waypoint List (PFD)

3) Turn the large **FMS** Knob to select the desired waypoint.
4) Press the **ENT** Key. The cursor is now displayed on 'ACTIVATE?'.
5) Press **ENT** again to activate a Direct-to.

Select a Direct-to Destination to a Nearest Airport

1) Press the **Direct-to** ( ) Key.
2) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed as in Figure 7-8. The list is only populated when navigating a flight plan.

Figure 7-9 Nearest Airport List (PFD)

3) Turn the small **FMS** Knob to the right to display the 'NRST' airports to the aircraft's current position as shown in Figure 7-9.

4) Turn the large **FMS** Knob to select the desired airport.

5) Press the **ENT** Key. The cursor is now displayed on 'ACTIVATE?'.

6) Press **ENT** again to activate a Direct-to.

Select a Direct-to Destination to a Recently Entered Identifier

1) Press the **Direct-to (D▸)** Key.

2) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed as in Figure 7-8. The list is only populated when navigating a flight plan.

Figure 7-10 Recently Entered Waypoints List (PFD)

3) Turn the small **FMS** Knob to the right to display the 'RECENT' waypoints as shown in Figure 7-10.

4) Turn the large **FMS** Knob to select the desired airport.

5) Press the **ENT** Key. The cursor is now displayed on 'ACTIVATE?'.

6) Press **ENT** again to activate a Direct-to.

Cancelling Direct-to Navigation

1) Press the Direct-to **(D▸)** Key.

2) Press the **MENU** Key to display the Options Window. The cursor will be flashing on 'Cancel Direct-to NAV'.

3) Press the **ENT** Key to cancel the direct-to.

7.3 NAVIGATING AN EXAMPLE FLIGHT PLAN

The following discussion is an example of navigating a flight plan with the WAAS capable GPS system while the G1000 provides vertical guidance through descents. A lateral flight plan (LNAV) would be navigated in much the same way, but would not include vertical guidance when the final approach course is active.

The example is a flight plan from KMKC to KCOS filed using the TIFTO2 departure, various Victor Airways, and the DBRY1 arrival with the transition at TBE. Enroute altitude will be 12,000 feet. An LPV (WAAS) approach will be selected for runway 35R. A missed approach will be executed at the Missed Approach Point (MAP). A few enroute changes are demonstrated.

NOTE: *If the loaded arrival procedure has published altitudes contained in the navigation database, these are for turbojet aircraft only. Accept or change these values as desired to meet the requirements of the clearance.*

1) Prior to departure, the TIFTO2 departure, the airways, and the DBRY1 arrival at KCOS are loaded. See the Procedures section for loading departures and arrivals. Note the magenta arrow in Figure 7-11 indicating the active departure leg.

   After takeoff, ATC assigns a heading of 240°.

2) Figure 7-11 shows the aircraft on the assigned heading of 240º. 'TERM' (Terminal) is the current CDI flight phase displayed on the HSI indicating 1.0 nm CDI scaling.

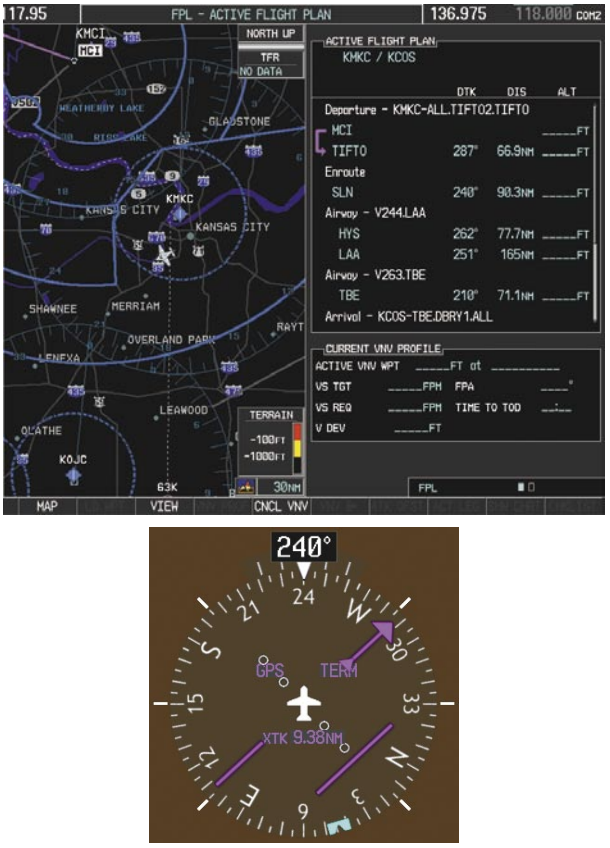

Figure 7-11 Assigned Heading of 240º

3) ATC now assigns routing to join V4. A heading of 290º is assigned to intercept V4. The aircraft turns to heading 290° as seen in Figure 7-12. Note the current CDI flight phase is now ENR (Enroute). When the aircraft reached 30 nautical miles from the departure point, the flight phase changed from TERM to ENR on the HSI and CDI scaling changed to 2.0 nm.

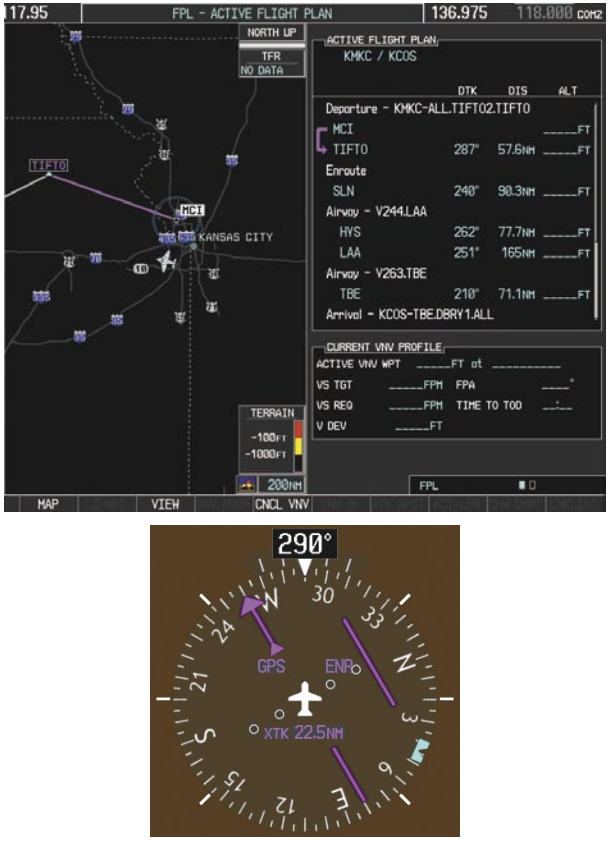

Figure 7-12 Assigned Heading of 290º

4) V4 will now be entered into the flight plan.

a) Press the **FMS** Knob to activate the cursor.

b) Turn the large **FMS** Knob to highlight the point that proceeds V4 will be entered as shown in Figure 7-13.

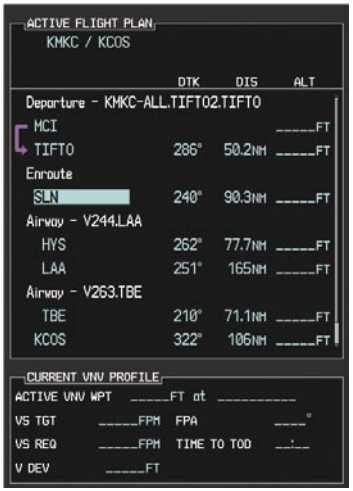

Figure 7-13 Begin Adding V4 to the Flight Plan

c) Turn the small **FMS** Knob to display the Waypoint Information Window. Enter the desired entry point for V4, in this case Topeka VOR (TOP) will be used as shown in Figure 7-14.

Figure 7-14 Entering V4 Entry Point

d) Press the **ENT** Key. TOP is now inserted into the flight plan as in Figure 7-15.

Figure 7-15 TOP Inserted into the Flight Plan

e) With SLN still highlighted as in Figure 7-15, turn the small **FMS** Knob to the right. The Waypoint Information Page is displayed and the **LD AIRWY** Softkey is now available.

f) Press the **LD AIRWY** Softkey to display the list of available airways for TOP as seen in Figure 7-16.

Figure 7-16 List of Available Airways for TOP

g) Turn either **FMS** Knob to highlight V4 in the list as seen in Figure 7-16.

h) Press the **ENT** Key. The list of available exits for V4 is now displayed as in Figure 7-17.

Figure 7-17 List of Available Exits for V4

i) If necessary, turn either FMS Knob to select the desired exit. In this case Salina VOR (SLN) is selected as seen in Figure 7-17.

j) Press the **ENT** Key. The selected airway and exit are displayed the prompt "LOAD?" highlighted as in Figure 7-18.

Figure 7-18 Ready to Load V4

k) Press the **ENT** Key.

l) V4 is now loaded into the flight plan as shown in Figure 7-19.

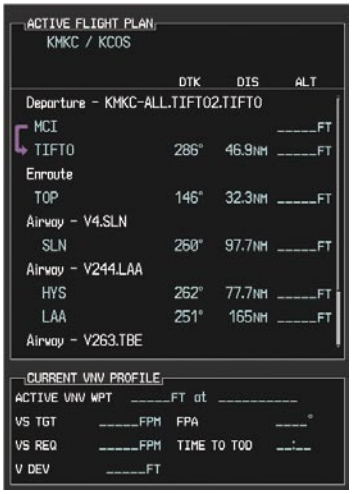

Figure 7-19 V4 is Loaded in the Flight Plan

5) V4 will now be made the active leg of the flight plan.

a) Press the **FMS** Knob to activate the cursor.

b) Turn the large **FMS** Knob to highlight SLN. The TO waypoint of the leg is selected in order to activate the leg.

c) Press the **ACT LEG** Softkey. The confirmation window is now displayed as in Figure 7-20. Note the TOP to SLN leg is actually part of V4.

Figure 7-20 Comfirm Active Leg

d) Verify the displayed leg is the desired leg and press the **ENT** Key. Note in Figure 7-21, the magenta arrow in the flight plan window and magenta line on the map indicating V4 is now the active flight plan leg. Note also, the crosstrack (XTK) distance on the HSI indicating 16.9 nm to the intercept point.

Figure 7-21 V4 Now Active Leg

6) The aircraft continues on heading 290°. When 2.0 nm from the intercept, the XTK will disappear from the HSI and the CDI will be positioned on the last dot indicating a 2.0 nm distance from the centerline of the next course.

7) As the CDI approaches center, the aircraft turns onto the active leg as seen in Figure 7-22.

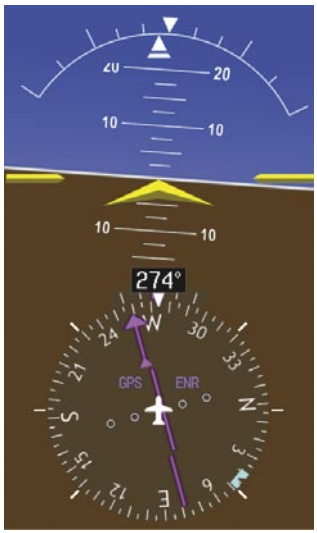

Figure 7-22 Turn on to Active Leg

8) At SLN, Victor Airway 244 (V244) will be intercepted. Turn prompts will be displayed in the PFD Navigation Status Box as seen in Figure 7-23.

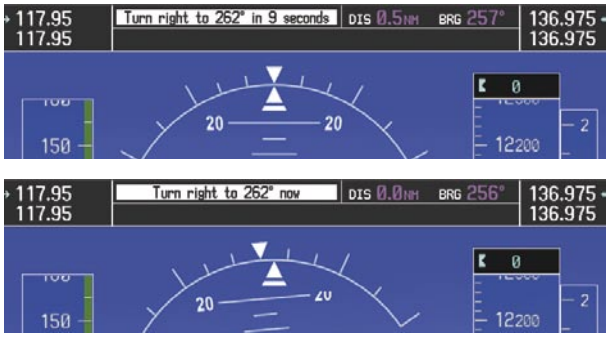

Figure 7-23 Turn to Intercept V244

9) As seen in Figure 7-24, V244 is now the active flight plan leg.

Figure 7-24 V244 Now Active Leg

10) At Lamar VOR (LAA) V263 will be intercepted. See Figure 7-25.

Figure 7-25 HYS to LAA Leg Active

11) ATC grants clearance to proceed direct to OPSHN intersection to begin the arrival procedure. ATC advises to expect an altitude of 10,000 feet at OPSHN.

a) Press the **FMS** Knob to activate the cursor.

b) Turn the large **FMS** Knob to select OPSHN in the flight plan list.

c) Press the **Direct-to** (D▸) Key. The Direct-to Window is now displayed as shown in Figure 7-26.

Figure 7-26 Direct To OPSHN

d) Turn the large **FMS** Knob to place the cursor in the VNV altitude field as shown in Figure 7-27.

Figure 7-27 Enter VNV Altitude

e) An altitude of 10,000 feet is entered as requested by ATC.

f) Press the **ENT** Key. The cursor is now displayed in the VNV offset field as shown in Figure 7-28.

Figure 7-28 Enter VNV Offset Distance

g) Enter the offset, or distance from the waypoint at which the selected altitude will be reached. In this case, three miles prior to OPSHN is entered. In other words, the G1000 will give vertical guidance so the aircraft will arrive at an altitude of 10,000 feet three miles prior to OPSHN.

h) Press the **ENT** Key twice to activate the direct-to. Note, in Figure 7-29, the magenta arrow indicating the direct-to OPSHN after the offset waypoint for OPSHN. The preceding offset waypoint indicates the offset distance and altitude that was previously entered. The remaining waypoints in the loaded arrival procedure have no database specified altitudes, therefore, dashes are displayed. Keep the CDI centered and maintain a track along the magenta line to OPSHN.

NOTE: *If the loaded arrival procedure has waypoints with altitude constraints retrieved from the database that will be used as is, the altitude must be manually accepted by placing the cursor over the desired altitude, then pressing the **ENT** Key. The altitude will now be displayed as light blue meaning it will now be used by the system to determine vertical speed and deviation guidance.*

Figure 7-29 Direct-to Active

12) While proceeding to OPSHN, the LPV approach to runway 35R is preferred and will be used.

a) Press the **PROC** Key to display the Procedures Window.

b) 'SELECT APPROACH' should be highlighted as shown in Figure 7-30.

Figure 7-30 Proceudures Window

c) Press the **ENT** Key. A list of available approaches for the destination airport will be displayed as in Figure 7-31.

Figure 7-31 List of Available Approaches

d) Turn either **FMS** Knob to select the LPV approach for 35R as shown in Figure 7-31.

e) Press the **ENT** Key. A list of available transitions for the selected approach is displayed as shown on Figure 7-32.

Figure 7-32 List of Available Transitions

e) Turn either **FMS** Knob to select the desired transition. In this case, the Initial Approach Fix (IAF) at HABUK will be used.

f) Press the **ENT** Key.

g) With 'LOAD?' highlighted, again press the **ENT** Key. The selected approach is added to the flight plan as seen in Figure 7-33.

Figure 7-33 Loaded Approach

13) Note the altitude constraints associated with each of the approach waypoints as seen in Figure 7-33. These altitudes are loaded from the database and are initially displayed as white text, indicating these values will not be used in computing vertical deviation guidance. The altitude values must be designated for use by the pilot if they are to be used in computing vertical guidance.

a) Press the **FMS** Knob to activate the cursor.

b) Turn the large **FMS** Knob to place the cursor in the altitude field associated with the IAF at HABUK as in Figure 7-34.

ACTIVE FLIGHT PLAN
KMKC / KCOS
DTK DIS ALT
FSHER 352° 9.8NM _____FT
PYNON 352° 11.9NM _____FT
Approach - KCOS-RNAV 35RGPS LPV
HABUK iaf 021° 5.9NM 9000FT
FALUR 261° 5.0NM 8600FT
CEGIX faf 351° 6.0NM 7800FT
RW35R map 351° 5.1NM
6368FT 348° 0.4NM 6370FT
MOGAL mahp 10000FT
HOLD 168° 6.0NM
CURRENT VNV PROFILE
ACTIVE VNV WPT 10000FT at OPSHN -3NM
VS TGT -796FPM FPA -3.0°
VS REQ _____FPM TIME TO TOD 30:50
V DEV _____FT

Figure 7-34 Designate HABUK Altitude Constraint

c) Press the **ENT** Key. Note the altitude is now displayed as light blue text (Figure 7-35), indicating that the value will now be used in computing vertical guidance. The G1000 will be using baro corrected altitude when giving vertical guidance to these waypoints.

d) Turn the large **FMS** Knob to select the altitude constraint associated with FALUR as seen in Figure 7-35.

ACTIVE FLIGHT PLAN
KMKC / KCOS
DTK DIS ALT
FSHER 352° 9.8NM 10000FT
PYNON 352° 11.9NM 10000FT
Approach - KCOS-RNAV 35RGPS LPV
HABUK iaf 021° 5.9NM 9000FT
FALUR 261° 5.0NM 8600FT
CEGIX faf 351° 6.0NM 7800FT
RW35R map 351° 5.1NM
6368FT 348° 0.4NM 6370FT
MOGAL mahp 10000FT
HOLD 168° 6.0NM
CURRENT VNV PROFILE
ACTIVE VNV WPT 10000FT at OPSHN -3NM
VS TGT -796FPM FPA -3.0°
VS REQ _____FPM TIME TO TOD 29:57
V DEV _____FT

Figure 7-35 Designate FALUR Altitude Constraint

e) Press the **ENT** Key to designate this altitude constraint value for use in computing vertical guidance. This altitude value will now be displayed as light blue text. Note that altitude values are now filled in for waypoints back to where the previous altitude value was entered for OPSHN.

Altitude constraint values associated with the Final Approach Fix (FAF) and waypoints beyond the FAF cannot be designated for vertical guidance. These altitude values will always be displayed as white text, as in Figure 7-36. Vertical guidance to the FAF and on to the Missed Approach Point (MAP) is given using the WAAS GPS altitude source, therefore, the displayed altitude values are for reference only.

ACTIVE FLIGHT PLAN
KMKC / KCOS
DTK DIS ALT
FSHER 352° 9.8NM 10000FT
PYNON 352° 11.9NM 10000FT
Approach - KCOS-RNAV 35RGPS LPV
HABUK iaf 021° 5.9NM 9000FT
FALUR 261° 5.0NM 8600FT
CEGIX faf 351° 6.0NM 7800FT
RW35R map 351° 5.1NM
6368FT 348° 0.4NM 6370FT
MOGAL mahp 10000FT
HOLD 168° 6.0NM
CURRENT VNV PROFILE
ACTIVE VNV WPT 10000FT at OPSHN -3NM
VS TGT -796FPM FPA -3.0°
VS REQ _____FPM TIME TO TOD 29:49
V DEV _____FT

Figure 7-36 Vertical Guidance is Active to the FAF

14) As the aircraft approaches OPSHN, it may be desirable to adjust how fast, or steep, the upcoming descent will be. The default Flight Path Angle (FPA) is -3.0 degrees and a required vertical speed will be computed to maintain the -3.0 FPA. To change the vertical flight path, perform the following steps.

a) Press the **VNV PROF** Softkey to place the cursor in the target vertical speed field (VS TGT) as shown in Figure 7-37.

b) At this point, the descent vertical speed can be selected, or the FPA can be selected. Turn the large **FMS** Knob to select the desired selection field, then turn the small **FMS** Knob to enter the desired value.

Note the information now displayed in the 'CURRENT VNV PROFILE' box. Also, note the offset waypoint and gray circle are now displayed on the map. The gray circle marks the Top of Descent (TOD). In this example, vertical guidance will be provided at the TOD that will result in a -3.0 degree FPA descent to an altitude of 10,000 feet upon reaching the offset waypoint.

Figure 7-37 Adjusting the Descent

c) Press the **ENT** Key.

15) As seen in Figure 7-38, the aircraft is approaching TOD. Note the target vertical speed required to reached the selected altitude. The Vertical Deviation Indicator (VDI) and the Required Vertical Speed Indicator (RVSI) are now displayed on the PFD as shown in Figure 7-39.

Figure 7-38 Approaching Top of Descent (TOD)

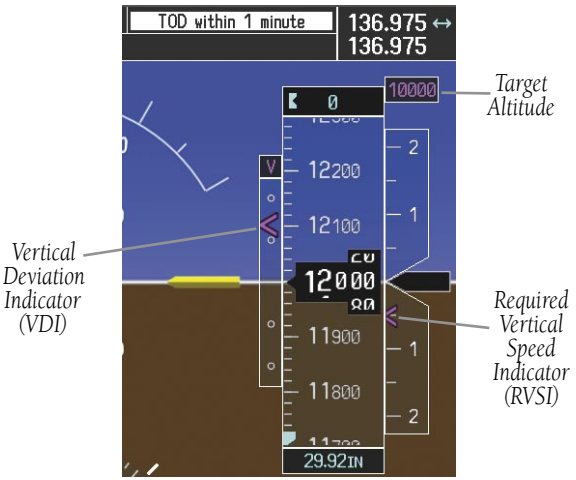

Figure 7-39 VDI & RVSI Upon Reaching Top of Descent (TOD)

16) Upon reaching TOD, a descent vertical speed is established which places the VSI pointer in line with the RVSI as shown in Figure 7-40.

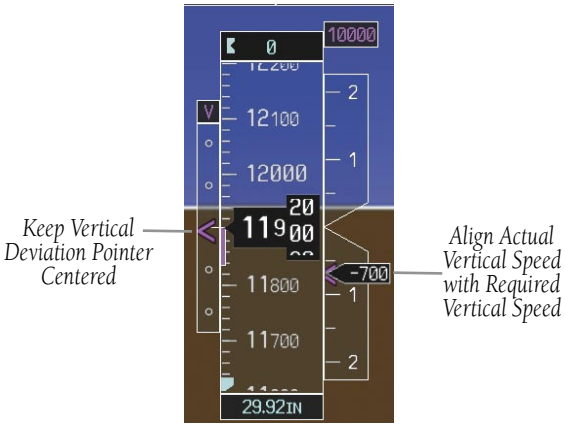

Figure 7-40 VDI & RVSI Showing Correctly Established Descent

17) When the aircraft is one minute from the bottom of descent (BOD) this will be annunciated as shown in Figure 7-41. Upon reaching the offset waypoint for OPSHN, the aircraft will be at 10,000 feet.

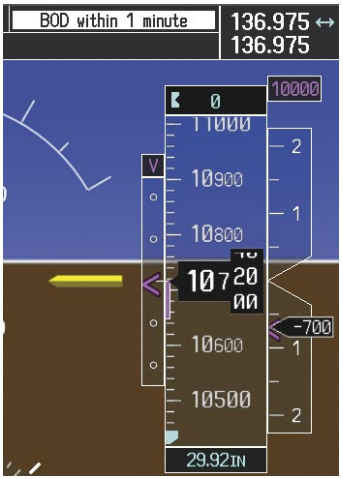

Figure 7-41 Approaching Bottom of Descent (BOD) at OPSHN Offset Waypoint

18) The aircraft is approaching OPSHN. The upcoming turn and next heading will be annunciated at the top left of the PFD as seen in Figure 7-42. Initiate the turn and maneuver the aircraft on a track through the turn radius to intercept the magenta line for the OPSHN to FSHER leg and center the CDI.

Figure 7-42 Turn to intercept OPSHN to FSHER Leg

19) After passing OPSHN, the next leg of the arrival will turn magenta as shown in Figure 7-43. The magenta arrow in the flight plan list now indicates the OPSHN to FSHER leg of the arrival procedure is now active.

Figure 7-43 Tracking the OPSHN to FSHER Leg

20) The flight continues through the arrival procedure to PYNON (see Figure 7-44). At a point 31 nautical miles from the destination airport, the phase of flight scaling for the CDI will change to Terminal Mode and is annunciated by displaying 'TERM' on the HSI.

There will be a descent to HABUK in the next leg. Note the TOD point on the map. Annunciations for the upcoming turn and descent, as well as the VDI and RVSI, appear on the PFD as the flight progresses.

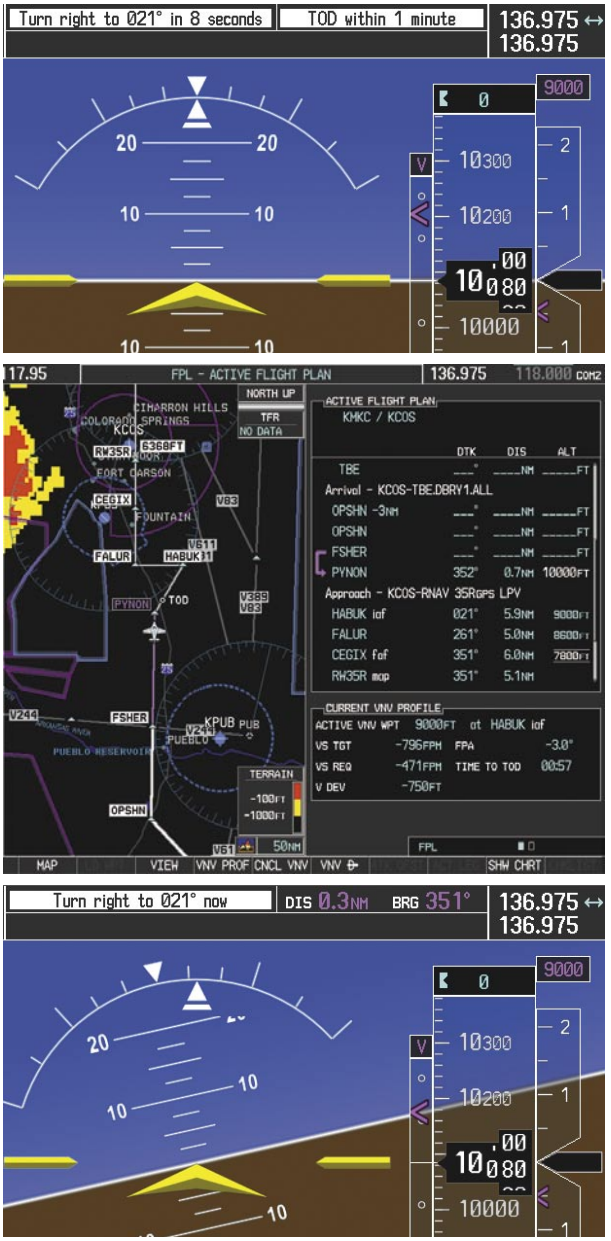

Figure 7-44 Approaching PYNON

21) Upon passing PYNON the approach procedure will automatically become active. The approach may be activated at any point to proceed directly to the IAF. In this example, the aircraft has progressed through the final waypoint of the arrival and the flight plan has automatically sequenced to the IAF as the active leg, activating the approach procedure (see Figure 7-45).

Figure 7-45 Approach Leg is Now Active

To manually activate the approach procedure, perform the following steps:

a) Press the **PROC** Key.

b) Turn the large **FMS** Knob to highlight 'ACTIVATE APPROACH' as shown in Figure 7-46.

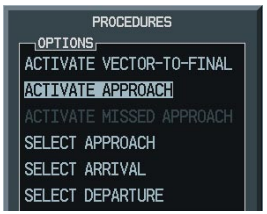

Figure 7-46 Activate Missed Approach

c) Press the **ENT** Key to activate the approach.

22) The IAF is the next waypoint. At the TOD, establish a descent vertical speed as previously discussed in Step 16. The aircraft altitude will be 9,000 feet upon reaching HABUK.

Figure 7-47 Descending Turn to the Initial Approach Fix (IAF)

23) After crossing FALUR the next waypoint is the FAF. The flight phase changes to LPV on the HSI indicating the current phase of flight is in Approach Mode and the approach type is LPV. CDI scaling changes accordingly and is used much like a localizer when flying an ILS approach. The RVSI is no longer displayed and the VDI changes to the Glidepath Indicator (as shown in Figure 7-48) when the final approach course becomes active.

Figure 7-48 Descending to the FAF

The descent continues through the FAF (CEGIX) using the Glidepath Indicator, as one would use a glideslope indicator, to obtain an altitude "AT" 7,800 feet at the FAF. Note the altitude restriction lines over and under (At) the altitude in the 'ALT' field in Figure 7-48.

24) After crossing CEGIX, the aircraft continues following the glidepath to maintain the descent to "AT or ABOVE" 6,370 feet at the Missed Approach Point (MAP) (RW35R) as seen in Figure 7-49.

Figure 7-49 Descending to the Missed Approach Point

In this missed approach procedure, the fix immediately following the MAP (in this case '6368FT') is not part of the published procedure. It is simply a fix that defines a leg which guides the aircraft along the runway centerline until the required altitude to make the first turn on the missed approach is exceeded. In this case, if the aircraft altitude is below the specified altitude (6,368 feet) after crossing the MAP, a direct-to will be established to this fix until an altitude of 6,368 feet reached. After reaching 6,368 feet, a direct-to will be established to the published fix (in this case MOGAL). If the aircraft altitude is above the specified altitude after crossing the MAP, a direct-to will be established to the published fix (MOGAL) to begin the missed approach procedure. The altitude constraint value defaults to 400 feet AGL when the fix is not part of the published procedure.

In some missed approach procedures this altitude fix may be part of the published procedure. For example, the procedure dictates a climb to 5,500 feet, then turn left and proceed to the Missed Approach Hold Point (MAHP). In this case, the altitude fix would be labeled '5500FT'. Again, if the aircraft altitude is lower than this prescribed altitude, a direct-to will be established to this fix when the missed approach procedure is activated.

25) Upon reaching the MAP, it is decided to execute a missed approach. Automatic waypoint sequencing is suspended past the MAP. Press the **SUSP** Softkey on the PFD to resume automatic waypoint sequencing through the missed approach procedure.

A direct-to is initiated to MOGAL, which is the Missed Approach Hold Point (MAHP) as seen in Figure 7-50. The aircraft is climbing to 10,000 feet. The CDI flight phase now changes from LPV to MAPR as seen on the HSI.

Figure 7-50 Missed Approach Active

26) The aircraft continues climbing to "AT or ABOVE" 10,000 feet at MOGAL. A holding pattern will be established at the MAHP (MOGAL) as shown in Figure 7-51.

Figure 7-51 Establishing the Holding Pattern

27) The aircraft maintains 10,000 feet while following the magenta line through the hold as in Figure 7-52.

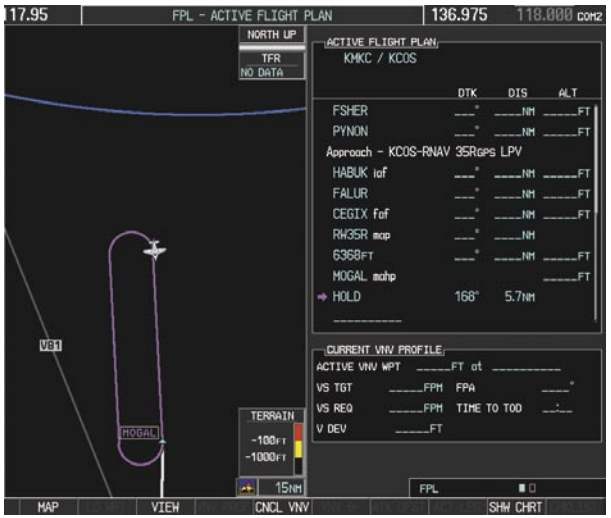

Figure 7-52 Hold Established

7.4 AIRPORT INFORMATION

Figure 7-53 Airport Information Page

Select the Airport Information Page

1) Turn the large **FMS** Knob to select the 'WPT' page group.

2) Turn the small **FMS** Knob to select the first rectangular page icon. Initially, information for the airport closest to the aircraft's present position is displayed.

Select an Airport from the Database

1) With the Airport Information Page displayed, press the **FMS** Knob to activate the cursor.

2) Enter the desired airport identifier.

Select an Airport from the Active Flight Plan

1) With the Airport Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the small **FMS** Knob to the left to display a list of flight plan airports as shown in Figure 7-54.

Figure 7-54 Flight Plan Airport List

3) Turn the large **FMS** Knob to select the desired airport.
4) Press the **ENT** Key.

Select a Nearest Airport

1) With the Airport Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the small **FMS** Knob to the left. Initially, a flight plan airport list is displayed as in Figure 7-54. The list is populated only when navigating a flight plan.

Figure 7-55 Nearest Airport List

3) Turn the small **FMS** Knob to the right to display the 'NRST' airports to the aircraft's current position as shown in Figure 7-55.
4) Turn the large **FMS** Knob to select the desired airport.
5) Press the **ENT** Key.

Select a Recently Entered Airport Identifier

1) With the Airport Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the small **FMS** Knob to the left. Initially, a flight plan waypoint list is displayed as in Figure 7-54. The list is populated only when navigating a flight plan.
3) Turn the small **FMS** Knob to the right to display the 'RECENT' airports as shown in Figure 7-56.

Figure 7-56 Recently Entered Airports List

4) Turn the large **FMS** Knob to select the desired airport.
5) Press the **ENT** Key.

Select an Airport by Facility Name or City Location

1) With the Airport Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to select the facility name or location (city) field.
3) Enter the desired facility name or city.
5) Press the **ENT** Key. If there are duplicate names in the database, a list is displayed from which to choose the desired location.
6) To remove the flashing cursor, press the **FMS** Knob.

Access Runway Information

1) With the Airport Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to place the cursor on the 'RUNWAYS' identifier field.
3) Turn the small **FMS** Knob in the direction of the green arrow to display the next runway for the selected airport. Continue turning the small **FMS** Knob to select the desired runway.
4) To remove the flashing cursor, press the **FMS** Knob.

Access Frequency Information

1) With the Airport Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to move the cursor to the Frequencies box.
3) Turn either **FMS** Knob to scroll through the list, placing the cursor on the desired frequency. If a listed frequency has sector or altitude restrictions, the frequency is preceded by an info ('i') designation. Press the **ENT** Key to view the information. The following may be displayed with the frequency:

   - 'TX' – transmit only
   - 'RX' – receive only
   - 'PT' – part time frequency

4) Press the **ENT** Key to place the selected frequency in the standby field of the COM or NAV box.
5) To remove the cursor, press the **FMS** Knob.

7.5 INTERSECTION INFORMATION

Select the Intersection Information Page

1) Turn the large **FMS** Knob to select the 'WPT' page group.
2) Turn the small **FMS** Knob to select the second rectangular page icon.

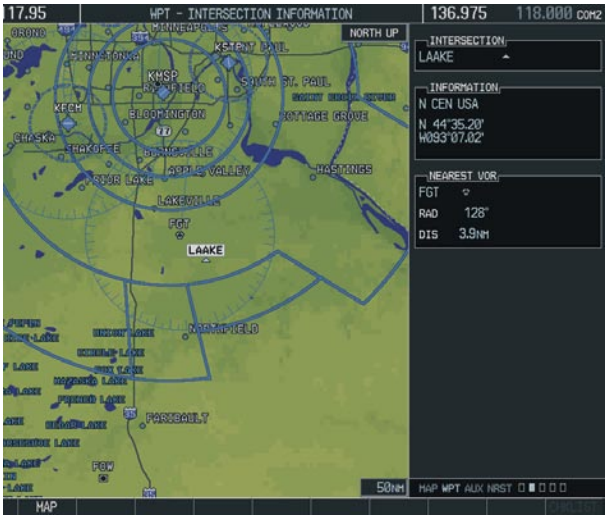

Figure 7-57 Intersection Information Page

Access Information on an Intersection

1) With the Intersection Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Enter an intersection identifier and press the **ENT** Key.
3) Press the **FMS** Knob to remove the flashing cursor.

7.6 NDB INFORMATION

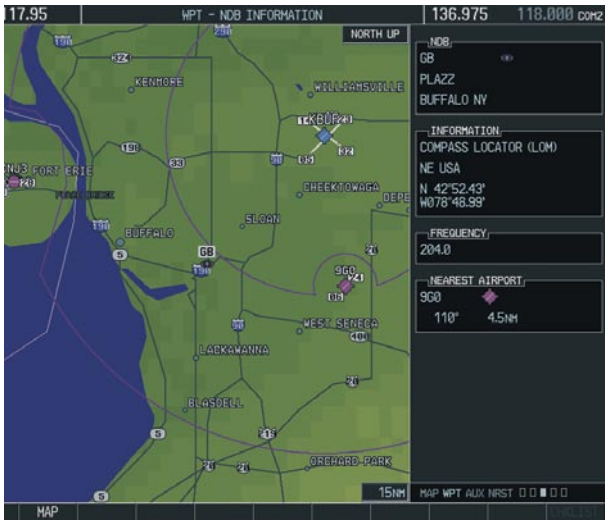

Figure 7-58 NDB Information Page

Select the NDB Information Page

1) Turn the large **FMS** Knob to select the 'WPT' page group.
2) Turn the small **FMS** Knob to select the third rectangular page icon

View Information on a Specific NDB

1) With the NDB Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to highlight the desired selection field (identifier, name or closest city).
3) Enter an identifier, name or city and press the **ENT** Key.
4) Press the **FMS** Knob to remove the flashing cursor.

7.7 VOR INFORMATION

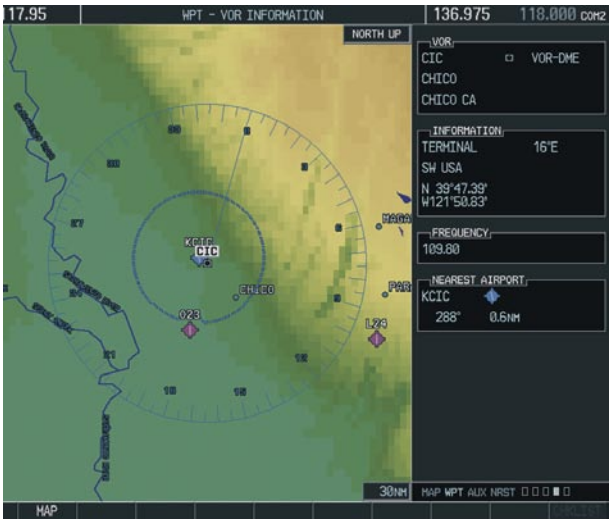

Figure 7-59 VOR Information Page

Select the VOR Information Page

1) Turn the large **FMS** Knob to select the 'WPT' page group.
2) Turn the small **FMS** Knob to select the fourth rectangular page icon.

Access Information on a VOR

1) With the VOR Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to highlight the desired selection field (identifier, name or closest city).
3) Enter an identifier, name or city and press the **ENT** Key.
4) The 'FREQUENCY' field is now highlighted. If desired, press the **ENT** Key to place the frequency in the NAV receiver standby field.
5) Press the **FMS** Knob to remove the flashing cursor.

7.8 USER WAYPOINT INFORMATION PAGE

See the Flight Planning section for a discussion on creating and modifying user defined waypoints.

7.9 NEAREST AIRPORTS

Figure 7-60 Nearest Airports Page

Nearest Airport Information on the MFD

Select the Nearest Airports Page

1) Turn the large **FMS** Knob to select the 'NRST' page group.
2) Turn the small **FMS** Knob to select the first rectangular page icon.

   Initially, the closest airport to the aircraft's present position is displayed.

Access Information on a Specific Airport

1) With the Nearest Airports Page displayed, press the **APT** Softkey to place the cursor in the 'NEAREST AIRPORTS' field. The first airport in the nearest airports list is highlighted.
2) Press the **FMS** Knob, then turn the large **FMS** Knob to highlight the desired airport.
3) Press the **FMS** Knob to remove the flashing cursor.

Access Runway Information for the Selected Airport

1) With the Nearest Airports Page displayed, press the **RNWY** Softkey to place the cursor in the 'RUNWAYS' field.
2) Turn the small **FMS** Knob to select the desired runway.
3) Press the **FMS** Knob to remove the flashing cursor.

Quickly Tune the COM Transceiver to a Nearby Airport Frequency

1) With the Nearest Airports Page displayed, press the **FREQ** Softkey to place the cursor in the 'FREQUENCIES' field.
2) Turn either **FMS** Knob to select the desired frequency.
3) Press the **ENT** Key. The selected frequency is placed in the COM standby frequency field.
4) Press the **Frequency Transfer** Key to place the frequency in the active field.
5) Press the **FMS** Knob to remove the flashing cursor.

Nearest Airports Information on the PFD

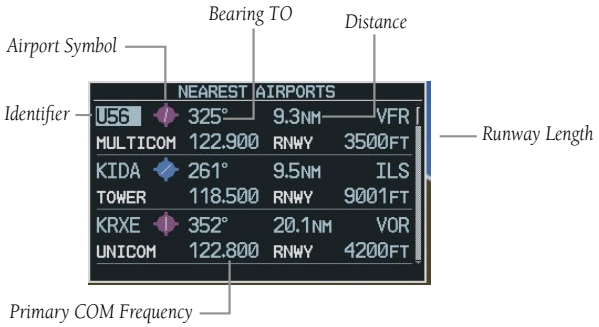

Figure 7-61 Nearest Airports Window

Press the **NRST** Softkey to display the PFD Nearest Airports Window.

View Information on a Specific Airport in the List

1) With the Nearest Airports Window displayed, turn either **FMS** Knob to place the cursor on the desired airport identifier.
2) Press the **ENT** Key to display airport information.
3) Press the **ENT** Key again (cursor is on 'BACK') to return to the list.

Load an Airport COM Frequency into the Active COM

1) With the Nearest Airports Window displayed, turn either **FMS** Knob to place the cursor on the desired airport frequency shown in the window.
2) Press the **ENT** Key and the selected frequency will be placed in the COM standby frequency field.
3) Press the **Frequency Transfer** Key to make the frequency the active frequency.

7.10 NEAREST INTERSECTIONS

Figure 7-62 Nearest Intersections Page

Select the Nearest Intersections Page

1) Turn the large **FMS** Knob to select the 'NRST' page group.
2) Turn the small **FMS** Knob to select the second rectangular page icon.

View Information on the Nearest Intersection

1) With the Nearest Intersections Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn either **FMS** Knob to select the desired intersection.
3) Press the **FMS** Knob to remove the flashing cursor.

7.11 NEAREST NDB

Figure 7-63 Nearest NDB Page

Select the Nearest NDB Page

1) Turn the large **FMS** Knob to select the 'NRST' page group.
2) Turn the small **FMS** Knob to select the third rectangular page icon.

Access Information on a Specific NDB

1) With the Nearest NDB Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn either **FMS** Knob to select the desired NDB. The remaining information on the Nearest NDB Page pertains to the selected NDB.
3) Press the **FMS** Knob to remove the flashing cursor.

7.12 NEAREST VOR

Figure 7-64 Nearest VOR Page

Select the Nearest VOR Page

1) Turn the large **FMS** Knob to select the 'NRST' page group.
2) Turn the small **FMS** Knob to select the fourth rectangular page icon.

View Information on the Nearest VOR

1) With the Nearest VOR Page displayed, press the **VOR** Softkey to place the cursor in the 'NEAREST VOR' box.
2) Turn either **FMS** Knob to select a VOR.
3) Press the **FMS** Knob to remove the flashing cursor.

Select and Load a VOR Frequency

1) With the Nearest VOR Page displayed, press the **FREQ** Softkey to highlight the VOR frequency in the 'FREQUENCY' field.
2) Press the **ENT** Key. The selected VOR frequency is placed in the NAV standby frequency field.

3) Press the **FMS** Knob to remove the flashing cursor.

7.13 NEAREST USER WAYPOINT

Figure 7-65 Nearest User Waypoints Page

Select the Nearest User Waypoint Page

1) Turn the large **FMS** Knob to select the 'NRST' page group.
2) Turn the small **FMS** Knob to select the fifth rectangular page icon.

Select a Nearest User Waypoint

1) With the Nearest User Waypoint Page displayed, press the **FMS** Knob to activate the cursor. If any previously entered User Waypoints are within 200 nm, these will be displayed with the closest listed first.
2) Turn either **FMS** Knob to select the desired waypoint. The remaining information on the Nearest User Waypoint Page pertains to the selected Nearest User Waypoint.
3) Press the **FMS** Knob to remove the flashing cursor.

7.14 NEAREST FREQUENCIES

Figure 7-66 Nearest Frequencies Page

Select the Nearest Frequencies Page

1) Turn the large **FMS** Knob to select the 'NRST' page group.
2) Turn the small **FMS** Knob to select the sixth rectangular page icon.

Select and Load the Nearest ARTCC, FSS, or Weather Frequency

1) With the Nearest Frequencies Page displayed, press the **ARTCC, FSS,** or **Wx** Softkey to place the cursor in the appropriate field.
2) Turn the **FMS** Knobs to select the desired facility or frequency.
3) Press the **ENT** Key to load the frequency into the COM frequency standby field.
4) Press the **FMS** Knob to remove the flashing cursor.

7.15 NEAREST AIRSPACES

Figure 7-67 Nearest Airspaces Page

Select the Nearest Airspaces Page

1) Turn the large **FMS** Knob to select the 'NRST' page group.
2) Turn the small **FMS** Knob to select the seventh rectangular page icon.

Airspace Alerts Box

- If the projected course takes the aircraft inside an airspace within the next ten minutes, 'Ahead' is displayed.
- If the aircraft is within two nautical miles of an airspace and the current course takes the aircraft inside, 'Ahead < 2 nm' is displayed.
- If the aircraft is within two nautical miles of an airspace and the current course will not take the aircraft inside, 'Within 2 nm' is displayed.
- If the aircraft has entered an airspace, 'Inside' is displayed.

View Additional Details for a Listed Airspace

1) With the Nearest Airspace Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to scroll through the list, highlighting the desired airspace.
3) Press the **ALERTS** Softkey to place the cursor in the 'AIRSPACE ALERTS' field.
4) Turn either **FMS** Knob to select the desired airspace.
5) Press the **FMS** Knob to remove the flashing cursor.

View and Quickly Load the Frequency for a Controlling Agency

1) With the Nearest Airspace Page displayed, press the **FREQ** Softkey to place the cursor in 'FREQUENCIES' field.
2) Turn either **FMS** Knob to select the desired frequency.
3) Press the **ENT** Key to load the frequency into the COM frequency standby field.
4) Press the **FMS** Knob to remove the flashing cursor.

SECTION 8: FLIGHT PLANNING

The following discussions pertain to the Multi Function Display, unless otherwise indicated.

8.1 USER DEFINED WAYPOINTS

Figure 8-1 User WPT Information Page

Select the User WPT Information Page

1) Turn the large **FMS** Knob to select the 'WPT' page group.
2) Turn the small **FMS** Knob to select the fifth rectangular page icon.

Create a New User Waypoint

1) With the User Waypoint Information Page displayed, press the **NEW** Softkey. A waypoint is created at the current aircraft position.
2) Turn the small **FMS** Knob to enter first character of the waypoint name.
3) Turn the large **FMS** Knob to move the cursor to the next character field.
4) Repeat steps 2 and 3 until the desired name is entered.
5) Press the **ENT** Key.
6) Press the **ENT** Key a again to accept the new waypoint identifier.
7) The cursor is now in the 'REFERENCE WAYPOINTS' field. If desired, the waypoint can be defined by a reference waypoint. Turn the **FMS** Knobs to enter the position coordinates or the radial and distance from the reference waypoint.
8) Press the **FMS** Knob to remove the flashing cursor.

Modify a User Waypoint

1) With the User Waypoint Information Page displayed, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to move the cursor to the desired field and turn the small **FMS** Knob to make changes.
3) Press the **ENT** Key to accept the changes.
4) Press the **FMS** Knob to remove the flashing cursor.

Delete a User Waypoint

1) Select the User Waypoint Information Page and press **MENU** to display the User Waypoint Information Page Options or press the **DELETE** Softkey.
2) Turn the large **FMS** Knob to select 'Delete User Waypoint' and press the **ENT** Key. The message 'Would you like to delete the user waypoint' is displayed. With 'YES' highlighted, press the **ENT** Key.

Create User Waypoints from the Navigation Map Page

1) With the Navigation Map Page displayed, push the **Joystick** to activate the panning function. The target pointer is displayed at the present aircraft position.
2) Move the **Joystick** to place the pointer at the desired position
3) Press the **ENT** Key. The User Waypoint Information Page is now displayed with the captured position.
4) Turn the **FMS** Knobs to select a waypoint name.
5) Press the **ENT** Key to accept the selected name. The first reference waypoint field is highlighted.
6) If desired, turn the **FMS** Knobs to enter the identifier of the reference waypoint and the radial and distance to the reference waypoint. Press the **ENT** Key to accept.
7) Press the **FMS** Knob to remove the flashing cursor.

8.2 VIEWING THE ACTIVE FLIGHT PLAN

Press the **FPL** Key.

Figure 8-2 Active Flight Plan Window on the PFD

Figure 8-3 Active Flight Plan Page on the MFD

8.3 ACTIVATE A STORED FLIGHT PLAN

1) Press the **FPL** Key and turn the small **FMS** Knob to display the Flight Plan Catalog Page.

Figure 8-4 Flight Plan Catalog Page

2) Press the **FMS Knob** to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired flight plan and press the **ACTIVE** Softkey.
4) With 'OK' highlighted, press the **ENT** Key to activate the flight plan. To cancel the flight plan

activation, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

8.4 ACTIVATE A FLIGHT PLAN LEG

1) From the Active Flight Plan Page, press the **FMS** Knob to activate the cursor and turn the large **FMS** Knob to highlight the desired destination waypoint.
2) Press the **ACT LEG** Softkey (using MFD only).

   OR
3) Press the **MENU** Key, select the 'Activate Leg' option from the page menu and press the **ENT** Key. This step must be used when activating a leg from the PFD.
4) With 'Activate' highlighted, press the **ENT** Key.



Figure 8-5 Activate Flight Plan Leg Confirmation

8.5 STOP NAVIGATING A FLIGHT PLAN

1) Press the **FPL** Key to display the Active Flight Plan Page.
2) Press the **MENU** Key to display the Page Menu window.

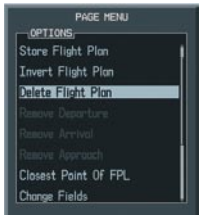

Figure 8-6 Delete Flight Plan

3) Turn the large **FMS** Knob to highlight 'Delete Flight Plan' and press the **ENT** Key. With 'OK' highlighted, press the **ENT** Key to deactivate the flight plan. This will not delete the stored flight plan, only the active flight plan.



Figure 8-7 Delete Flight Plan Confirmation

8.6 INVERT ACTIVE FLIGHT PLAN

1) From the Active Flight Plan Page, press the **MENU** Key to display the Page Menu.
2) Turn the large **FMS** Knob to highlight 'Invert Flight Plan' and press the **ENT** Key. The original flight plan remains intact in its flight plan catalog storage location.
3) With 'OK' highlighted, press the **ENT** Key to invert the flight plan.

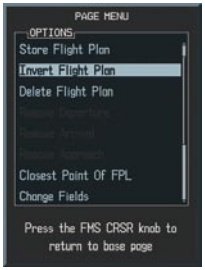

Figure 8-8 Invert Flight Plan

Figure 8-9 Invert Flight Plan Confirmation

8.7 CREATE A NEW FLIGHT PLAN

Create a New Flight Plan Using the MFD

1) Press the **FPL** Key and turn the small **FMS** Knob to display the Flight Plan Catalog Page.
2) Press the **NEW** Softkey to display a blank flight plan page for the first empty storage location.

Figure 8-10 Create FPL on MFD

3) Turn the small **FMS** Knob to display the Waypoint Information Window.
4) Turn the small **FMS** Knob to the right enter the first character of the identifier of the departure waypoint. Turning the knob to the left will access the FPL, NRST, and RECENT waypoint list.
5) Turn the large **FMS** Knob to move the cursor to the next character field. Repeat steps 4 and 5 until the desired identifier has been entered.

Figure 8-11 Waypoint Info Window

6) Press the **ENT** Key.
7) Repeat step number 3, 4, and 5 to enter the identifier for each additional flight plan waypoint.
8) When all waypoints have been entered, press the **FMS** Knob to return to the Flight Plan Catalog Page. The new flight plan is now in the list.

Create a New Flight Plan Using the PFD

NOTE: *A flight plan cannot be entered using the PFD if another flight plan is active.*

NOTE: *After the first leg is entered (using the PFD only), it is immediately activated.*

1) Press the **FPL** Key, then press the **FMS** Knob to activate the cursor.
2) Turn the small **FMS** Knob to enter the first letter of the destination waypoint identifier. Turn the large **FMS** Knob to the right to move the cursor to the next character position.
3) Repeat step 2 to spell out the rest of the waypoint identifier.
4) Press the **ENT** Key and the cursor is now ready for entering of the next flight plan waypoint.
5) Repeat steps 2 through 4 to enter the identifier for each additional flight plan waypoint.
6) Once all waypoints have been entered, press the **FMS** Knob remove the cursor. The new flight plan is now active.

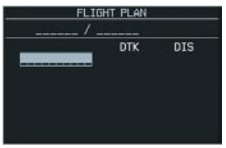

Figure 8-12 Creating Flight Plan on the PFD

8.8 ENTER AN AIRWAY IN A FLIGHT PLAN

1) Press the **FPL** Key to display the active flight plan or display a stored flight plan.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the waypoint before which the airway will be entered.

Figure 8-13 Airway Insertion Point

4) Turn the small **FMS** Knob to display the Waypoint Information Window and begin entering the desired airways entry point.

Figure 8-14 Load Airway Entry Point

5) When the desired entry point is entered, press the **ENT** Key.

Figure 8-15 Airway Entry Point Loaded

6) Turn the small **FMS** Knob to display the Waypoint Information Window.

Figure 8-16 Display Waypoint Information Window

7) Press the **LD AIRWY** Softkey. A list of available airways is now displayed.

Figure 8-17 Select Desired Airway

8) Turn either **FMS** Knob to highlight the desired airway.

9) Press the **ENT** Key. A list of available exits is now displayed.

10) Turn either **FMS** Knob to highlight the desired exit point.

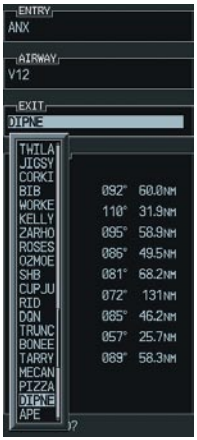

Figure 8-18 Select Desired Exit Point

11) With the desired exit point highlighted, press the **ENT** Key.

12) With 'LOAD?' highlighted, press the **ENT** Key.

Figure 8-19 Airway Added to Flight Plan

8.9 LOAD A DEPARTURE

See the Procedures section for a discussion on loading and activating departure procedures.

8.10 LOAD AN ARRIVAL

See the Procedures section for a discussion on loading and activating arrival procedures.

8.11 LOAD AN APPROACH

See the Procedures section for a discussion on loading and activating approach procedures.

8.12 REMOVE A DEPARTURE, ARRIVAL, APPROACH, OR AIRWAY FROM A FLIGHT PLAN

1) With the Active or Stored Flight Plan Page displayed, press the **FMS** Knob to activate the cursor.

2) Turn the large **FMS** Knob to highlight the title for the approach, departure, arrival, or airway to be deleted. Titles appear in white directly above the procedure's waypoints.

3) Press the **CLR** Key to display a confirmation window. With 'OK' highlighted, press the **ENT** Key to remove the selected procedure or airway.

8.13 STORE A FLIGHT PLAN

1) After creating a flight plan on either the PFD or MFD, it may be saved by pressing the **MENU** Key.
2) Turn the large **FMS** Knob to highlight 'Store Flight Plan' and press the **ENT** Key.
3) With 'OK' highlighted, press the **ENT** Key to store the flight plan.

Figure 8-20 Store Flight Plan Confirmation

8.14 EDIT A STORED FLIGHT PLAN

1) Press the **FPL** Key and turn the small **FMS** Knob to display the Flight Plan Catalog Page.
2) Press the **FMS** Knob to activate the cursor.
3) Turn the large **FMS** Knob to highlight the desired flight plan and press the **ENT** Key.
4) Turn the large **FMS** Knob to place the cursor in the desired locations for entering changes.
5) Turn the **FMS** Knobs to make the desired changes, then press the **ENT** Key.
6) Press the **FMS Knob** to return to the Flight Plan Catalog Page.

8.15 DELETE A WAYPOINT FROM THE FLIGHT PLAN

1) With either the Active or Stored Flight Plan displayed, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to select the waypoint to be deleted.
3) Press the **CLR** Key to display a 'REMOVE (Wpt Name)' confirmation window.



Figure 8-21 Remove Waypoint Confirmation

4) With 'OK' highlighted, press the **ENT** Key to remove the waypoint. To cancel the delete request, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.
5) Once all changes have been made, press the **FMS** Knob to remove the cursor.

8.16 INVERT AND ACTIVATE A STORED FLIGHT PLAN

1) From the Flight Plan Catalog Page, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to highlight the desired flight plan.
3) Press the **INVERT** Softkey. 'Invert and activate stored flight plan?' will be displayed.
4) With 'OK' highlighted, press the **ENT** Key. The selected flight plan is now inverted and activated. The original flight plan remains intact in its flight plan catalog storage location.

8.17 COPY A FLIGHT PLAN

1) From the Flight Plan Catalog press the **FMS** Knob to activate the cursor
2) Turn the large **FMS** Knob to highlight the flight plan to be copied.
3) Press the **COPY** Softkey.
4) A 'Copy to flight plan #?' confirmation window is displayed. With 'OK' highlighted, press the **ENT** Key to copy the flight plan. To cancel, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

8.18 DELETE A FLIGHT PLAN

1) From the Flight Plan Catalog Page, press the **FMS** Knob to activate the cursor.
2) Turn the large **FMS** Knob to highlight the flight plan to be deleted.
3) Press the **DELETE** Softkey.
4) A 'Delete flight plan #?' confirmation window is displayed. With 'OK' highlighted, press the **ENT** Key to delete the flight plan. To cancel, turn the large **FMS** Knob to highlight 'CANCEL' and press the **ENT** Key.

8.19 GRAPHICAL FLIGHT PLAN CREATION

1) Press the **FPL** Key to display the Active Flight Plan Page.
2) Press the **Joystick** to activate the map pointer. Use the **Joystick** to move the pointer to the desired point on the map to be inserted as a waypoint in the flight plan.
3) Press the **LD WPT** Softkey. The selected waypoint will be inserted at the end of the flight plan. The default user waypoint naming is USR000, USR001, USR002 and so on.
4) If the selected waypoint is to be placed elsewhere in the flight plan, press the **FMS** Knob to activate the cursor. Waypoints are inserted *ABOVE* the cursor.
5) After placing the cursor at the desired point in the list of waypoints, press the **LD WPT** Softkey.
6) To change the user waypoint name, follow the procedure for modifying a user waypoint.

8.20 TRIP PLANNING

1) Turn the large **FMS** Knob to select the 'AUX' page group.
2) Turn the small **FMS** Knob to select the first rectangular page icon.
3) The current page mode is displayed at the top of the page: 'AUTOMATIC' or 'MANUAL'. To change the page mode, press the **AUTO** or **MANUAL** Softkey.

Figure 8-22 Trip Planning Page

4) For Direct-to planning, press the **WPTS** Softkey and verify that the starting waypoint field indicates 'P.POS' (present position). If necessary, press the **MENU** Key and select 'Set WPT to Present Position' to display 'P.POS'. Press the **ENT** Key and the flashing cursor moves to the ending waypoint field. Turn the **FMS** Knobs to enter the identifier of the ending waypoint and press the **ENT** Key to accept the waypoint. OR,

5) For point-to-point planning, turn the **FMS** Knobs to enter the identifier of the starting waypoint. Once the waypoints identifier is entered, press the **ENT** Key to accept the waypoint. The flashing cursor moves to the ending waypoint. Again, turn the **FMS** Knobs to enter the identifier of the ending waypoint and press the **ENT** Key to accept the waypoint. OR,

6) For flight plan leg planning, press the **FPL** Softkey (at the bottom of the display) and turn the small **FMS** Knob to select the desired flight plan (already stored in memory), by number. Turn the large **FMS** Knob to highlight the 'LEG' field and turn the small **FMS** Knob to select the desired leg of the flight plan, or select 'CUM' to apply trip planning calculations to the entire flight plan. Selecting 'FPL 00' will display an active flight plan. If an active flight plan is selected, 'REM' will be an available option to display planning data for the remainder of the flight plan.

NOTE: *The Page Mode must be set to MANUAL to perform the following steps.*

7) Turn the large **FMS** Knob to highlight the departure time (DEP TIME) field.

NOTE: *The departure time on the Trip Planning Page is used for preflight planning. Refer to the Utility Page for the actual flight departure time.*

8) Turn the **FMS** Knobs to enter the departure time. Press the **ENT** Key when finished. (Departure time may be entered in local or UTC time, depending upon system settings).

9) Turn the **FMS** Knobs to enter the fuel flow. Press the **ENT** Key when finished. Note that in automatic page mode, fuel flow is provided by the system.

10) The flashing cursor moves to the fuel on board field. Turn the **FMS** Knobs to modify the fuel on board. Press the **ENT** Key when finished. In 'AUTOMATIC' mode, fuel onboard is provided by the entry made in 'GAL REM' on the EIS System Page.

11) The flashing cursor moves to the calibrated airspeed field. Turn the **FMS** Knobs to enter a calibrated airspeed. Press the **ENT** Key when finished.

Blank Page

SECTION 9: PROCEDURES

9.1 ARRIVALS AND DEPARTURES

Load and Activate a Departure Procedure

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to hightlight 'SELECT DEPARTURE'.
3) Press the **ENT** Key.
4) If a flight plan is active, the departure airport will be displayed as the default. A list of available departures is also displayed. If no flight plan is active, use the **FMS** Knobs to enter the identifier of the desired airport. Press the **ENT** Key.
5) Turn the large **FMS** Knob to highlight the Departure field. Turn the small **FMS** Knob to display a list of available departures.
6) Turn either **FMS** Knob to select the desired departure and press the **ENT** Key.

Figure 9-1 Select Departure

7) A list of runways may be displayed for the departure. Turn either **FMS** Knob to select the desired runway and press the **ENT** Key.
8) A list of available transitions is displayed for the departure. Turn either **FMS** Knob to highlight the desired transition waypoint and press the **ENT** Key.

Figure 9-2 Select Departure Transition

9) With 'LOAD?' highlighted, press the **ENT** Key. The departure will be active when the flight plan is active.

Load and Activate An Arrival Procedure

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to hightlight 'SELECT ARRIVAL'.
3) Press the **ENT** Key.
4) If a flight plan is active, the destination airport will be displayed as the default. A list of available arrivals is also displayed. If no flight plan is active, use the **FMS** Knobs to enter the identifier of the desired airport. Press the **ENT** Key.
5) Turn the large **FMS** Knob to highlight the Arrival field. Turn the small **FMS** Knob to display a list of available arrivals.
6) Turn either **FMS** Knob to select the desired arrival and press the **ENT** Key.

Figure 9-3 Select Arrival

7) A second window is displayed listing available transitions for the arrival. Turn either **FMS** Knob to highlight the desired transition waypoint and press the **ENT** Key.

Figure 9-4 Select Arrival Transition

8) A third window is displayed listing the available runways. Turn either **FMS** Knob to select the desired runway and press the **ENT** Key.

Figure 9-5 Select Arrival Runway

9) With 'LOAD?' highlighted, press the **ENT** Key. If a flight plan is active, the selected arrival procedure is inserted after the destination airport and becomes part of the active flight plan. To begin flying the arrival procedure, initiate a Direct-to at the desired arrival waypoint in the flight plan. If no flight plan is active when the arrival is loaded, the arrival procedure will become the active flight plan.

9.2 APPROACHES

Not all approaches in the database are approved for GPS use. When selecting an approach, a "GPS" designation to the right of the procedure name indicates the procedure can be flown using the GPS receiver. Some procedures will not have this designation, meaning the GPS receiver can be used for supplemental navigation guidance only. If the GPS receiver cannot be used for primary guidance, the appropriate navigation receiver must be used for the selected approach (e.g., VOR or ILS). The final course segment of ILS approaches, for example, must be flown by tuning the Nav receiver to the proper frequency and selecting that Nav receiver on the CDI.

The G1000 WAAS GPS allows for flying the following approaches:

APPROACH TYPE	DESCRIPTION
LNAV	Non-precision GPS approach. Lateral navigation only.
LNAV+V	Non-precision GPS approach. Lateral navigation with advisory vertical guidance when available.
LNAV/VNAV	Lateral navigation with vertical guidance. Similar to localizer and glideslope, but lateral and vertical integrity limits are larger.
LPV	Localizer Performance with Vertical guidance. Similar to the LNAV/VNAV, but has lower minima.

Load and/or Activate an Approach Procedure

1) Press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'SELECT APPROACH'.
3) Press the **ENT** Key.
4) If a flight plan is active, the destination airport will be displayed as the default. A list of available approaches is also displayed. If no flight plan is active, use the **FMS** Knobs to enter the identifier of the desired airport. Press the **ENT** Key.
5) Turn the large **FMS** Knob to highlight the Approach field. Turn the small **FMS** Knob to display a list of available approaches.

Figure 9-6 Selecting an Approach Procedure

6) Turn either **FMS** Knob to highlight the desired approach. Press the **ENT** Key.
7) The cursor will move to the TRANSITIONS field. Turn the large **FMS** Knob to highlight the desired transition waypoint and press the **ENT** Key. (The "Vectors" option assumes vectors will be received to the final course segment of the approach and will provide navigation guidance relative to the final approach course.)

Figure 9-7 Selecting an Approach Transition

8) Turn the large **FMS** Knob to highlight 'Activate?' and press the **ENT** Key to activate the approach. Selecting 'Load?' will add the procedure to the flight plan without immediately using it for navigation guidance.

Activate An Approach in the Active Flight Plan

1) With the Navigation Map Page displayed, press the **PROC** Key.
2) Turn the large **FMS** Knob to highlight 'ACTIVATE APPROACH'.
3) Press the **ENT** Key. The approach procedure is now active.

Blank Page

SECTION 10: HAZARD AVOIDANCE

10.1 CUSTOMIZING THE HAZARD DISPLAYS ON THE NAVIGATION MAP

1) With the Navigation Map Page displayed, press the **MENU** Key to display the Navigation Map Page Menu. The cursor flashes on the 'Map Setup' option.
2) Press the **ENT** Key. The Map Setup Menu is displayed. Turn the small **FMS** Knob to select the 'Weather' group (Figure 10-2) to customize the display of weather features. Select 'Traffic' to customize the display of traffic.
3) Press the small **FMS** Knob to return to the Navigation Map Page.

Figure 10-1 Page Menu

Figure 10-2 Map Setup Menu

Figure 10-3 Map Setup Group List

10.2 STORMSCOPE® (OPTIONAL)

WARNING: *Weather information on the G1000 MFD is approved for weather avoidance only, not weather penetration. Refer to the WX-500 Pilot's Guide for detailed operation.*

Displaying Stormscope Lightning Data on the Navigation Map Page

1) Press the **MAP** Softkey.
2) Press the **STRMSCP** Softkey. Press the **STRMSCP** Softkey again to remove Stormscope Lightning Data from the Navigation Map Page.

Figure 10-4 In-Flight Navigation Map Page Displaying Stormscope Lightning Data

Lightning Age	Symbol
Strike is less than 6 seconds old	
Strike is between 6 and 60 seconds old	
Strike is between 1 and 2 minutes old	
Strike is between 2 and 3 minutes old	

At a map range of less than 25 nm, Stormscope lightning data is not displayed, but can still be present. The presence of Stormscope lightning data is indicated by the annunciation 'LTNG < 25 nm' in the upper right corner.

Figure 10-5 Lightning Display Range Annunciation

Select 'cell' or 'strike' as the Stormscope lightning mode:

1) With the Weather Group selected, press the **ENT** Key. The cursor flashes on 'STRMSCP LTNG'.
2) Turn the large **FMS** Knob to select 'STRMSCP MODE'.
3) Turn either **FMS** Knob to display the 'Cell/Strike' window.
4) Turn either **FMS** Knob to select 'Cell' or 'Strike'. Press the **ENT** Key.
5) Push the **FMS** Knob to return to the Navigation Map Page.

Clear Stormscope lightning data from the Navigation Map Page:

1) Press the **MENU** Key (with the Navigation Map Page displayed).
2) Turn either **FMS** Knob to highlight the 'Clear Lightning Data' field and press the **ENT** Key.

Stormscope Page

1) Turn the large **FMS** Knob until the Map Page group is selected.
2) Turn the small **FMS** Knob until the Stormscope Page is selected.

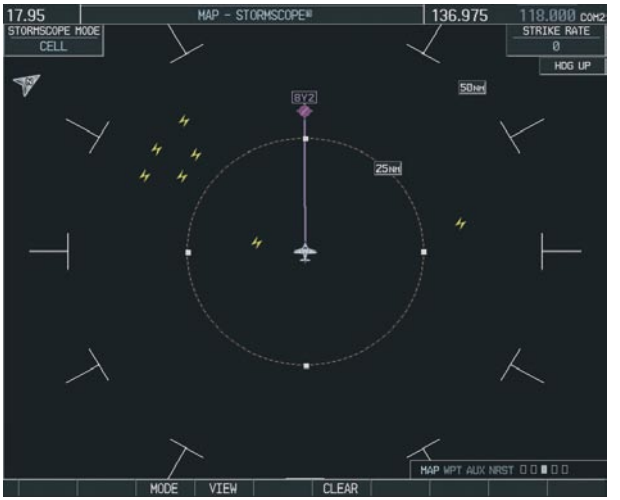

Figure 10-6 Stormscope Page

Change the Stormscope lightning mode between 'cell' and 'strike':

1) Select the Stormscope Page.
2) Press the **MODE** Softkey. The **CELL** and **STRIKE** Softkeys are displayed. Press the **CELL** Softkey to display 'CELL' data or press the **STRIKE** Softkey to display 'STRIKE' data. 'CELL' or 'STRIKE' is displayed in the mode box located in the upper left corner of the Stormscope Page.

***NOTE:** "Cell mode" uses a clustering program to identify clusters of electrical activity that indicate cells.*

Change the viewing mode between 360° and 120°:

1) Select the Stormscope Page.
2) Press the **VIEW** Softkey. The **360** and **ARC** Softkeys are displayed. Press the **360** Softkey to display a 360° viewing are or press the **ARC** Softkey to display a 120° viewing area.

   Press the **CLEAR** Softkey to remove all Stormscope lightning data from the display.

10.3 XM WEATHER (OPTIONAL)

WARNING: *Use of XM weather for hazardous weather penetration is not recommended. Weather information provided by XM Radio Service is approved only for weather avoidance, not penetration.*

1) From the Navigation Map Page, press the **MAP** Softkey.
2) Press the **NEXRAD or XM LTNG** Softkey to display the desired weather. Press the applicable softkey again to remove weather data from the Navigation Map Page.

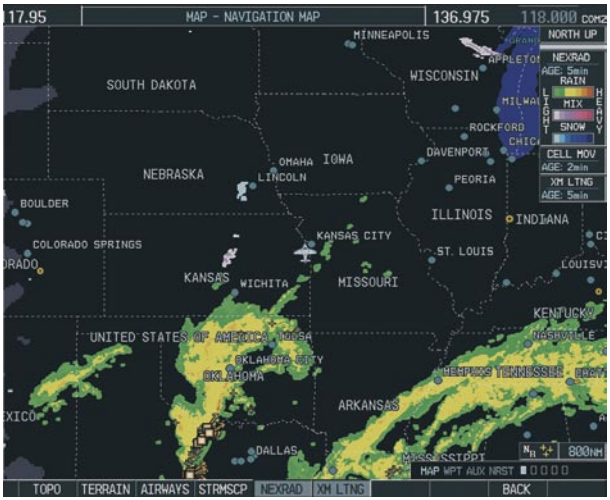

Figure 10-7 Navigation Map Page Displaying NEXRAD Weather

Displaying METAR and TAF information on the Airport Information Page

Display METAR and TAF text on the Airport Information Page:

1) Turn the large **FMS** Knob to select the WPT Page Group.
2) Turn the small **FMS** Knob to select the Airport Information Page.
3) Press the **WX** Softkey to display METAR and TAF text (METAR and TAF information is updated every 12 minutes).

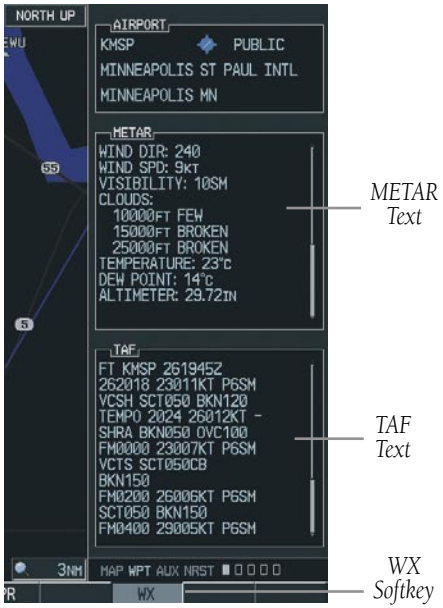

Figure 10-8 METAR and TAF Text Displayed on the Airport (Weather) Information Page

Displaying Weather on the Weather Data Link Page

Select the Weather Data Link Page:

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Weather Data Link Page.
3) Press the available softkeys to select the desired XM weather product.
4) Press the **LEGEND** Softkey to view the legends for the selected products. If necessary, turn either **FMS** Knob to scroll through the list. Press the small **FMS** Knob or the **ENT** Key to return to the map.

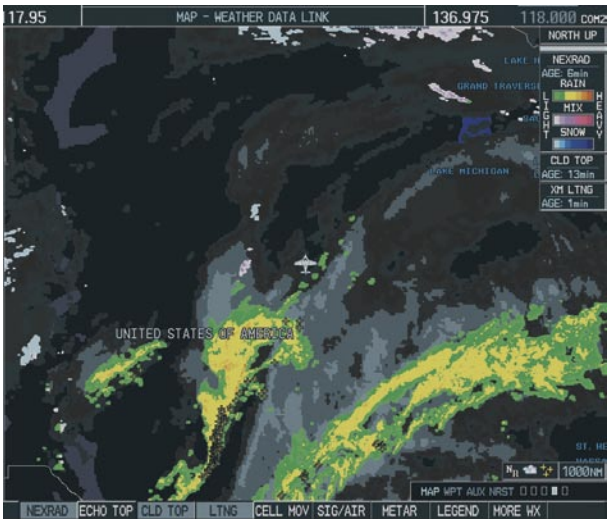

Figure 10-9 Weather Data Link Page

NEXRAD – press the **NEXRAD** Softkey to show NEXRAD weather and radar coverage information. Areas where radar coverage is not available will be shown in grayish-purple. The display is updated every five minutes.

NEXRAD Limitations

Certain limitations exist regarding the NEXRAD radar displays. Some, but not all, are listed here:

- NEXRAD base reflectivity does not provide sufficient information to determine cloud layers or precipitation characteristics (hail vs. rain, etc).
- An individual NEXRAD site cannot depict high altitude storms at close ranges and has no information about storms directly over the site.
- The resolution of displayed NEXRAD data is 4 square kilometers. Therefore, when zoomed in on the display, each square block is 2 kilometers on each side. The intensity level reflected by the square will be the highest level sampled within the square area.

ECHO TOP – press the **ECHO TOP** Softkey to show the location, elevation, and direction of the highest radar echo. This may not indicate the top of a storm or clouds, only the highest radar return echo. ECHO TOPS cannot be displayed along with NEXRAD and CLOUD TOPS. When ECHO TOPS is activated, NEXRAD and CLOUD TOPS are removed. Refer to the Legend for a description of the ECHO TOPS coding. The display is updated every 7.5 minutes.

CLD TOP – press the **CLD TOP** Softkey to show the cloud top altitude determined from satellite imagery. The display is updated every 15 minutes.

LTNG – pressing the **LTNG** Softkey shows the location of cloud-to-ground lightning strikes. The display is updated every five minutes.

NOTE: *Strikes depicted represent cloud to ground strikes within a 2 kilometer radius of the actual strike location. Therefore, the exact location of the strike is not displayed.*

CELL MOV – pressing the **CELL MOV** Softkey shows storm cell movement by displaying an arrow. pointing in the direction of predicted movement. The display is updated every 12 minutes.

SIG/AIR – pressing the **SIG/AIR** Softkey shows SIGMET and AIRMET information. The display is updated every 12 minutes.

METAR – press the **METAR** Softkey to graphically display METARs. METARS are shown as colored flags at airports providing METAR reports. The display is updated every 12 minutes.

MORE WX – press the **MORE WX** Softkey to display the following group of softkeys for additional weather control:

SFC – pressing the **SFC** Softkey for Surface Analysis shows current or forecast conditions. Forecasts are available for intervals of Current, 12, 24, 36, and 48 hours. Press the softkey corresponding to the desired forecast. The closest city forecast information is displayed in the legend. The display is updated every 12 minutes.

FRZ LVL – press the **FRZ LVL** Softkey to display contour lines for freezing levels. The display is updated every 12 minutes.

WIND – press the **WIND** Softkey to show wind speed and direction at a selected altitude from the ground up to 42,000 feet in 3,000 foot increments. After pressing the **WIND** Softkey, press the softkey corresponding to the desired winds aloft altitude. The display is updated every 12 minutes.

COUNTY – pressing the **COUNTY** Softkey provides specific public awareness and protection weather warnings for Tornado, Severe Thunderstorm, and Flood conditions provided by the National Weather Service (NWS). The display is updated every 5 minutes.

CYCLONE – pressing the **CYCLONE** Softkey shows the current location of cyclones (hurricanes and tropical storms) and their projected track at various time intervals. The update rate is every 12 minutes.

Map Panning Information – Weather Data Link Page

1) Push in the **Joystick** to display the panning arrow.
2) Move the **Joystick** to place the panning arrow on AIRMETs, TFRs, METARs, or SIGMETs. Press the **ENT** Key to display pertinent information for the selected product.

   Note that pressing the **ENT** Key when panning over an AIRMET or a SIGMET displays an information box that displays the text of the report. Panning over an airport with METAR information does not display more information but allows the user to press the **ENT** Key and select that Airport's Information Page to display the text of the report. Pressing the **ENT** Key when panning over a TFR displays TFR specific information.

Weather Products and Symbols

Figure 10-10 depicts the symbol for each weather product (read from left to right). When a weather product is active, the product symbol is displayed in the lower right of the screen.

- NEXRAD
- Cloud Top/Echo Top
- XM Lightning
- Cell Movement
- SIGMETs/AIRMETs
- METARs
- City Forecast
- Surface Analysis

- Freezing Levels
- Winds Aloft
- County Warnings
- Cyclone Warnings

Figure 10-10 Weather Product Symbols

The XM Information Page in the AUX Page Group will display the weather products available for the current subscription. A green box by the weather product means that it is available.

NOTE: *The* ***LOCK*** *Softkey on the AUX - XM INFORMATION page is used to save the GDL 69(A) activation data when the XM services are initially set up. It is not used during normal operation of the GDL 69(A), and it should have no adverse effects if inadvertently selected during flight. Refer to the GDL 69/69A XM Satellite Radio Activation Instructions (190-00355-04, Rev E or later) for further information.*

Weather Product Age

The age for each of the enabled products is displayed on the right side of the display. Times are based on GMT time when the data was assembled on the ground, not the time the data was received by the XM receiver. When the age of a weather product has exceeded half of the expiration time, the product time will change from light blue to amber in color.

Weather Product	Expires After (minutes)
SIGMETs/AIRMETs	60
City Forecasts	60
County Warnings	60
Cyclone Warnings	60
Echo Tops	30
Freezing Levels	60
METARs	90
Lightning	30
NEXRAD	30
Radar Coverage	30
Cell Movement	30
Surface Analysis	60
TFRs	60
Winds Aloft	60
TAFs	60
Clouds Tops	60

10.4 TRAFFIC INFORMATION SERVICE (TIS)

NOTE: *If the G1000 is configured to use the optional SkyWatch Traffic Advisory System, TIS will not be available for use.*

NOTE: *Traffic Information Service (TIS) is only available when the aircraft is within the service volume of a TIS capable terminal radar site.*

Displaying Traffic on the Traffic Map Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Traffic Map Page.
3) Press the **OPERATE** Softkey to begin displaying traffic. 'TIS OPERATIING' is displayed in the Traffic Mode field.
4) Press the **STANDBY** Softkey to place the system in the Standby Mode. 'TIS STANDBY' will be displayed in the Traffic Mode field.
5) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

If data is not received for a period longer than 6 seconds, the age of the present data will be displayed in the lower left of the screen along with the annuciation that the system has entered Coast Mode. The system will maintain the traffic display (up to 60 seconds) until the next data reception. If no data is received after 60 seconds, traffic will be removed from the display.

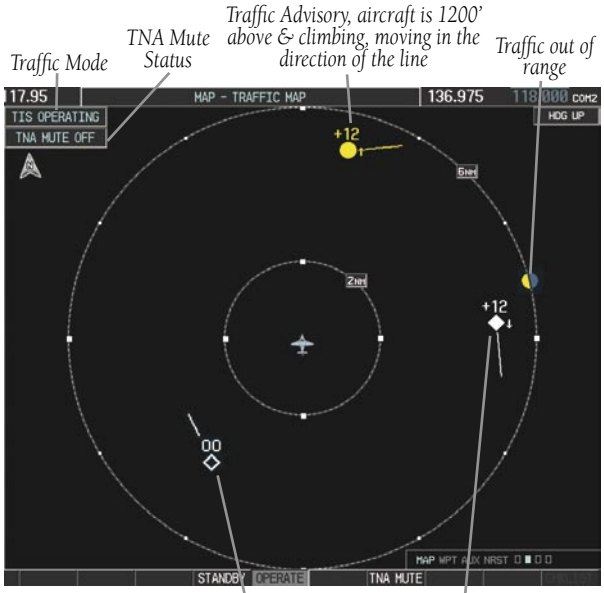
Traffic Mode
TNA Mute Status
Traffic Advisory, aircraft is 1200' above & climbing, moving in the direction of the line
Traffic out of range
17.95
MAP - TRAFFIC MAP
136.975
TIS OPERATING
TNA MUTE OFF
HDG UP
+12
6nm
2nm
+12
00
STANDBY
OPERATE
TNA MUTE
Last data update is older than 6 sec. resulting in Coast Mode
Traffic at same altitude, level flight & moving in the direction of the line
Proximity Traffic 1200' above & descending, moving in the direction of the line

Figure 10-11 Traffic Map Page

Displaying Traffic on the Navigation Map

1) Ensure TIS is operating. With the Navigation Map displayed, press the **MAP** Softkey.
2) Press the **TRAFFIC** Softkey. Traffic will now be displayed on the map.

TIS Voice Alert

When a Traffic Advisory (TA) is displayed, a voice alert "Traffic" is given.

"Traffic Not Available" will be heard whenever TIS service becomes unavailable. This alert can be muted by pressing the **TNA MUTE** Softkey. 'TNA MUTE ON' will be displayed in the upper left of the display.

10.5 SKYWATCH® TRAFFIC ADVISORY SYSTEM (TAS)(OPTIONAL)

Refer to the SkyWatch pilot's guide for a detailed discussion of the SkyWatch system.

Displaying Traffic on the Traffic Map Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the Traffic Map Page.
3) Press the **OPERATE** Softkey to begin displaying traffic. 'TAS OPERATING' is displayed in the Traffic Mode field.
4) Press the **ALT MODE** Softkey to change the altitude volume. Select the desired altitude volume by pressing the the **BELOW**, **NORMAL**, **ABOVE**, or **UREST** (unrestricted) Softkey. The selection is displayed in the Altitude Mode field.
5) Press the **STANDBY** Softkey to place the system in the Standby Mode. 'TAS STANDBY' will be displayed in the Traffic Mode field.
6) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

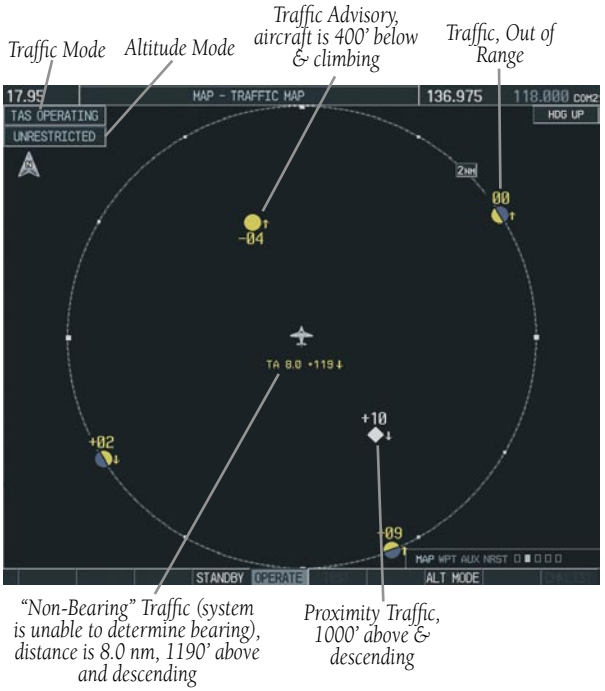

Figure 10-12 Traffic Map Page

Displaying Traffic on the Navigation Map

1) Ensure the SkyWatch system is operating. With the Navigation Map displayed, press the **MAP** Softkey.
2) Press the **TRAFFIC** Softkey. Traffic will now be displayed on the map.

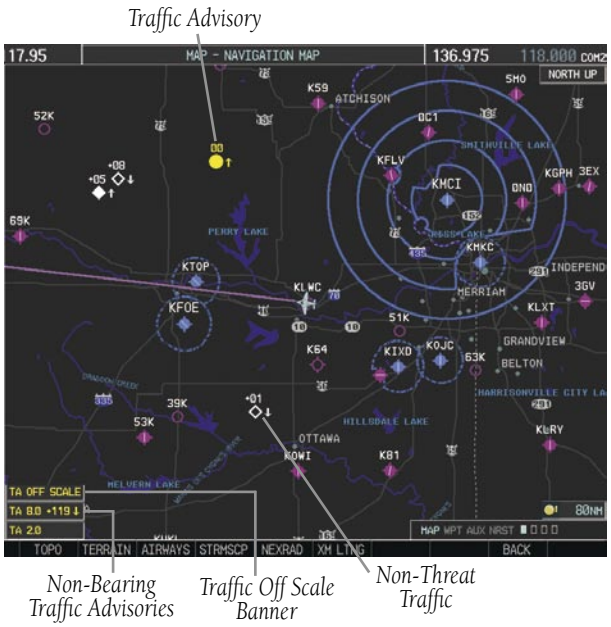

Figure 10-13 TAS Traffic on Navigation Map

10.6 TERRAIN AND OBSTACLE PROXIMITY

NOTE: Terrain data is not displayed when the aircraft latitude is greater than 75 degrees north or 60 degrees south.

Displaying Terrain and Obstacles on the Terrain Proximity Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the last rectangular page icon.
3) If desired, press the **VIEW** Softkey to access the **ARC** and **360** Softkeys. When the **ARC** Softkey is pressed, a radar-like 120° view is displayed. Press the **360** Softkey to return to the 360° default display.
4) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

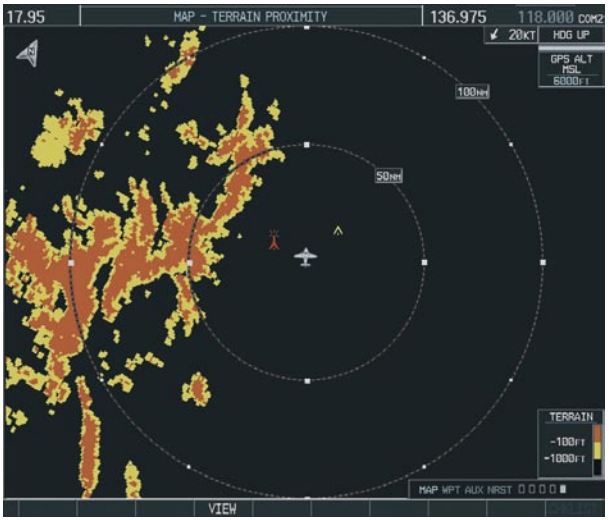

Figure 10-14 Terrain Proximity Page

Color	Indication
RED	Terrain/Obstacle at or within 100' below current aircraft altitude.
YELLOW	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.

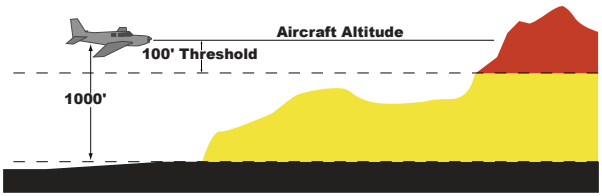

Unlighted Obstacle (Height is less than 1000' AGL)	Lighted Obstacle (Height is less than 1000' AGL)	Unlighted Obstacle (Height is greater than 1000' AGL)	Lighted Obstacle (Height is greater than 1000' AGL)

Figure 10-15 Obstacle Symbols

Displaying Terrain and Obstacles on the Navigation Map

1) With the Navigation Map displayed, press the **MAP** Softkey.
2) Press the **TERRAIN** Softkey. Terrain and obstacle proximity will now be displayed on the map.

10.7 TERRAIN AWARENESS & WARNING SYSTEM (TAWS) DISPLAY (OPTIONAL)

NOTE: *Terrain data is not displayed when the aircraft latitude is greater than 75 degrees north or 60 degrees south.*

NOTE: *TAWS operation is only available when the G1000 is configured for a TAWS-B installation.*

Displaying Terrain on the TAWS Page

1) Turn the large **FMS** Knob to select the Map Page Group.
2) Turn the small **FMS** Knob to select the TAWS Page.
3) If desired, press the **VIEW** Softkey to access the **ARC** and **360** Softkeys. When the **ARC** Softkey is pressed, a radar-like 120° view is displayed. Press the **360** Softkey to return to the 360° default display.
4) Rotate the **Joystick** clockwise to display a larger area or rotate counter-clockwise to display a smaller area.

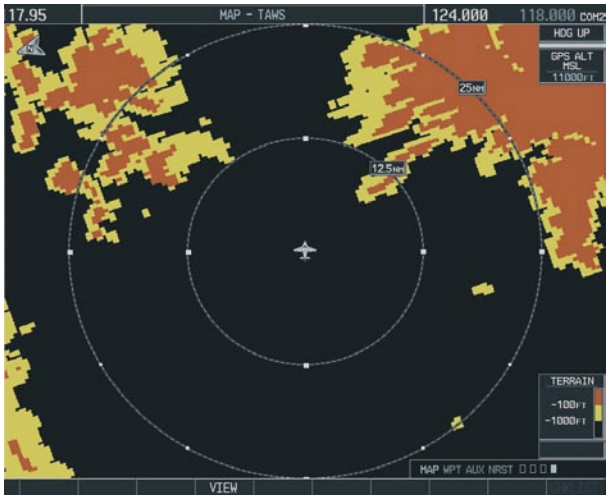

Figure 10-16 TAWS Page (360° View)

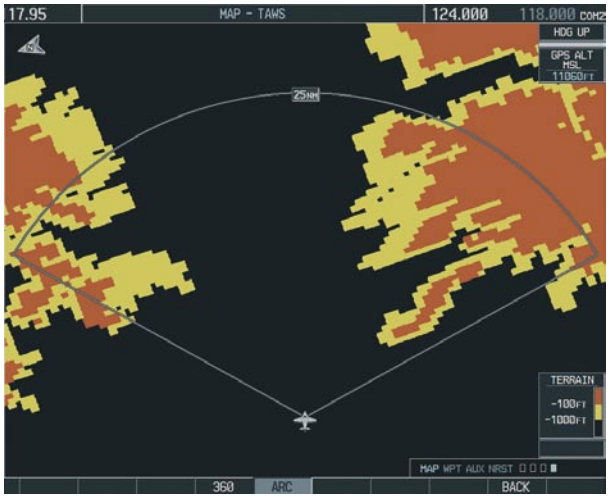

Figure 10-17 TAWS Page (ARC View)

Color	Terrain/Obstacle Location	Alert Level
Red	Terrain/Obstacle at or within 100' below current aircraft altitude.	WARNING
Yellow	Terrain/Obstacle between 100' and 1000' below current aircraft altitude.	CAUTION
Black	Terrain/Obstacle is more than 1000' below aircraft altitude.	NO DANGER

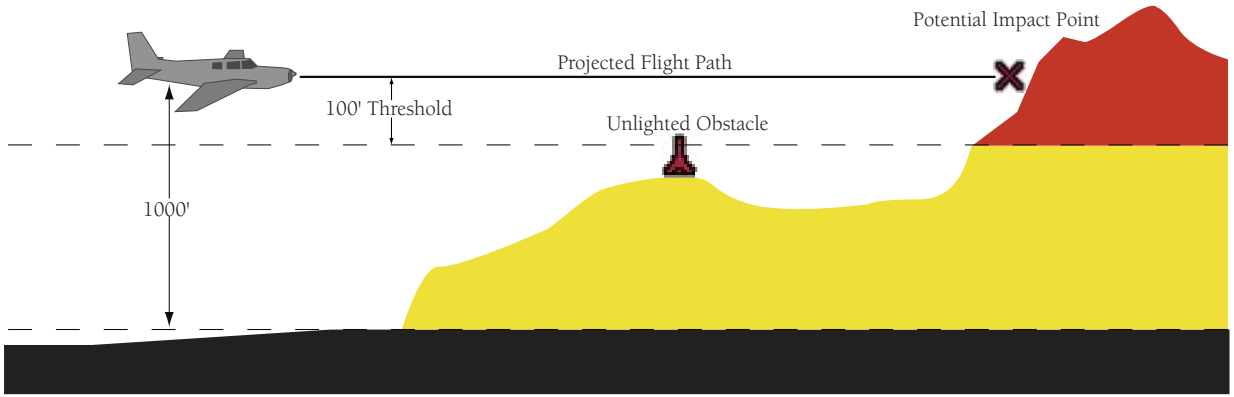

Enable/Disable Aviation Data

1) While the TAWS Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select "Show (or Hide) Aviation Data".
3) Press the **ENT** Key.

Figure 10-18 TAWS Page Menu

TAWS Inhibit

Flying VFR into an area where unique terrain exists could cause the system to annunciate a nuisance alert. When TAWS is inhibited, only FLTA and PDA alerts are disabled.

Inhibit TAWS:

1) While the TAWS Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select'Inhibit TAWS'.
3) Press the **ENT** Key.

Enable TAWS:

1) While the TAWS Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Enable TAWS'.
3) Press the **ENT** Key.

Manual System Test

A system test is automatically performed at power-up. After sucessful completion of the test, "***TAWS System Test, OK***" will be heard.

The system test may also be initiated manually, but only when the aircraft is on the ground. To manually verify proper operation of the aural and visual annunciations of the system, perform the following steps.

1) While the TAWS Page is displayed, press the **MENU** Key.
2) Turn the small **FMS** Knob to select 'Test TAWS'.
3) Press the **ENT** Key. During the test 'TAWS TEST' is displayed in the center of the TAWS Page.

   When all is in working order, "TAWS System Test, OK" will be heard.

Forward Looking Terrain Avoidance (FLTA)

The Forward Looking Terrain Avoidance alert is composed of two sub-functions:

Reduced Required Terrain Clearance (RTC) and Reduced Required Obstacle Clearance (ROC)

This provides alerts when the aircraft flight path is above terrain and/or obstacles, yet is projected to come within minimum clearance values outlined in the following table. When an RTC or ROC alert is issued, a potential impact point is displayed on the TAWS Page as a yellow or red 'X'.

Imminent Terrain Impact (ITI) and Imminent Obstacle Impact (IOI)

This provides alerts when the aircraft is below the elevation of terrain in the aircraft's projected path. ITI and IOI alerts are accompanied by a potential impact point displayed on the TAWS Page as a yellow or red 'X'. The alert is given when the projected vertical flight path is calculated to come within minimum clearance altitudes in the following table.

Phase of Flight	Level Flight	Descending
Enroute	700 ft.	500 ft.
Terminal	350 ft.	300 ft.
Approach	150 ft.	100 ft.
Departure	100 ft.	100 ft.

During the final approach phase of flight, RTC/ROC/ITI/IOI alerts are automatically inhibited when the aircraft is below 200 feet AGL while within 0.5 nm of the approach runway or is below 125 feet AGL while within 1 nm of the runway.

Premature Descent Alert (PDA)

A Premature Descent Alert is issued when the system detects that the aircraft is significantly below the normal approach path to a runway. The PDA alert mode functions only during descent to land.

PDA alerting begins when the aircraft is within 15 nm of the destination airport and ends when the aircraft is either 0.5 nm from the runway threshold OR is at an altitude of 125 feet AGL while within 1 nm of the threshold. During the final descent, algorithms will set a threshold for alerting based on speed, distance, and other parameters.

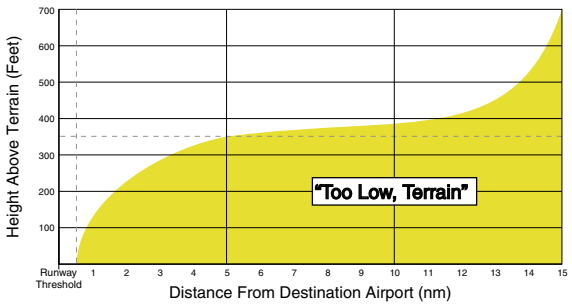

Figure 10-19 PDA Alerting

Excessive Descent Rate Alert (EDR)

The purpose of the Excessive Descent Rate alert is to provide suitable alerts when the aircraft is determined to be closing (descending) upon terrain at an excessive speed. Figure 10-20 displays the correlation between height above terrain and descent rate, resulting in the two EDR alerts. EDR alerts have two levels of severity, caution (sink rate) and warning (pull-up).

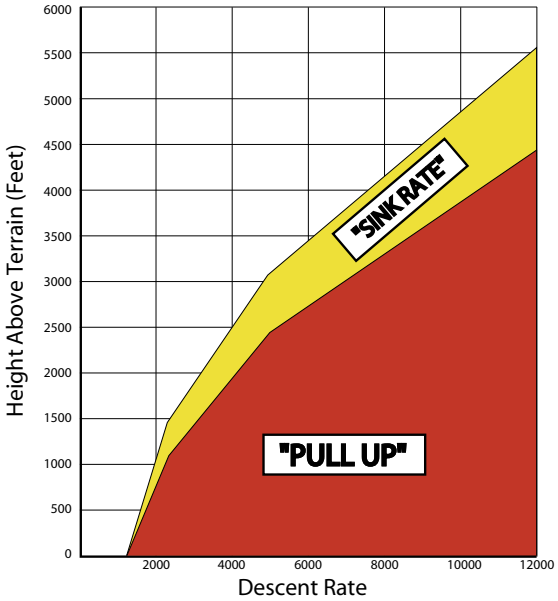

Figure 10-20 Excessive Descent Rate

Negative Climb Rate After Takeoff Alert (NCR)

The purpose of the Negative Climb Rate After Takeoff alert is to provide suitable alerts to the pilot when the system determines that the aircraft is losing altitude (closing upon terrain) after takeoff. The aural message "***Don't Sink***" is given for NCR alerts, accompanied by an annunciation and a pop-up terrain alert on the display. Figure 10-21 illustrates the envelope for alerts.

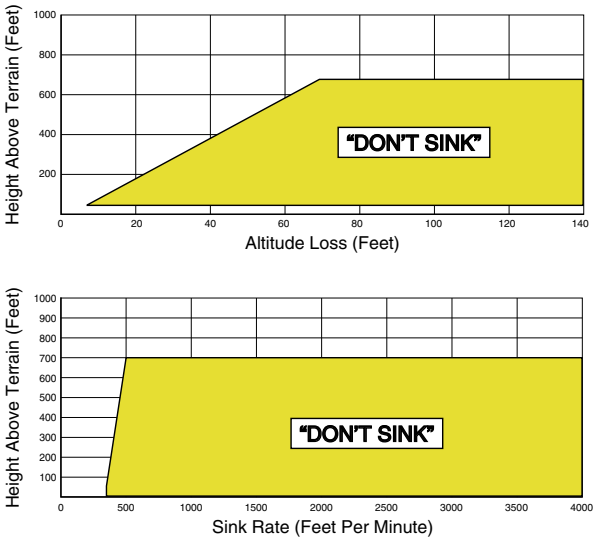

Figure 10-21 Negative Climb Rate

"Five-Hundred" Aural Alert

The purpose of the aural alert message "Five-hundred" is to provide an advisory alert to the aircrew that the aircraft is five-hundred feet above terrain. When the aircraft descends within 500 feet of terrain, the aural message "***Five-hundred***" is heard. There are no display annunciations or pop-up alerts that accompany the aural message.

Displaying Terrain and Obstacles on the Navigation Map

1) With the Navigation Map displayed, press the **MAP** Softkey.
2) Press the **TERRAIN** Softkey. Terrain and obstacle proximity will now be displayed on the map.

Pop-up Alerts

When the Navigation Map Page is displayed, and a terrain or obstacle alert is issued, a pop-up window is displayed with the appropriate alert.

Figure 10-23 Alert Pop-Up

Press the **ENT** Key to display the TAWS Page, or press the **CLR** Key to remain on the Navigation Map Page.

Unlighted Obstacle (Height is less than 1000' AGL)	Lighted Obstacle (Height is less than 1000' AGL)	Unlighted Obstacle (Height is greater than 1000' AGL)	Lighted Obstacle (Height is greater than 1000' AGL)	Potential Impact Points

Figure 10-22 TAWS Symbols

TAWS Alerts Summary

The following table shows the possible TAWS alert types with corresponding annunciations and aural messages.

Alert Type	PFD/MFD TAWS Page Annunciation	MFD Pop-Up Alert	Aural Message
Excessive Descent Rate Warning (EDR)	PULL UP	PULL-UP	"Pull Up"
Reduced Required Terrain Clearance Warning (RTC)	PULL UP	TERRAIN - PULL-UP or TERRAIN AHEAD - PULL-UP	"Terrain, Terrain; Pull Up, Pull Up" or "Terrain Ahead, Pull Up; Terrain Ahead, Pull Up"
Imminent Terrain Impact Warning (ITI)	PULL UP	TERRAIN AHEAD - PULL-UP or TERRAIN - PULL-UP	Terrain Ahead, Pull Up; Terrain Ahead, Pull Up" or "Terrain, Terrain; Pull Up, Pull Up"
Reduced Required Obstacle Clearance Warning (ROC)	PULL UP	OBSTACLE - PULL-UP or OBSTACLE AHEAD - PULL-UP	"Obstacle, Obstacle; Pull Up, Pull Up" or "Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up"
Imminent Obstacle Impact Warning (IOI)	PULL UP	OBSTACLE AHEAD - PULL-UP or OBSTACLE - PULL-UP	"Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up" or "Obstacle, Obstacle; Pull Up, Pull Up"
Reduced Required Terrain Clearance Caution (RTC)	TERRAIN	CAUTION - TERRAIN or TERRAIN AHEAD	"Caution, Terrain; Caution, Terrain" or "Terrain Ahead; Terrain Ahead"
Imminent Terrain Impact Caution (ITI)	TERRAIN	TERRAIN AHEAD or CAUTION - TERRAIN	"Terrain Ahead; Terrain Ahead" or "Caution, Terrain; Caution, Terrain"
Reduced Required Obstacle Clearance Caution (ROC)	TERRAIN	CAUTION - OBSTACLE or OBSTACLE AHEAD	"Caution, Obstacle; Caution, Obstacle" or "Obstacle Ahead; Obstacle Ahead"
Imminent Obstacle Impact Caution (IOI)	TERRAIN	OBSTACLE AHEAD or CAUTION - OBSTACLE	"Obstacle Ahead; Obstacle Ahead" or "Caution, Obstacle; Caution, Obstacle"
Premature Descent Alert Caution (PDA)	TERRAIN	TOO LOW - TERRAIN	"Too Low, Terrain"
Altitude Callout "500"	None	None	"Five-Hundred"
Excessive Descent Rate Caution (EDR)	TERRAIN	SINK RATE	"Sink Rate"
Negative Climb Rate Caution (NCR)	TERRAIN	DON'T SINK or TOO LOW - TERRAIN	"Don't Sink" or "Too Low, Terrain"

The following system status annunciations may also be issued.

Alert Type	PFD/MFD TAWS Page Annunciation	MFD Pop-Up Alert	Aural Message
TAWS System Test Fail	TAWS FAIL	None	"TAWS System Failure"
TAWS Alerting is disabled	TAWS INHB	None	None
No GPS position or excessively degraded GPS signal	TAWS N/A	None	"TAWS Not Available" "TAWS Availble" will be heard when sufficient GPS signal is re-established.
System Test in progress	TAWS TEST	None	None
System Test pass	None	None	"TAWS System Test OK"

Alert Annunciations

Figure 10-24 Alert Annunciation on the TAWS Page

Figure 10-25 Alert Annunciation on the PFD

SECTION 11: ABNORMAL OPERATION

11.1 REVERSIONARY MODE

Should a system detected failure occur in either display, the G1000 automatically enters Reversionary Mode. In Reversionary Mode, critical flight instrumentation is combined with engine instrumentation on the remaining display. Minimal navigation capability is available on the Reversionary Mode display.

11.2 ABNORMAL COM OPERATION

When a COM tuning failure is detected by the system, the emergency frequency (121.500 MHz) is automatically loaded into the active frequency field of the COM radio for which the tuning failure was detected. In the event of a dual display failure, the emergency frequency (121.500 MHz) automatically becomes the active frequency to the pilot through the pilot headset.

Normal PFD Display

Normal MFD Display

MFD in Reversionary Mode

Figure 11-1 G1000 Reversionary Mode: Failed PFD

11.3 UNUSUAL ATTITUDES

The PFD will 'declutter' when the aircraft enters an unusual attitude. Only the primary functions will be displayed in these situations.

The following information is removed from the PFD (and corresponding softkeys are disabled) when pitch exceeds +30°/-20° or bank exceeds 65°:

- Traffic Annunciations
- Flight director Command Bars
- Inset Map
- Temperatures
- DME Information Window
- Wind Data
- Selected Heading Box
- Selected Course Box
- Transponder Status Box
- System Time
- PFD Setup Menu
- Windows displayed in the lower right corner of the PFD:
  - Timer/References
  - Nearest Airports
  - Flight Plan
  - Messages
  - Procedures
- Barometric Minimum Descent Altitude Box
- Glideslope, Glidepath, and Vertical Deviation Indicators
- Altimeter Barometric Setting
- Selected Altitude
- VNV Target Altitude

Red extreme pitch warning chevrons pointing toward the horizon are displayed starting at 50 degrees above and 30 degrees below the horizon line.

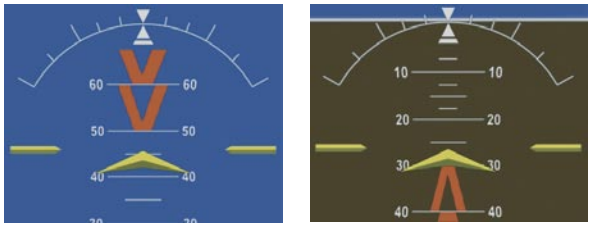

Figure 11-2 Extreme Pitch Indication

11.4 STORMSCOPE OPERATION WITH LOSS OF HEADING INPUT

If heading is lost, strikes and/or cells must be cleared manually after the execution of each turn. This is to ensure that the strike and/or cell positions are depicted accurately in relation to the nose of the aircraft.

11.5 HAZARD DISPLAYS WITH LOSS OF GPS POSITION

If GPS position is lost, or becomes invalid, selected hazards being displayed on the Navigation Map Page will be removed until GPS position is again established. The icons in the lower right of the screen, indicating the selected functions for display, will show an 'X', as shown in Figure 11-3.

Figure 11-3 Loss of Hazard Functions with Loss of GPS Position

11.6 DEAD RECKONING

While in Enroute or Oceanic phase of flight, if the G1000 detects an invalid GPS solution or is unable to calculate a GPS position, the system will automatically revert to Dead Reckoning (DR) Mode. In DR Mode, the G1000 uses its last-known position combined with continuously updated airspeed and heading data (when available) to calculate and display the aircraft's current estimated position.

NOTE: *Dead Reckoning Mode will only function in Enroute (ENR) or Oceanic (OCN) phase of flight. In all other phases, an invalid GPS solution will produce a "NO GPS POSITION" annunciation on the map and the G1000 will stop navigating in GPS Mode.*

DR Mode is indicated on the G1000 by the appearance of the letters 'DR' superimposed in yellow over the 'own aircraft' symbol as shown in Figure 11-4. In addition, 'DR' will be prominently displayed, also in yellow, on the HSI slightly above and to the right of the aircraft symbol on the CDI as shown in Figure 11-4. Also, the CDI deviation bar is removed from the display. Lastly, but at the same time, a 'GPS NAV LOST' alert message will appear on the PFD.

Normal navigation using GPS/WAAS source data will resume automatically once a valid GPS solution is restored.

It is important to note that estimated navigation data supplied by the G1000 in DR Mode may become increasingly unreliable and must not be used as a sole means of navigation. If while in DR Mode airspeed and/or heading data is also lost or not available, the DR function may not be capable of accurately tracking your estimated position and, consequently, the system may display a path that is different than the actual movement of the aircraft. Estimated position information displayed by the G1000 through DR while there is no heading and/or airspeed data available should not be used for navigation.

DR Mode is inherently less accurate than the standard GPS/WAAS Mode due to the lack of satellite measurements needed to determine a position. Changes in wind speed and/or wind direction will compound the relative inaccuracy of DR Mode. Because of this degraded accuracy, the crew must maintain position awareness using other navigation equipment until GPS-derived position data is restored.

CDI 'DR' Indication on PFD

Symbolic Aircraft (Map pages and Inset Map)

Figure 11-4 Dead Reckoning Indications

As a result of operating in DR Mode, all GPS-derived data will be computed based upon an estimated position and will be displayed as yellow text on the display to denote degraded navigation source information. This data includes the following:

- Navigation Status Box fields except Active Leg, TAS, and DTK
- GPS Bearing Pointer
- Wind data and pointers in the Wind Data Box on the PFD
- Track Bug
- All Bearing Pointer Distances
- Active Flight Plan distances, bearings, and ETE values

Also, while the G1000 is in DR Mode, the autopilot will not couple to GPS, and both TAWS and Terrain Proximity will be disabled. Additionally, the accuracy of all nearest information (airports, airspaces, and waypoints) will be questionable. Finally, airspace alerts will continue to function, but with degraded accuracy.

Blank Page

SECTION 12: ANNUNCIATIONS & ALERTS

*NOTE: The **PA32** Pilot's Operating Handbook supersedes information found in this document.*

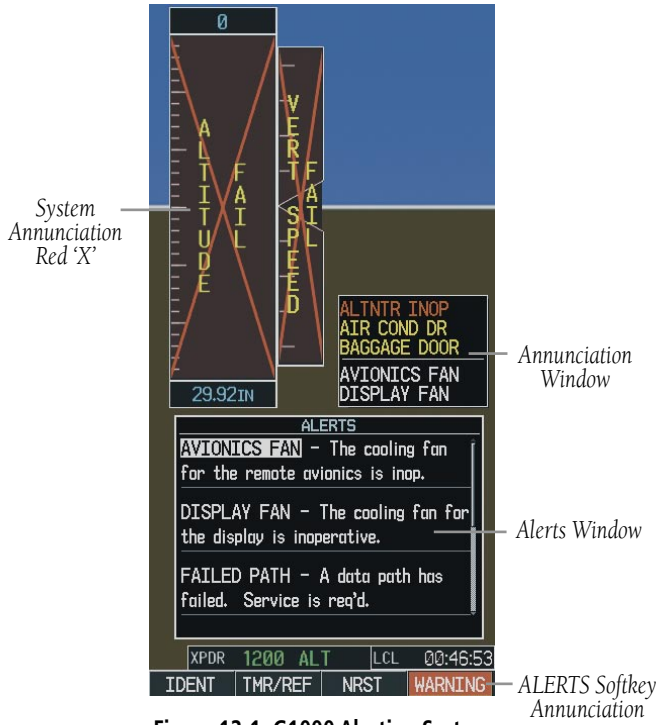

Figure 12-1 G1000 Alerting System

The G1000 Alerting System conveys alerts to the pilot using a combination of the following items:

- **Annunciation Window**: The Annunciation Window displays abbreviated annunciation text. The Annunciation Window is located to the right of the Altimeter and Vertical Speed Indicator on the PFD display (or the MFD if system is in Reversionary Mode). Up to 12 PA32 annunciations can be displayed simultaneously. A white horizontal line separates annunciations that are acknowledged from annunciations that are not yet acknowledged. Acknowledged annunciations are always below the line. Annunciations are displayed in order of priority from top to bottom. The highest priority annunciation is displayed at the top of the Annunciation Window.
- **Alerts Window:** The Alerts Window displays alert text messages. Up to 64 prioritized alerts can be displayed in the Alerts Window. Pressing the **ALERTS** Softkey displays the Alerts Window. Pressing the **ALERTS** Softkey again removes the Alerts Window from the display. When the Alerts Window is displayed, the pilot may use the large **FMS** Knob to scroll through the alert list. Higher priority alerts are displayed at the top of the window. Lower priority alerts are displayed at the bottom of the window. Active alerts are displayed in white text. Alerts that have become inactive will change to gray text. The **ALERTS** Softkey will flash if the state of a displayed alert changes or a new alert is displayed. The inactive alerts can be removed from the Alerts Window by pressing the flashing **ALERTS** Softkey.
- **ALERTS Softkey Annunciation**: When the Alerting System issues an alert, the **ALERTS** Softkey is used as a flashing annunciation to accompany an alert. During the alert, the **ALERTS** Softkey assumes a new label consistent with alert level (WARNING, CAUTION, or ADVISORY). Pressing the softkey annunciation acknowledges that the pilot is aware of the alert. The softkey then returns to the previous **ALERTS** label. The pilot can then press the **ALERTS** Softkey again to view alert text messages.

- **System Annunciations**: Typically, a large red 'X' appears in a window when a related LRU fails or detects invalid data.
- **Audio Alerting System:** The G1000 system issues audio alert tones when specific system conditions are met. See the Alert Levels Definitions section for more information.

12.1 ALERT LEVEL DEFINITIONS

The G1000 Alerting System, as installed in the Piper PA32 aircraft, uses three alert levels.

- **WARNING:** This level of alert requires immediate pilot attention. A warning alert is accompanied by an annunciation in the Annunciation Window. Warning text appearing in the Annunciation Window is RED. A warning alert is also accompanied by a flashing **WARNING** Softkey annunciation, as shown in Figure 12-2. Pressing the **WARNING** Softkey acknowledges the presence of the warning alert and stops the aural tone, if applicable.
- **CAUTION:** This level of alert indicates the existence of abnormal conditions on the aircraft that may require pilot intervention. A caution alert is accompanied by an annunciation in the Annunciation Window and, if applicable, a single aural tone. Caution text appearing in the Annunciation Window is YELLOW. A caution alert is also accompanied by a flashing **CAUTION** Softkey annunciation, as shown in Figure 12-3. Pressing the **CAUTION** Softkey acknowledges the presence of the caution alert.
- **ADVISORY:** This level of alert provides general information to the pilot. An advisory is also accompanied by a flashing **ADVISORY** Softkey annunciation, as shown in Figure 12-4. Pressing the **ADVISORY** Softkey acknowledges the presence of the message advisory alert and displays the alert text message in the Alerts Window.

Figure 12-2 WARNING Softkey Annunciation

Figure 12-3 CAUTION Softkey Annunciation

Figure 12-4 ADVISORY Softkey Annunciation

12.2 AIRCRAFT ALERTS

The following alerts are configured specifically for the Piper PA32 aircraft. See the Pilot's Operating Handbook for information regarding pilot responses.

WARNING Alerts

Annunciation Window Text	Alerts Window Message	Audio Alert
OIL PRES LO	Oil pressure is below 25 psi.	Continuous Aural Tone
OIL PRES HI	Oil pressure is above 115 psi.	
ALTNTR INOP	No output from main alternator.	
NO STBY ALT	No output from standby alternator.	
STARTER ENGD	Starter is engaged.	
ESS BUS LOW	Essential bus voltage is less than 24.5V.	
EMER BAT LOW	Emergency battery is voltage is low.	

CAUTION Alerts

Annunciation Window Text	Alerts Window Message	Audio Alert
BAGGAGE DOOR	Baggage door is open.	Single Aural Tone
AIR COND DR	Air conditioning door is open.	
EMER BAT LOW	Emergency battery state of charge less than 75 percent.	
PITOT FAIL	Pitot heat is inoperative.	
PITOT OFF	Pitot heat is off.	
FLAPS	Flap position and flap setting do not agree.	
SHED LOAD	Shed electrical load. (Issued again 5 minutes after initially displayed and acknowledged.)	

Annunciation Advisory

Annunciation Window Text	Alerts Window Message	Audio Alert
STBY ALT ON	Standby alternator on.	None
DISPLAY FAN	The cooling fan for the display is inoperative.	
AVIONICS FAN	The cooling fan for the remote avionics is inop.	
EMER BAT NC	The emergency battery is not charging.	
AIR COND DR	Air conditioning door is operating properly.	
ADF FAN	The ADF cooling fan is inoperative. (Only available when ADF is installed.)	

12.3 TAWS ALERTS

Annunciations appear on the PFD and MFD. Pop-up alerts appear only on the MFD.

Alert Type	PFD/MFD TAWS Page Annunciation	MFD Map Page Pop-Up Alert	Aural Message
Excessive Descent Rate Warning (EDR)	PULL UP	PULL-UP	"Pull Up"
Reduced Required Terrain Clearance Warning (RTC)	PULL UP	TERRAIN - PULL-UP or TERRAIN AHEAD - PULL-UP	"Terrain, Terrain; Pull Up, Pull Up" or "Terrain Ahead, Pull Up; Terrain Ahead, Pull Up"
Imminent Terrain Impact Warning (ITI)	PULL UP	TERRAIN AHEAD - PULL-UP or TERRAIN - PULL-UP	Terrain Ahead, Pull Up; Terrain Ahead, Pull Up" or "Terrain, Terrain; Pull Up, Pull Up"
Reduced Required Obstacle Clearance Warning (ROC)	PULL UP	OBSTACLE - PULL-UP or OBSTACLE AHEAD - PULL-UP	"Obstacle, Obstacle; Pull Up, Pull Up" or "Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up"
Imminent Obstacle Impact Warning (IOI)	PULL UP	OBSTACLE AHEAD - PULL-UP or OBSTACLE - PULL-UP	"Obstacle Ahead, Pull Up; Obstacle Ahead, Pull Up" or "Obstacle, Obstacle; Pull Up, Pull Up"
Reduced Required Terrain Clearance Caution (RTC)	TERRAIN	CAUTION - TERRAIN or TERRAIN AHEAD	"Caution, Terrain; Caution, Terrain" or "Terrain Ahead; Terrain Ahead"
Imminent Terrain Impact Caution (ITI)	TERRAIN	TERRAIN AHEAD or CAUTION - TERRAIN	"Terrain Ahead; Terrain Ahead" or "Caution, Terrain; Caution, Terrain"
Reduced Required Obstacle Clearance Caution (ROC)	TERRAIN	CAUTION - OBSTACLE or OBSTACLE AHEAD	"Caution, Obstacle; Caution, Obstacle" or "Obstacle Ahead; Obstacle Ahead"
Imminent Obstacle Impact Caution (IOI)	TERRAIN	OBSTACLE AHEAD or CAUTION - OBSTACLE	"Obstacle Ahead; Obstacle Ahead" or "Caution, Obstacle; Caution, Obstacle"
Premature Descent Alert Caution (PDA)	TERRAIN	TOO LOW - TERRAIN	"Too Low, Terrain"
Altitude Callout "500"	None	None	"Five-Hundred"
Excessive Descent Rate Caution (EDR)	TERRAIN	SINK RATE	"Sink Rate"
Negative Climb Rate Caution (NCR)	TERRAIN	DON'T SINK or TOO LOW - TERRAIN	"Don't Sink" or "Too Low, Terrain"

TAWS System Status Annunciations

Alert Type	PFD/MFD TAWS Page Annunciation	MFD Pop-Up Alert	Aural Message
TAWS System Test Fail	TAWS FAIL	None	"TAWS System Failure"
TAWS Alerting is disabled	TAWS INHB	None	None
No GPS position or excessively degraded GPS signal	TAWS N/A	None	"TAWS Not Available" "TAWS Availble" will be heard when sufficient GPS signal is re-established.
System Test in progress	TAWS TEST	None	None
System Test pass	None	None	"TAWS System Test OK"

12.4 OTHER G1000 AURAL ALERTS

Aural Alert	Description
"Minimums, minimums"	The aircraft has descended below the preset barometric minimum descent altitude.
"Traffic"	The Traffic Information Service (TIS) has issued a Traffic Advisory alert.
"Traffic not available"	The aircraft is outside the Traffic Information Service (TIS) coverage area.

12.5 G1000 SYSTEM MESSAGE ADVISORIES

This section describes various G1000 system message advisories. Certain messages are issued due to an LRU function failure. Such messages are normally accompanied by a corresponding red 'X' annunciation as shown previously in the G1000 System Annunciation section. System messages are displayed in the Alerts Window.

NOTE: *This section provides information regarding G1000 message advisories that may be displayed by the system. Knowledge of the aircraft, systems, flight conditions, and other existing operational priorities must be considered when responding to a message. Always use sound pilot judgment. The Piper PA32 Pilot's Operating Handbook (POH) takes precedence over any conflicting guidance found in this section.*

A red 'X' may be the result of an LRU or an LRU function failure. The Figure 12-5 illustrates all possible flags and the responsible LRUs.

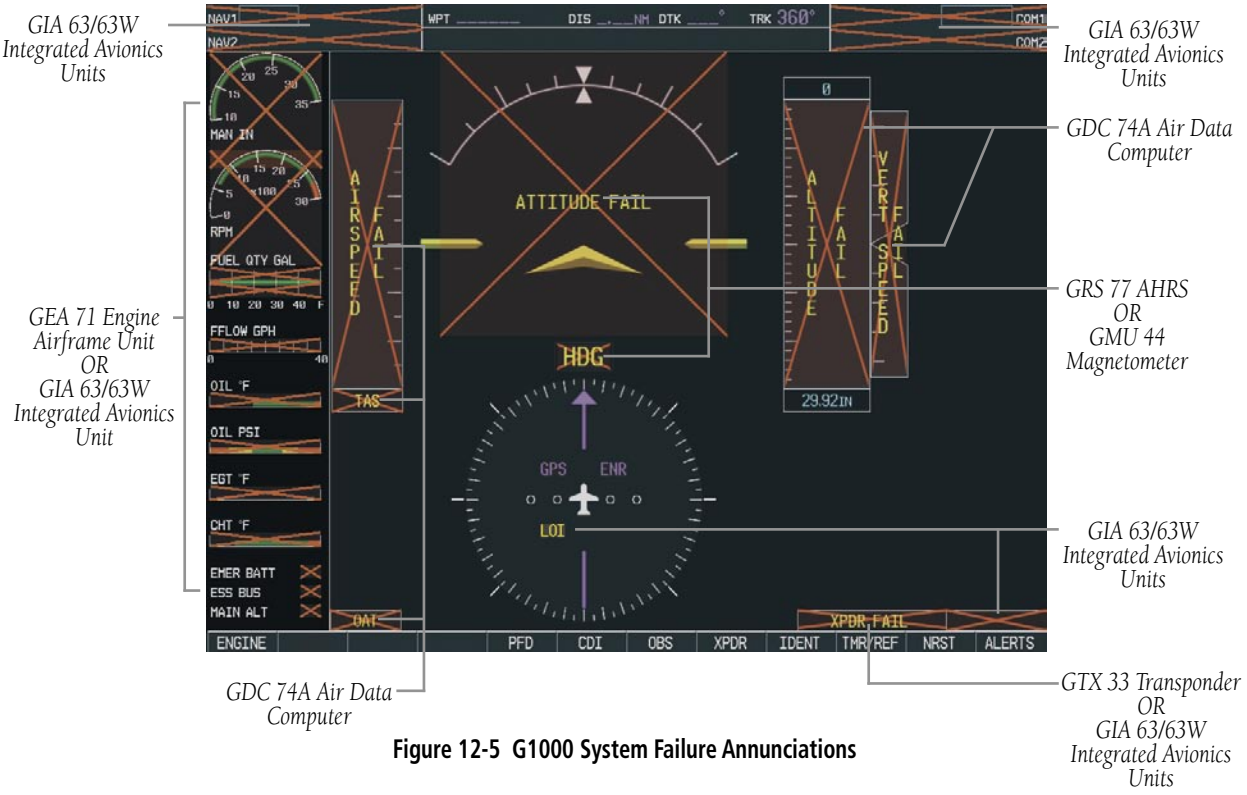

Figure 12-5 G1000 System Failure Annunciations

System Annunciation	Comment
	Attitude and Heading Reference System is aligning.
	Display system is not receiving attitude information from the AHRS.

System Annunciation	Comment
	Indicates a configuration module failure.
	This annunciation will only be seen when the autopilot is engaged. The annunciation indicates an AHRS monitor has detected an abnormal flight parameter, possibly caused by strong turbulence. In this case, the situation should correct itself within a few seconds. If there is an actual failure, a red "X" will soon appear over the Attitude Indicator.
	Display system is not receiving airspeed input from air data computer.
	Display is not receiving altitude input from the air data computer.
	Display is not receiving vertical speed input from the air data computer.
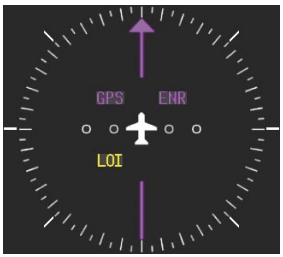	When 'LOI' is displayed, GPS information is either not present or is invalid for navigation use. Note that AHRS utilizes GPS inputs during normal operation. AHRS operation may be degraded if GPS signals are not present (see POH).

System Annunciation	Comment
	Display is not receiving valid heading input from AHRS.
	Display is not receiving valid transponder information.
Other Various Red X Indications	A red 'X' through any other display field, such as engine instrumentation fields, indicates that the field is not receiving valid data.

Message Advisory Alerts

Alerts Window Message	Audio Alert
PFD FAN FAIL – The cooling fan for the PFD is inoperative.	None
MFD FAN FAIL – The cooling fan for the MFD is inoperative.	
GIA FAN FAIL – The cooling fan for the GIAs is inoperative.	

MFD & PFD Message Advisories

Message	Comments
DATA LOST – Pilot stored data was lost. Recheck settings.	The pilot profile data was lost. System reverts to default pilot profile and settings. The pilot may reconfigure the MFD & PFD with preferred settings, if desired.
XTALK ERROR – A flight display crosstalk error has occurred.	The MFD and PFD are not communicating with each other. The G1000 system should be serviced.
PFD1 SERVICE – PFD1 needs service. Return unit for repair.	The PFD and/or MFD self-test has detected a problem. The G1000 system should be serviced.
MFD1 SERVICE – MFD1 needs service. Return unit for repair.	
MANIFEST – PFD1 software mismatch. Communication halted.	The PFD and/or MFD has incorrect software installed. The G1000 system should be serviced.
MANIFEST – MFD1 software mismatch. Communication halted.	
PFD1 CONFIG – PFD1 configuration error. Config service req'd.	The PFD configuration settings do not match backup configuration memory. The G1000 system should be serviced.
MFD1 CONFIG – MFD1 configuration error. Config service req'd.	The MFD configuration settings do not match backup configuration memory. The G1000 system should be serviced.
SW MISMATCH – GDU software version mismatch. Xtalk is off.	The MFD and PFD have different software versions installed. The G1000 system should be serviced.

MFD & PFD Message Advisories (Cont.)

Message	Comments
PFD1 COOLING – PFD1 has poor cooling. Reducing power usage.	The PFD and/or MFD is overheating and is reducing power consumption by dimming the display. If problem persists, the G1000 system should be serviced.
MFD1 COOLING – MFD1 has poor cooling. Reducing power usage.	
PFD1 "KEY" KEYSTK – Key is stuck.	A key is stuck on the PFD and/or MFD bezel. Attempt to free the stuck key by pressing it several times. The G1000 system should be serviced if the problem persists.
MFD1 "KEY" KEYSTK – Key is stuck.	
CNFG MODULE – PFD1 configuration module is inoperative.	The PFD1 configuration module backup memory has failed. The G1000 system should be serviced.
PFD1 VOLTAGE – PFD1 has low voltage. Reducing power usage	The PFD and/or MFD voltage is low. The G1000 system should be serviced.
MFD1 VOLTAGE – MFD1 has low voltage. Reducing power usage	

Database Message Advisories

Message	Comments
MFD1 DB ERR – MFD1 aviation database error exists.	The MFD and/or PFD detected a failure in the aviation database. Attempt to reload the aviation database. If problem persists, the G1000 system should be serviced.
PFD1 DB ERR – PFD1 aviation database error exists.	
MFD1 DB ERR – MFD1 basemap database error exists.	The MFD and/or PFD detected a failure in the basemap database.
PFD1 DB ERR – PFD1 basemap database error exists.	
MFD1 DB ERR – MFD1 terrain database error exists.	The MFD and/or PFD detected a failure in the terrain database. Ensure that the terrain card is properly inserted. Replace terrain card. If problem persists, the G1000 system should be serviced.
PFD1 DB ERR – PFD1 terrain database error exists.	
MFD1 DB ERR – MFD1 obstacle database error exists.	The MFD and/or PFD detected a failure in the obstacle database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the G1000 system should be serviced.
PFD1 DB ERR – PFD1 obstacle database error exists.	

Database Message Advisories (Cont.)

Message	Comments
MFD1 DB ERR – MFD1 airport terrain database error exists.	The MFD and/or PFD detected a failure in the airport terrain database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the G1000 system should be serviced.
PFD1 DB ERR – PFD1 airport terrain database error exists.	
MFD1 DB ERR – MFD1 SafeTaxi database error exists.	The MFD and/or PFD detected a failure in the Safe Taxi database. Ensure that the data card is properly inserted. Replace data card. If problem persists, the G1000 system should be serviced.
PFD1 DB ERR – PFD1 SafeTaxi database error exists.	
MFD1 DB ERR – MFD1 Chartview database error exists.	The MFD and/or PFD detected a failure in the ChartView database (optional feature). Ensure that the data card is properly inserted. Replace data card. If problem persists, the G1000 system should be serviced.
MFD1 DB ERR – MFD1 FliteCharts database error exists.	The MFD and/or PFD detected a failure in the FliteCharts database (optional feature). Ensure that the data card is properly inserted. Replace data card. If problem persists, the G1000 system should be serviced.
DB MISMATCH – Aviation database version mismatch. Xtalk is off.	The PFD and MFD have different aviation database versions installed. Crossfill is off. Install correct aviation database version in both displays.
DB MISMATCH – Aviation database type mismatch. Xtalk is off.	The PFD and MFD have different aviation database types installed (Americas, European, etc.). Crossfill is off. Install correct aviation database type in both displays.
DB MISMATCH – Terrain database version mismatch. Xtalk is off.	The PFD and MFD have different terrain database versions installed. Crossfill is off. Install correct terrain database version in both displays.
DB MISMATCH – Terrain database type mismatch. Xtalk is off.	The PFD and MFD have different terrain database types installed. Crossfill is off. Install correct terrain database type in both displays.
DB MISMATCH – Obstacle database version mismatch. Xtalk is off	The PFD and MFD have different obstacle database versions installed. Crossfill is off. Install correct obstacle database version in both displays.
DB MISMATCH – Airport Terrain database mismatch. Xtalk is off	The PFD and MFD have different airport terrain databases installed. Crossfill is off. Install correct airport terrain database in both displays.

GMA 1347 Message Advisories

Message	Comments
GMA1 FAIL – GMA1 is inoperative.	The audio panel self-test has detected a failure. The audio panel is unavailable. The G1000 system should be serviced.
GMA1 CONFIG – GMA1 configuration error. Config service req'd.	The audio panel configuration settings do not match backup configuration memory. The G1000 system should be serviced.
MANIFEST – GMA1 software mismatch. Communication halted.	The audio panel has incorrect software installed. The G1000 system should be serviced.
GMA1 SERVICE – GMA1 needs service. Return unit for repair.	The audio panel self-test has detected a problem in the unit. Certain audio functions may still be available, and the audio panel may still be usable. The G1000 system should be serviced when possible.

GIA 63W Message Advisories

Message	Comments
GIA1 CONFIG – GIA1 configuration error. Config service req'd.	The GIA1 and/or GIA2 configuration settings do not match backup configuration memory. The G1000 system should be serviced.
GIA2 CONFIG – GIA2 configuration error. Config service req'd.	
GIA1 CONFIG – GIA1 audio config error. Config service req'd.	The GIA1 and/or GIA2 have an error in the audio configuration. The G1000 system should be serviced.
GIA2 CONFIG – GIA2 audio config error. Config service req'd.	
GIA1 COOLING – GIA1 temperature too low.	The GIA1 and/or GIA2 temperature is too low to operate correctly. Allow units to warm up to operating temperature.
GIA2 COOLING – GIA2 temperature too low.	
GIA1 COOLING – GIA1 over temperature.	The GIA1 and/or GIA2 temperature is too high. If problem persists, the G1000 system should be serviced.
GIA2 COOLING – GIA2 over temperature.	
GIA1 SERVICE – GIA1 needs service. Return the unit for repair.	The GIA1 and/or GIA2 self-test has detected a problem in the unit. The G1000 system should be serviced.
GIA2 SERVICE – GIA2 needs service. Return the unit for repair.	

GIA 63W Message Advisories (Cont.)

Message	Comments
HW MISMATCH – GIA hardware mismatch. GIA1 communication halted.	A GIA mismatch has been detected, where only one is WAAS capable.
HW MISMATCH – GIA hardware mismatch. GIA2 communication halted.	
MANIFEST – GIA1 software mismatch. Communication halted.	The GIA1 and/or GIA 2 has incorrect software installed. The G1000 system should be serviced.
MANIFEST – GIA2 software mismatch. Communication halted.	
COM1 TEMP – COM1 over temp. Reducing transmitter power.	The system has detected an over temperature condition in COM1 and/or COM2. The transmitter will operate at reduced power. If the problem persists, the G1000 system should be serviced.
COM2 TEMP – COM2 over temp. Reducing transmitter power.	
COM1 SERVICE – COM1 needs service. Return unit for repair.	The system has detected a failure in COM1 and/or COM2. COM1 and/or COM2 may still be usable. The G1000 system should be serviced when possible.
COM2 SERVICE – COM2 needs service. Return unit for repair.	
COM1 PTT – COM1 push-to-talk key is stuck.	The COM1 and/or COM2 external push-to-talk switch is stuck in the enable (or "pressed") position. Press the PTT switch again to cycle its operation. If the problem persists, the G1000 system should be serviced.
COM2 PTT – COM2 push-to-talk key is stuck.	
COM1 RMT XFR – COM1 remote transfer key is stuck.	The COM1 and/or COM2 transfer switch is stuck in the enabled (or "pressed") position. Press the transfer switch again to cycle its operation. If the problem persists, the G1000 system should be serviced.
COM2 RMT XFR – COM2 remote transfer key is stuck.	
LOI – GPS integrity lost. Crosscheck with other NAVS.	GPS integrity is insufficient for the current phase of flight.
GPS NAV LOST – Loss of GPS navigation. Insufficient satellites.	Loss of GPS navigation due to insufficient satellites.
GPS NAV LOST – Loss of GPS navigation. Position error.	Loss of GPS navigation due to position error.

GIA 63W Message Advisories (Cont.)

Message	Comments
GPS NAV LOST – Loss of GPS navigation. GPS fail.	Loss of GPS navigation due to GPS failure.
ABORT APR – Loss of GPS navigation. Abort approach.	Abort approach due to loss of GPS navigation.
APR DWNGRADE – Approach downgraded. Use LNAV minima.	Use LNAV minima when approach is downgraded.
TRUE APR – True north approach. All angles are TRUE.	Displayed after passing the first waypoint of a true north approach when the nav angle is set to 'AUTO'.
GPS1 SERVICE – GPS1 needs service. Return unit for repair.	A failure has been detected in the GPS1 and/or GPS2 receiver. The receiver may still be available. The G1000 system should be serviced.
GPS2 SERVICE – GPS2 needs service. Return unit for repair.	
NAV1 SERVICE – NAV1 needs service. Return unit for repair.	A failure has been detected in the NAV1 and/or NAV2 receiver. The receiver may still be available. The G1000 system should be serviced.
NAV2 SERVICE – NAV2 needs service. Return unit for repair.	
NAV1 RMT XFR – NAV1 remote transfer key is stuck.	The remote NAV1 and/or NAV2 transfer switch is stuck in the enabled (or "pressed") state. Press the transfer switch again to cycle its operation. If the problem persists, the G1000 system should be serviced.
NAV2 RMT XFR – NAV2 remote transfer key is stuck.	
G/S1 FAIL – G/S1 is inoperative.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The G1000 system should be serviced.
G/S2 FAIL – G/S2 is inoperative.	
G/S1 SERVICE – G/S1 needs service. Return unit for repair.	A failure has been detected in glideslope receiver 1 and/or receiver 2. The receiver may still be available. The G1000 system should be serviced when possible.
G/S2 SERVICE – G/S2 needs service. Return unit for repair.	

GEA 71 Message Advisories

Message	Comments
GEA1 CONFIG – GEA1 configuration error. Config service req'd.	The GEA1 configuration settings do not match those of backup configuration memory. The G1000 system should be serviced.
MANIFEST – GEA1 software mismatch. Communication halted.	The #1 GEA 71 has incorrect software installed. The G1000 system should be serviced.

GTX 33 Message Advisories

Message	Comments
XPDR1 CONFIG – XPDR1 config error. Config service req'd.	The transponder configuration settings do not match those of backup configuration memory. The G1000 system should be serviced.
MANIFEST – GTX1 software mismatch. Communication halted.	The transponder has incorrect software installed. The G1000 system should be serviced.
XPDR1 SRVC – XPDR1 needs service. Return unit for repair.	The #1 transponder should be serviced when possible.
XPDR1 FAIL – XPDR1 is inoperative.	There is no communication with the #1 transponder.

GRS 77 Message Advisories

Message	Comments
AHRS1 TAS – AHRS1 not receiving airspeed.	The #1 AHRS is not receiving true airspeed from the air data computer. The AHRS relies on GPS information to augment the lack of airspeed. The G1000 system should be serviced.
AHRS1 GPS – AHRS1 using backup GPS source.	The #1 AHRS is using the backup GPS path. Primary GPS path has failed. The G1000 system should be serviced when possible.
AHRS1 GPS – AHRS1 not receiving any GPS information.	The #1 AHRS is not receiving any or any useful GPS information. Check POH limitations. The G1000 system should be serviced.
AHRS1 GPS – AHRS1 not receiving backup GPS information.	The #1 AHRS is not receiving backup GPS information. The G1000 system should be serviced.
AHRS1 GPS – AHRS1 operating exclusively in no-GPS mode.	The #1 AHRS is operating exclusively in no-GPS mode. The G1000 system should be serviced.
AHRS1 SRVC – AHRS1 Magnetic-field model needs update.	The #1 AHRS earth magnetic field model is out of date. Update magnetic field model when practical.

GRS 77 Message Advisories (Cont.)

Message	Comments
GEO LIMITS – AHRS1 too far North/ South, no magnetic compass.	The aircraft is outside geographical limits for approved AHRS operation. Heading is flagged as invalid.
MANIFEST – GRS1 software mismatch. Communication halted.	The #1 AHRS has incorrect software installed. The G1000 system should be serviced.

GMU 44 Message Advisories

Message	Comments
HDG FAULT – AHRS1 magnetometer fault has occurred.	A fault has occurred in the #1 GMU 44. Heading is flagged as invalid. The AHRS uses GPS for backup mode operation. The G1000 system should be serviced.
MANIFEST – GMU1 software mismatch. Communication halted.	The GMU 44 has incorrect software installed. The G1000 system should be serviced.

GDL 69A Message Advisories

Message	Comments
GDL69 CONFIG – GDL 69 configuration error. Config service req'd.	GDL 69 configuration settings do not match those of backup configuration memory. The G1000 system should be serviced.
GDL69 FAIL – GDL 69 has failed.	A failure has been detected in the GDL 69. The receiver is unavailable. The G1000 system should be serviced
MANIFEST – GDL software mismatch. Communication halted.	The GDL 69 has incorrect software installed. The G1000 system should be serviced.

GDC 74A Message Advisories

Message	Comments
ADC1 ALT EC – ADC1 altitude error correction is unavailable.	GDC1 is reporting that the altitude error correction is unavailable.
ADC1 AS EC – ADC1 airspeed error correction is unavailable.	GDC1 is reporting that the airspeed error correction is unavailable.
MANIFEST – GDC1 software mismatch. Communication halted.	The GDC 74A has incorrect software installed. The G1000 system should be serviced.

Miscellaneous Message Advisories

Message	Comments
FPL WPT LOCK – Flight plan waypoint is locked.	Upon power-up, the G1000 system detects that a stored flight plan waypoint is locked. This occurs when an aviation database update eliminates an obsolete waypoint. The flight plan cannot find the specified waypoint and flags this message. This can also occur with user waypoints in a flight plan that is deleted. Remove the waypoint from the flight plan if it no longer exists in any database, OR update the waypoint name/identifier to reflect the new information.
FPL WPT MOVE – Flight plan waypoint moved.	The system has detected that a waypoint coordinate has changed due to a new aviation database update. Verify that stored flight plans contain correct waypoint locations.
TIMER EXPIRD – Timer has expired.	The system notifies the pilot that the timer has expired.
DB CHANGE – Database changed. Verify user modified procedures.	This occurs when a stored flight plan contains procedures that have been manually edited. This alert is issued only after an aviation database update. Verify that the user-modified procedures in stored flight plans are correct and up to date.
DB CHANGE – Database changed. Verify stored airways.	This occurs when a stored flight plan contains an airway that is no longer consistent with the aviation database. This alert is issued only after an aviation database update. Verify use of airways in stored flight plans and reload airways as needed.
FPL TRUNC – Flight plan has been truncated.	This occurs when a newly installed aviation database eliminates an obsolete approach or arrival used by a stored flight plan. The obsolete procedure is removed from the flight plan. Update flight plan with current arrival or approach.
LOCKED FPL – Cannot navigate locked flight plan.	This occurs when the pilot attempts to activate a stored flight plan that contains locked waypoint. Remove locked waypoint from flight plan. Update flight plan with current waypoint.
WPT ARRIVAL – Arriving at waypoint -[xxxx]	Arriving at waypoint [xxxx], where [xxxx] is the waypoint name.
STEEP TURN – Steep turn ahead.	A steep turn is 15 seconds ahead. Prepare to turn.
INSIDE ARSPC – Inside airspace.	The aircraft is inside the airspace.
ARSPC AHEAD – Airspace ahead less than 10 minutes.	Special use airspace is ahead of aircraft. The aircraft will penetrate the airspace within 10 minutes.
ARSPC NEAR – Airspace near and ahead.	Special use airspace is near and ahead of the aircraft position.

Miscellaneous Message Advisories (Cont.)

Message	Comments
ARSPC NEAR – Airspace near – less than 2 nm.	Special use airspace is within 2 nm of the aircraft position.
LEG UNSMOOTH – Flight plan leg will not be smooth.	The approaching flight plan waypoints are too close to allow for smooth turns. Prepare for steep turns ahead and expect noticeable course deviations.
APPR INACTV – Approach is not active.	The system notifies the pilot that the loaded approach is not active. Activate approach when required.
SLCT FREQ – Select appropriate frequency for approach.	The system notifies the pilot to load the approach frequency for the appropriate NAV receiver. Select the correct frequency for the approach.
SLCT NAV – Select NAV on CDI for approach.	The system notifies the pilot to set the CDI to the correct NAV receiver. Set the CDI to the correct NAV receiver.
PTK FAIL – Bad geometry, parallel offset not activated.	Bad parallel track geometry.
PTK FAIL – Invalid leg type, parallel offset not activated.	Invalid leg type for parallel offset.
PTK FAIL – Past IAF, parallel offset not activated.	IAF waypoint for parallel offset has been passed.
UNABLE V WPT – Can't reach current vertical waypoint.	The current vertical waypoint can not be reached within the maximum flight path angle and vertical speed constraints. The system will automatically transition to the next vertical waypoint.
VNV – Unavailable. Unsupported leg type in flight plan.	The lateral flight plan contains a procedure turn, vector, or other unsupported leg type prior to the active vertical waypoint. This will prevent vertical guidance to the active vertical waypoint.
VNV – Unavailable. Excessive crosstrack error.	The current crosstrack exceeds the limit, causing vertical deviation to go invalid.
VNV – Unavailable. Excessive track angle error.	The current track angle error exceeds the limit, causing the vertical deviation to go invalid.
VNV – Unavailable. Parallel course selected.	A parallel course has been selected, causing the vertical deviation to go invalid.
NO WGS84 WPT – Non WGS 84 waypoint for navigation -[xxxx]	The selected waypoint [xxxx] does not use the WGS 84 datum. Cross-check position with alternate navigation sources.
TRAFFIC FAIL – Traffic device has failed.	The G1000 is no longer receiving data from the traffic system. The traffic device should be serviced.

Miscellaneous Message Advisories (Cont.)

Message	Comments
STRMSCP FAIL – Stormscope has failed.	Stormscope has failed. The G1000 system should be serviced.
FAILED PATH – A data path has failed..	A data path connected to the GDU or the GIA 63/W has failed.
MAG VAR WARN – Large magnetic variance. Verify all course angles.	The GDU's internal model cannot determine the exact magnetic variance for geographic locations near the magnetic poles. Displayed magnetic course angles may differ from the actual magnetic heading by more than 2°.
SCHEDULER [#] – <message>.	Message criteria entered by the user.

A

Abnormal COM operation 11-1
Activate a flight plan 8-3
Active flight plan 8-2
ADF 1-5
ADVISORY 12-1
Advisory alerts 12-8
Age 10-6
AHRS 12-6, 12-7, 12-8, 12-14, 12-15
Aircraft alerts 12-3
AIRMET 10-5
Airport frequency 7-26
Airport information 7-22
Airspace alerts 7-30
Airspeed indicator 2-3
Airspeed trend vector 2-3
Airways 8-5
Alerting System 12-1
Alerts 12-1
Alert levels 12-2
Alert Pop-Up 10-14
ALT 1-3, 1-6, 2-4, 7-20, 10-8, 12-3, 12-15
Altitude alerter 2-4
Altitude alerting 2-4
Altitude constraints 1-8, 7-12
Altitude restrictions 1-10
Altitude trend vector 2-4
ALT knob 1-3
Annunciations 12-1
Approaches 9-2
Approach activation 4-4
Approach markers
  Signal augmentation 5-3
Arrivals 9-1
Attitude indicator 2-3
Audio alerting system 12-2
Audio panel 4-3, 5-1
Audio panel controls
  COM 1/2 5-2
Auto-tuning 4-3, 4-4
Automatic squelch 4-3

B

Barometric minimum 2-6, 2-7, 11-2
Base reflectivity 10-4
BKSP softkey 4-5
BRG1 2-10
BRG2 2-10

C

Caution 12-1, 12-2
CDI 1-3, 1-6, 2-9, 2-10, 7-3, 7-6, 7-12, 7-17, 7-21, 9-2, 12-17
Cell 10-2
Cell mode 10-2
Cell movement 10-5
Cloud tops 10-4
CLR key 1-3
Coast mode 10-7
Code selection 4-5
CODE softkey 4-5
COM Frequency Window 4-1
COM knob 4-3
Controls 4-1
Controls (display bezel) 1-2
Create a new user waypoint 8-1
Cyclones 10-5

D

Databases 1-10
Dead Reckoning 2-10, 11-2
Decision height 2-6
Departures 9-1
DH 2-6
Direct-to 1-2, 1-3, 7-1 – 7-5, 7-11, 7-12, 8-9
DME 1-6
DR 2-10, 12-3
DR mode 11-2, 11-3
Dual CDU failure 11-1

E

ECHO TOPS 10-4
Edit a flight plan 8-7
EDR 10-13
Endurance 3-2
Engine display 3-1
ENGINE softkey 3-1
Excessive Descent Rate 10-13

F

Five-Hundred Aural Alert 10-14
Flight ID 4-5
Flight Plan Catalog 9-1, 9-2
FLTA 10-12
Forward Looking Terrain Avoidance 10-12
FPL key 1-3
Freezing level 10-5
Frequency toggle key 1-3, 4-3
Fuel remaining 3-2
Fuel used 3-2

G

Glidepath 2-2, 2-5, 7-20
Glideslope 2-5, 2-6, 7-20
GMA 1347 1-1

H

Heading indication 2-9
Headset(s) 5-3
Horizontal situation indicator 2-8
Hurricanes 10-5

I

ID 4-3
IDENT function 4-5
Imminent Terrain Impact 10-12
Impact point 10-12
Inhibit 10-12
Inhibit TAWS 10-12
Interrogations 4-5

IOI 10-12, 10-13, 10-15, 12-4
ITI 10-12

J

Joystick (bezel) 1-2

K

Key(s) 1-3
  CLR 1-2
  COM Frequency Transfer 1-2
  Direct-to 1-2
  ENT 1-2
  FPL 1-2
  MENU 1-2
  NAV Frequency Transfer 1-2
  PROC 1-2
Knob(s)
  ALT 1-2
  COM 1-2
  COM VOL/SQ 1-2
  CRS/BARO 1-2
  FMS 1-2
  HDG 1-2
  NAV 1-2
  NAV VOL/ID 1-2

L

Lean engine 3-1
Lighted obstacle 10-14
Lightning 1-4, 1-8, 10-2, 10-4
LNAV 2-5, 7-5, 12-13
Load approach 8-6
Load a VOR frequency 7-28
Load departure 8-6
Load the frequency for a controlling agency 7-30
Load the nearest ARTCC frequency 7-29
LOI 2-10
LPV 2-5, 7-5, 7-21

M

MAP 7-1
Map panning 10-5
Marker beacon 2-6
MDA 2-6, 2-7
messages 12-1
Message advisories 12-2, 12-8 – 12-18
METAR 10-3, 10-5
Metric display 2-4
MFD 1-1, 4-4
Minimum descent altitude 2-6
Mixture 3-3
MKR/MUTE 5-2, 5-4
Mode S 1-6, 4-4
Mode selection softkeys 4-5
Morse code identifier 4-3

N

Nav/Com controls 4-1
NAV1 5-3
NAV2 5-3
Navigation 7-1
Navigation database 1-8, 1-9, 7-5
Navigation status window 2-2
NAV Frequency Window 4-1
NCR 10-13
Nearest Airports Page 7-22, 7-2 – 7-30, 8-1
Nearest ARTCC & FSS frequencies 7-29
Negative Climb Rate After Takeoff 10-13
NEXRAD 1-8, 10-3, 10-4, 10-5, 10-6

O

OBS 2-11
Obstacles 10-14, 12-10, 12-12
Operation 5-2
Optional
  NAV radios 4-3

P

Page group icon 1-8
PDA 10-13
PFD 1-1, 4-1, 4-4
PLAY key 5-4
Premature Descent Alert 10-13
PROC key 1-3

R

Remove departure, arrival, or approach 8-6
Replies 4-5
Required Vertical Speed 2-5, 7-16
Required Vertical Speed Indicator 7-16
Reversionary mode 11-1
ROC 10-12, 10-13, 10-15, 12-4
RTC 10-12
RVSI 7-16, 7-17
RX indicator 4-3
R indication 4-5

S

Secure Digital (SD) card 1-10
Severe thunderstorm 10-5
SIGMET 10-5
Slip/Skid indicator 2-3
Softkey function (MFD) 1-4, 1-7
Split COM 5-2
Squelch 5-4
STBY softkey 4-4
Store Flight Plan 8-7
Stormscope lightning data 1-4, 1-8, 10-2
Strike 10-2
Strike mode 10-2
System annunciations 12-2
System message advisories 12-5

T

TA 10-7
TAF 10-3

TAS 10-8, 10-9, 12-14
TAWS 10-10, 10-11, 10-12, 10-14, 10-15, 10-16, 12-4, 12-5
TAWS-B 10-10
TAWS system test 10-12
Terrain 10-9 – 10-12, 10-14, 10-15, 10-16, 11-2, 12-4, 12-10
Terrain proximity 10-9
TIS 10-7
TNA Mute 10-7
TOD 7-16, 7-19
Top of Descent 7-16
Tornado 10-5
Traffic advisory 10-7, 10-8, 10-9, 10-16
Traffic map page 10-7, 10-8, 10-10, 10-14
Transponder 4-4
Transponder standby mode 4-4
Transponder Status bar 4-5
Tropical storms 10-5
Ture airspeed box 2-3
TX 4-3

U

Unlighted obstacle 10-14

V

VDI 7-16, 7-17
Vertical Descent Indicator 7-16
Vertical Deviation 2-2, 2-5
Vertical deviation guidance 1-9
Vertical flight path 10-12
Vertical navigation 1-8, 1-9, 1-10
Vertical speed 2-6
vertical speed guidance 1-9
VHF 4-1
VNV 1-8, 1-9, 1-10, 2-5, 7-1, 7-2, 7-3, 7-4, 7-16, 11-2, 12-17
VOL/PUSH ID 4-2
VOL/PUSH SQ 4-2, 4-3
Volume/squelch 5-4
VSI 7-17

W

WAAS 2-5, 7-5, 12-12
WARN 2-10
Warning 12-1, 12-2
Weather data link page 10-4
Weather product symbol 10-5
Weather product symbols 10-6
Weather warnings 10-5
Wind data 2-7
Wind direction 10-5
Wind speed 10-5

X

XM weather 10-3, 10-4
XPDR softkey 4-4, 4-5

Blank Page

GARMIN

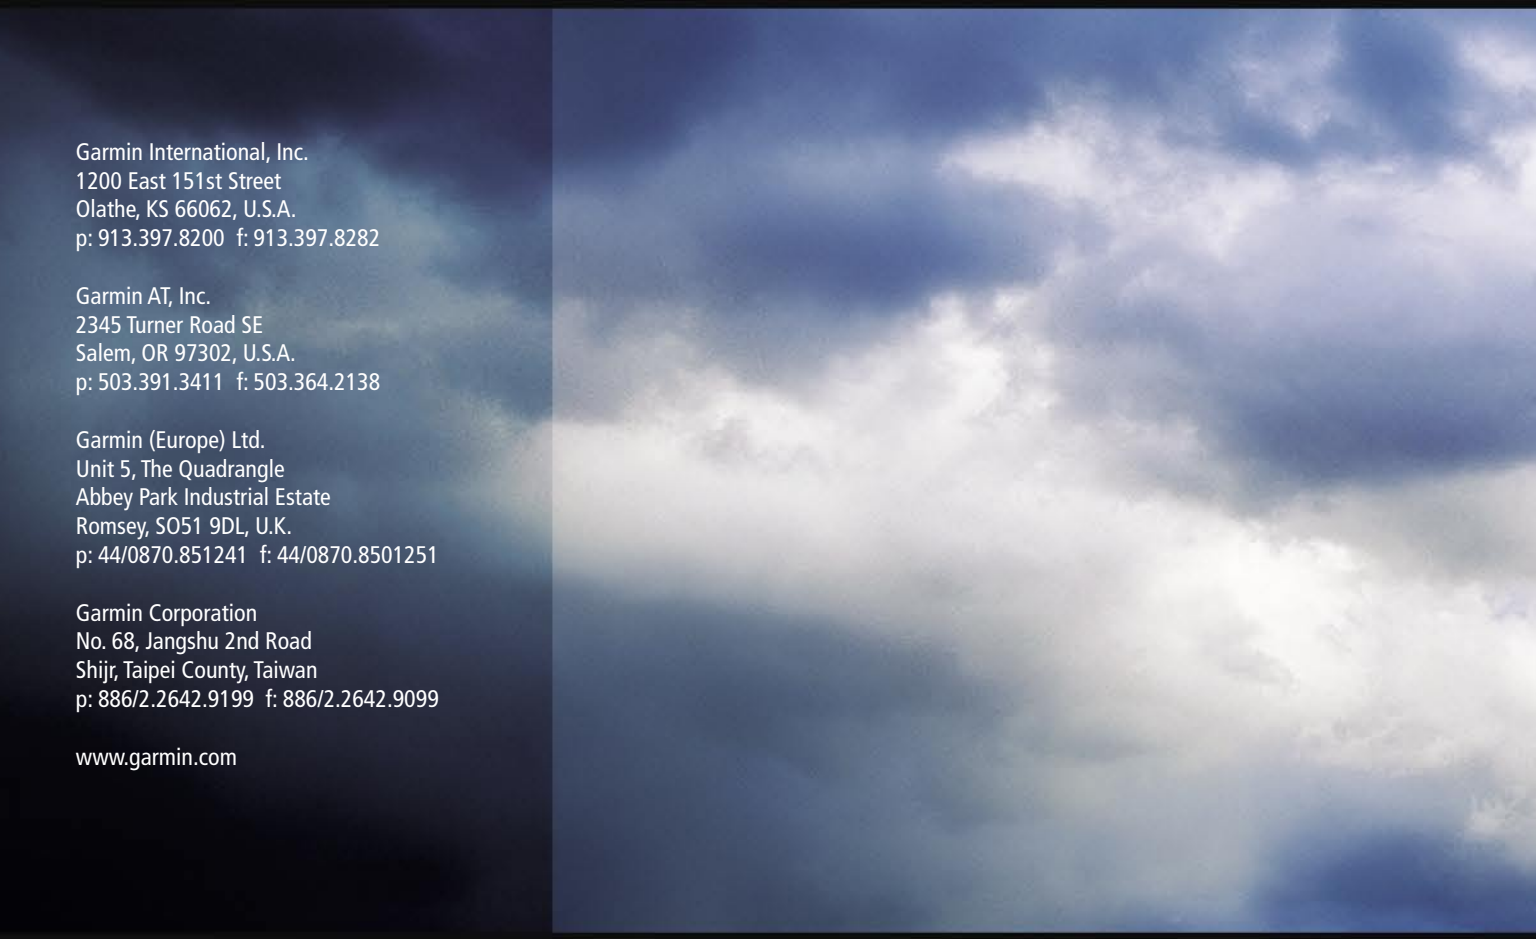

Garmin International, Inc.
1200 East 151st Street
Olathe, KS 66062, U.S.A.
p: 913.397.8200 f: 913.397.8282

Garmin AT, Inc.
2345 Turner Road SE
Salem, OR 97302, U.S.A.
p: 503.391.3411 f: 503.364.2138

Garmin (Europe) Ltd.
Unit 5, The Quadrangle
Abbey Park Industrial Estate
Romsey, SO51 9DL, U.K.
p: 44/0870.851241 f: 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road
Shijr, Taipei County, Taiwan
p: 886/2.2642.9199 f: 886/2.2642.9099

www.garmin.com

190-00416-01 Rev. C

© 2004-2007 Garmin Ltd. or its subsidiaries